Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Fisher-Price HYL00

Fisher-Price Sync Squad Tiger Interactive Toy Instruction Manual

Model: HYL00

Introduction

The Fisher-Price Sync Squad Tiger is an interactive learning toy designed to engage babies and toddlers aged 9 months to 3 years. This toy introduces fundamental concepts such as body parts, the alphabet, and colors through a variety of over 50 songs, sounds, and phrases. The tiger features a light-up microphone and a head that moves rhythmically, enhancing the interactive experience. Children can also record and play back their own voice messages, which the tiger integrates into its musical performances. For extended play and learning, the Sync Squad Tiger can interact with other Sync Squad toys (sold separately), lighting up and singing together.



Image: Fisher-Price Sync Squad Tiger in its retail packaging.

Setup

Battery Installation

The Sync Squad Tiger requires 4 AA alkaline batteries. These batteries are included with the product. Follow these steps to install or replace the batteries:

1. Locate the battery compartment on the back or bottom of the toy.

2. Using a Phillips head screwdriver, loosen the screw on the battery compartment cover and remove the cover.
3. Insert 4 new AA alkaline batteries, ensuring the positive (+) and negative (-) terminals are oriented correctly as indicated inside the compartment.
4. Replace the battery compartment cover and tighten the screw securely.

Powering On

After battery installation, locate the power switch, usually on the back or bottom of the toy. Slide the switch to the "ON" position to activate the toy.

Operating Instructions

Basic Interaction

The Sync Squad Tiger responds to touch on various parts of its body. Press the designated areas on its hands, tummy, or feet to activate different songs, sounds, and phrases. The tiger's head will bop, and its microphone will light up in sync with the audio.



Image: A child interacting with the Sync Squad Tiger, demonstrating how pressing its parts activates music and lights.

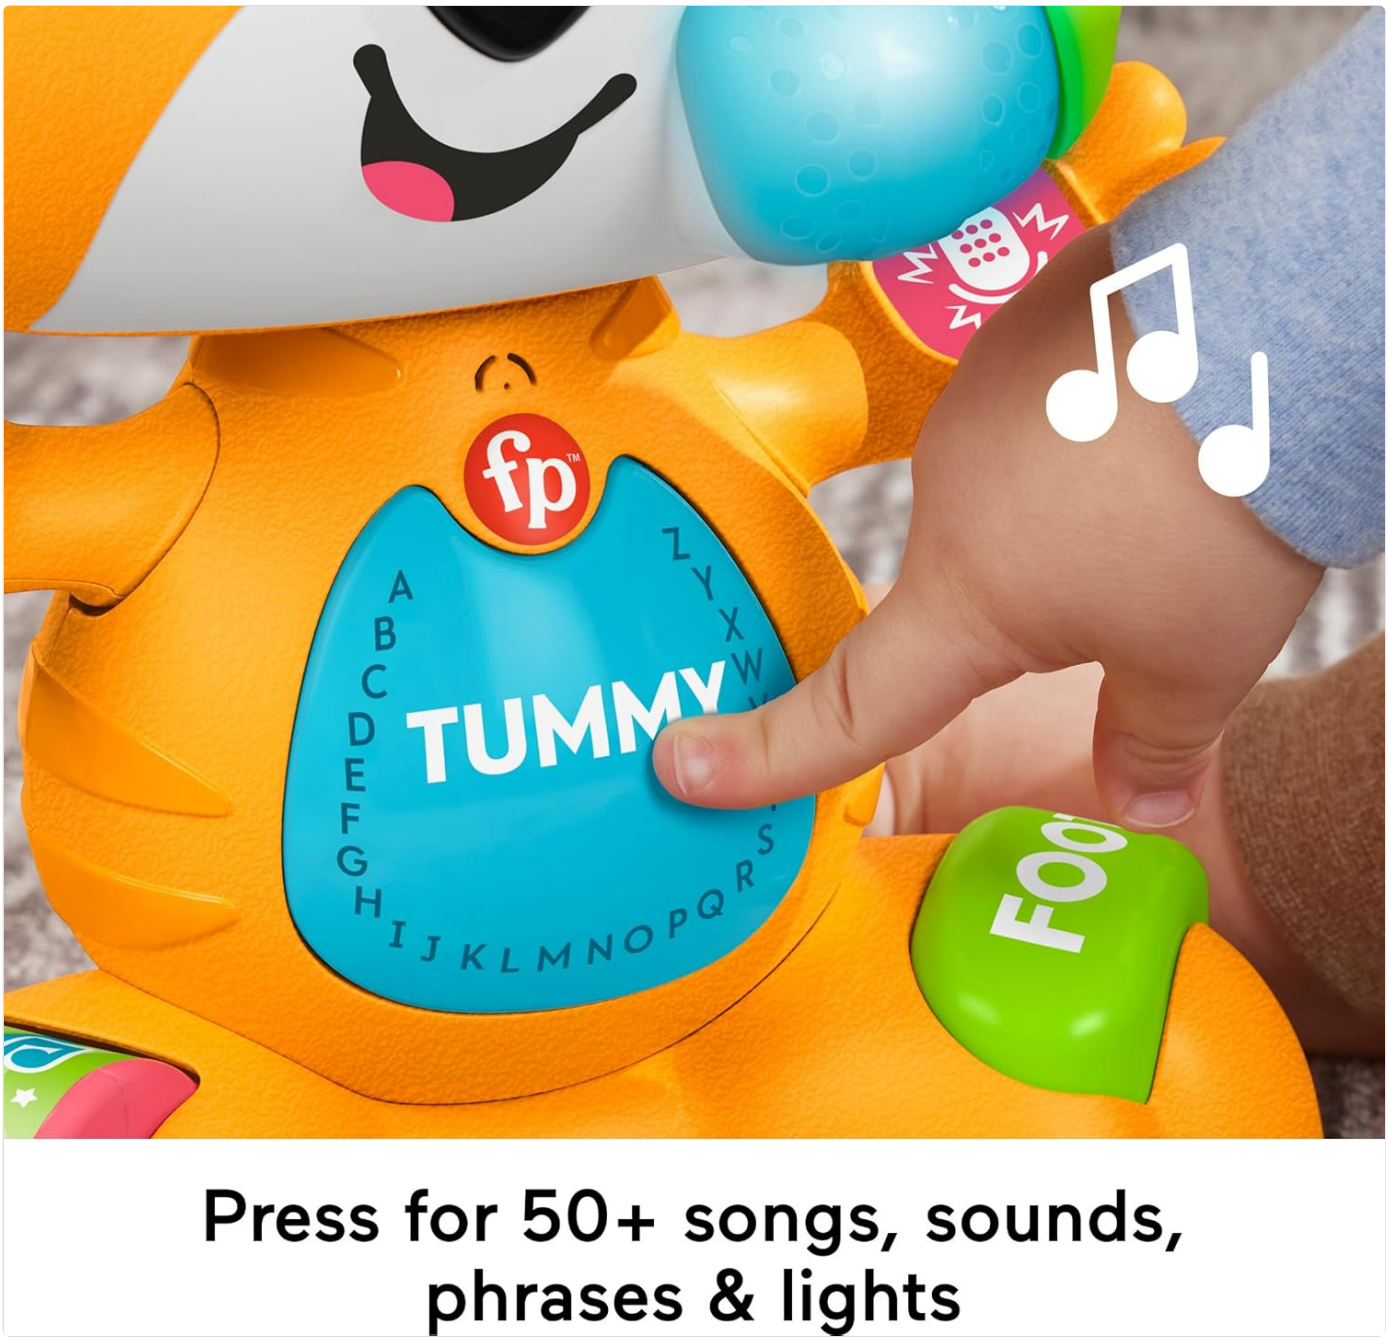


Image: Close-up of the tiger's tummy being pressed, highlighting the interactive buttons for sounds and lights.

Recording and Playback

The Sync Squad Tiger includes a recording feature. Locate the microphone button, typically on one of its hands. Press and hold this button to record a short message. Release the button to stop recording. The tiger will then play back your message, often incorporating it into its songs or sounds.



Image: A child activating the recording function on the Sync Squad Tiger.

Sync Squad Interaction

The Sync Squad Tiger is designed to interact with other Fisher-Price Sync Squad toys (each sold separately). When multiple Sync Squad toys are in close proximity and activated, they will light up and sing together, creating a synchronized musical experience. This feature encourages collaborative play and expands learning opportunities.



Image: An illustration of multiple Sync Squad toys interacting, highlighting their synchronized features.

Maintenance

Cleaning

To clean the Sync Squad Tiger, wipe the surface with a slightly damp cloth. Do not immerse the toy in water or use harsh cleaning agents, as this may damage the electronic components.

Storage

When not in use for extended periods, store the toy in a cool, dry place away from direct sunlight. It is recommended to remove the batteries if the toy will not be used for several months to prevent battery leakage.

Troubleshooting

- **No Sound or Lights:**

- Check if the power switch is in the "ON" position.
- Ensure batteries are correctly installed with proper polarity.
- Replace old or depleted batteries with new AA alkaline batteries.

- **Incorrect or Intermittent Function:**
  - Remove and reinsert the batteries to reset the toy.
  - Ensure the toy is clean and free from obstructions around buttons or sensors.

- **Sync Squad Interaction Issues:**
  - Ensure all interacting Sync Squad toys have fresh batteries and are powered on.
  - Place the toys closer to each other to ensure proper communication.
  - Verify that the other toys are indeed part of the Fisher-Price Sync Squad series.

Specifications

Feature	Detail
Model Number	HYL00
Brand	Fisher-Price
Recommended Age	9 months - 3 years
Dimensions (L x W x H)	50.8 x 50.8 x 50.8 cm (20 x 20 x 20 inches)
Weight	1.02 Kilograms (2.25 lbs)
Batteries	4 AA Alkaline (included)
Material Type	Plastic
Educational Objective	Body part detection, alphabet detection, color recognition, causal thinking ability
Theme	Animal (Tiger)

Warranty Information

Warranty information for the Fisher-Price Sync Squad Tiger (Model HYL00) is not available in the provided product data. Please refer to the product packaging or the official Fisher-Price website for details regarding warranty coverage and terms.

Support

For further assistance, product inquiries, or to view additional support resources, please visit the official Fisher-Price website. You may also find contact information for customer service on the product packaging.
Official Fisher-Price Website: www.fisher-price.com

© 2026 Fisher-Price. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CPG8W135

More documents and user manuals: **https://manuals.plus/**