Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ALLIMITY CV-996580004176-SH

User Manual for ALLIMITY Replacement Remote Control

Model: CV-996580004176-SH

1. Introduction

This manual provides instructions for the ALLIMITY Replacement Remote Control, designed to be compatible with various Philips Sound Bar models. This remote serves as a direct replacement for your original or broken remote control, offering seamless functionality without the need for complex setup or programming.
Compatible Philips Sound Bar models include: 996580004176, RT996580004176, HTL1177B/F7, HTL1170BF7, HTL1177BF7, HTL1170B/F7, HTL1177B, HTL1170B.

2. Setup

2.1 Battery Installation

The remote control requires **one (1) 1.5V AAA battery** for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert one (1) AAA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 2.1: Rear view of the remote control with the battery cover removed, illustrating the battery insertion process. Note: Only one AAA battery is required for operation, despite the compartment appearing to accommodate two.

Once the battery is correctly installed, the remote control is ready for use with your compatible Philips Sound Bar.

3. Operating Instructions

This replacement remote control provides all essential functions for your Philips Sound Bar. Point the remote control directly at the sound bar's infrared receiver for optimal performance.

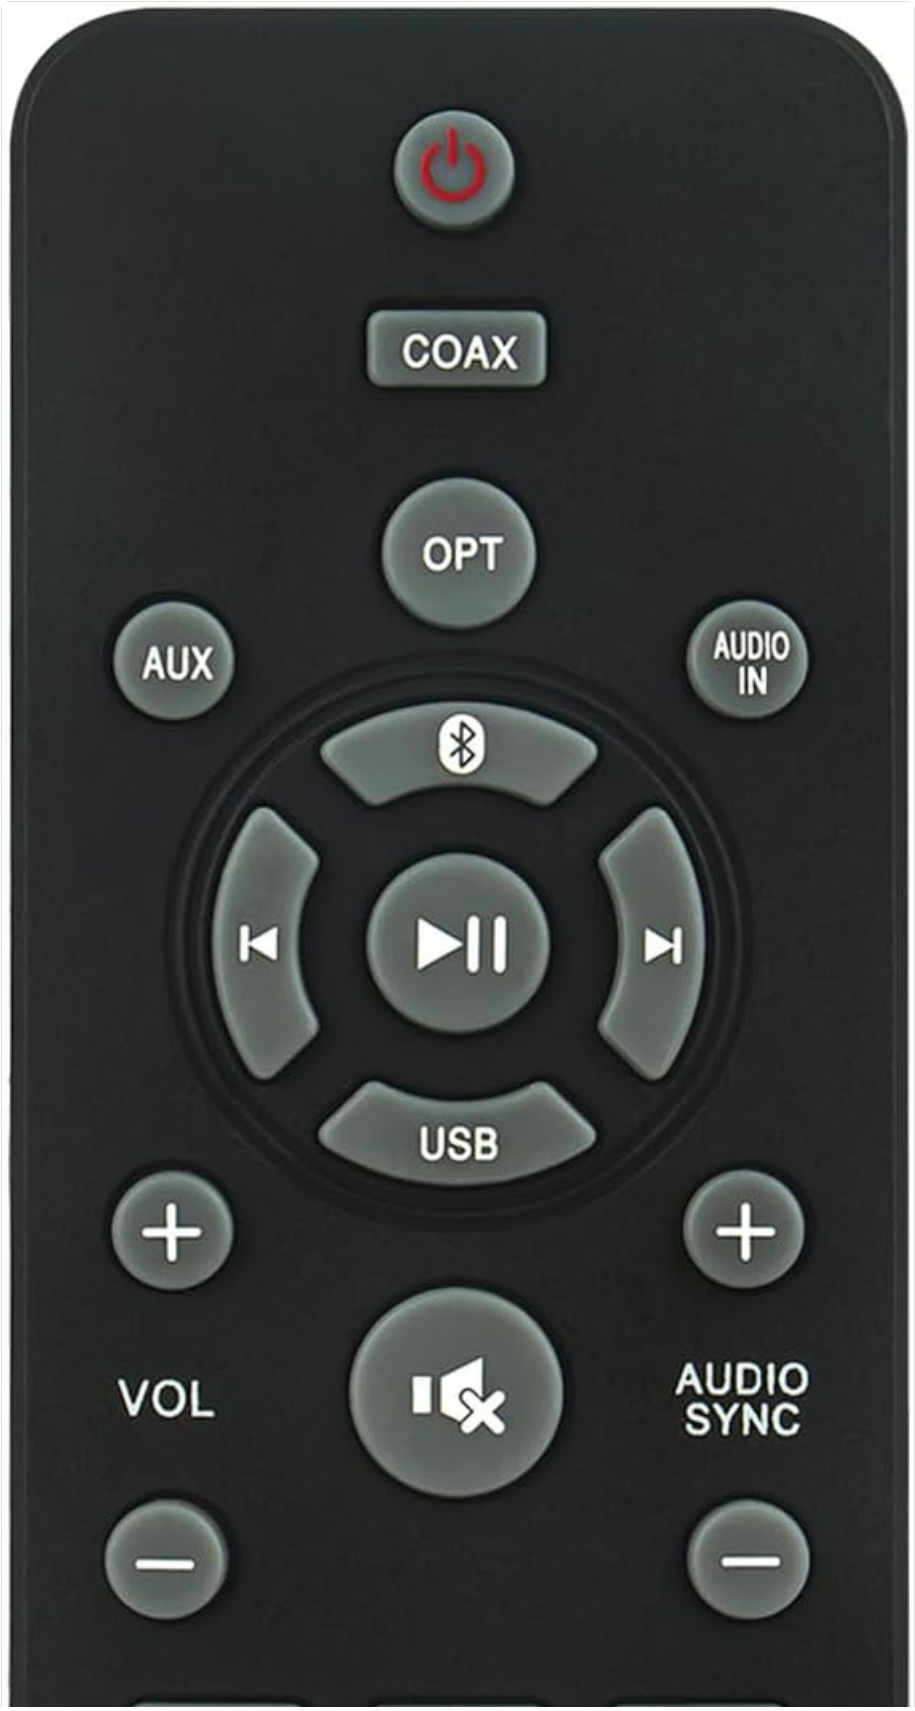




Figure 3.1: Front view of the ALLIMITY Replacement Remote Control, highlighting the layout of its various function buttons.

3.1 Button Functions

- **Power** (●): Turns the sound bar on or off.
- **COAX**: Selects Coaxial digital audio input.
- **OPT**: Selects Optical digital audio input.
- **AUX**: Selects Auxiliary audio input.
- **AUDIO IN**: Selects general audio input.
- **Bluetooth** ( ): Activates Bluetooth pairing mode or selects Bluetooth input.
- **USB**: Selects USB input for media playback.
- **Playback Controls** ( ): Play/Pause, Skip Forward, Skip Backward for media playback.
- **VOL (+/-)**: Increases or decreases the master volume.
- **Mute** ( ): Mutes or unmutes the sound.
- **AUDIO SYNC (+/-)**: Adjusts audio synchronization.
- **BASS (+/-)**: Increases or decreases bass levels.
- **SURR (+/-)**: Adjusts surround sound effect levels.
- **TREBLE (+/-)**: Increases or decreases treble levels.
- **NIGHT**: Activates or deactivates Night Mode for reduced dynamic range.

4. Maintenance

4.1 Cleaning the Remote Control

To maintain the remote control's appearance and functionality, clean it regularly:

- Use a soft, dry cloth to wipe the surface of the remote control.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Ensure no liquid enters the remote control.
- Avoid using harsh chemicals, solvents, or abrasive cleaning agents, as these can damage the remote's finish or internal components.

4.2 Battery Replacement

Replace the battery when the remote control's response becomes sluggish or it stops functioning. Refer to Section 2.1 for battery installation instructions. Always use new 1.5V AAA alkaline batteries for optimal performance and to prevent leakage.

5. Troubleshooting

If you experience issues with your ALLIMITY Replacement Remote Control, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote control is not working.	Batteries are dead or incorrectly inserted.	Replace with new 1.5V AAA batteries, ensuring correct polarity (+/-).
Remote control range is poor.	Obstruction between remote and sound bar; low battery.	Ensure a clear line of sight to the sound bar's IR receiver. Replace batteries if they are old.
Specific buttons are not responding.	Button malfunction or sound bar incompatibility.	Verify the remote is compatible with your specific sound bar model. Clean the remote surface. If issues persist, the remote may be faulty.
Sound bar does not respond to any command.	Sound bar is off or in standby; sound bar's IR receiver is blocked.	Ensure the sound bar is powered on. Check for any obstructions in front of the sound bar's IR receiver.

6. Specifications

Feature	Detail
Product Dimensions	6.5 x 1.38 x 0.72 inches
Item Weight	1.59 ounces
Model Number	CV-996580004176-SH
Manufacturer	ALLIMITY
Special Feature	Wireless (Infrared)
Color	Black
Max Number of Supported Devices	1
Compatible Devices	Television (specifically Philips Sound Bars)
Power Supply	1 x 1.5V AAA Battery (not included)

7. Warranty and Support

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the manufacturer directly. As a replacement remote control, specific warranty terms may vary.
Manufacturer: ALLIMITY

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CPJ5J9L5

More documents and user manuals: **https://manuals.plus/**