Stanley SXPW19B

Stanley SXPW19B 1900W Cold Water Pressure Washer User Manual

Model: SXPW19B

Introduction

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your Stanley SXPW19B 1900W Cold Water Pressure Washer. Please read this manual thoroughly before using the appliance and keep it for future reference.

The Stanley SXPW19B is designed for cleaning various outdoor surfaces around the home, including garden paths, balconies, terraces, swimming pools, garden furniture, bicycles, motorcycles, and cars. It is effective at removing stubborn dirt.

Important Safety Information

Always follow basic safety precautions to reduce the risk of fire, electric shock, and personal injury. Failure to do so may result in serious injury or property damage.

- Read all instructions before using the pressure washer.
- Do not direct the water jet at people, animals, electrical equipment, or the appliance itself.
- Ensure the power supply matches the voltage specified on the product label.
- Always wear appropriate personal protective equipment, such as safety glasses and gloves.
- Keep children and pets away from the operating area.
- Never operate the pressure washer with damaged cords or hoses.
- Disconnect from the power supply before performing any maintenance or cleaning.

Package Contents

Verify that all items are present and in good condition:

- Stanley SXPW19B Pressure Washer Unit
- Locking Spray Gun
- High-Pressure Lance

- 6-meter High-Pressure Hose
- Rotary Nozzle (for stubborn dirt, moss, and encrustations)
- Adjustable Nozzle (for varying water jet from cylindrical to fan spray)
- 0.4-liter Foam Cleaning Kit (for attachment to the spray gun)
- Inspectable Water Inlet Filter



Image: Stanley SXPW19B Pressure Washer with its included accessories, including the spray gun, lance, hose, and foam kit.

Setup and Assembly

1. **Unpacking:** Carefully remove all components from the packaging.
2. **Wheel Assembly:** Attach the two 17.5 cm diameter wheels to the main unit if not pre-assembled.

3. **Handle Attachment:** Secure the anti-slip handle to the main unit.
4. **High-Pressure Hose Connection:** Connect the 6-meter high-pressure hose to the pressure washer unit and to the spray gun. Ensure connections are secure. The static hose reel allows for easy winding and storage of the high-pressure hose after use.
5. **Nozzle Attachment:** Select the desired nozzle (rotary or adjustable) and attach it to the high-pressure lance. Then, attach the lance to the spray gun.
6. **Water Supply Connection:**
    - **Direct Tap Connection:** Connect a standard garden hose (not supplied) to a water tap and then to the quick connector on the pressure washer's water inlet. Ensure the inspectable filter is in place to prevent impurities from entering the pump.
    - **Automatic Suction Function (from tank):** If a direct tap connection is not possible, the SXPW19B can draw water from a tank. Ensure the tank is positioned correctly and the suction hose is properly connected to the pressure washer's inlet.
7. **Power Connection:** Plug the 5-meter power cord into a suitable electrical outlet.



Image: Close-up view of the high-pressure hose connection point on the Stanley SXPW19B pressure washer.



Image: User attaching the spray gun and lance assembly to the high-pressure hose of the Stanley SXPW19B.



Image: The Stanley SXPW19B pressure washer with the foam cleaning kit attached to the spray gun, ready for detergent application.



Image: Diagram illustrating the automatic suction function, where the pressure washer draws water from an external tank.

Operating Instructions

1. **Prepare the Water Supply:** Ensure the water tap is fully open or the suction hose is correctly placed in the water tank.
2. **Purge Air from System:** Before turning on the power, squeeze the trigger on the spray gun to allow water to flow through the system and expel any trapped air. Continue until a steady stream of water emerges.
3. **Power On:** Turn the ON/OFF rotary button to the "ON" position. The pressure washer is now ready for use.
4. **Adjust Nozzle:** If using the adjustable nozzle, rotate it to select the desired spray pattern (cylindrical for concentrated cleaning, fan for wider coverage).

5. **Apply Detergent (Optional):** If using the foam cleaning kit, fill it with appropriate pressure washer detergent. Attach it to the spray gun and apply detergent to the surface before rinsing.
6. **Cleaning:** Hold the spray gun firmly and direct the water jet towards the surface to be cleaned. Maintain a safe distance to avoid damage to the surface.
7. **Power Off:** After use, turn the ON/OFF rotary button to the "OFF" position.
8. **Release Residual Pressure:** Squeeze the trigger on the spray gun to release any remaining pressure in the system.
9. **Disconnect:** Disconnect the power cord and water supply.





Image: Front view of the Stanley SXPW19B pressure washer, showing the main unit and controls.

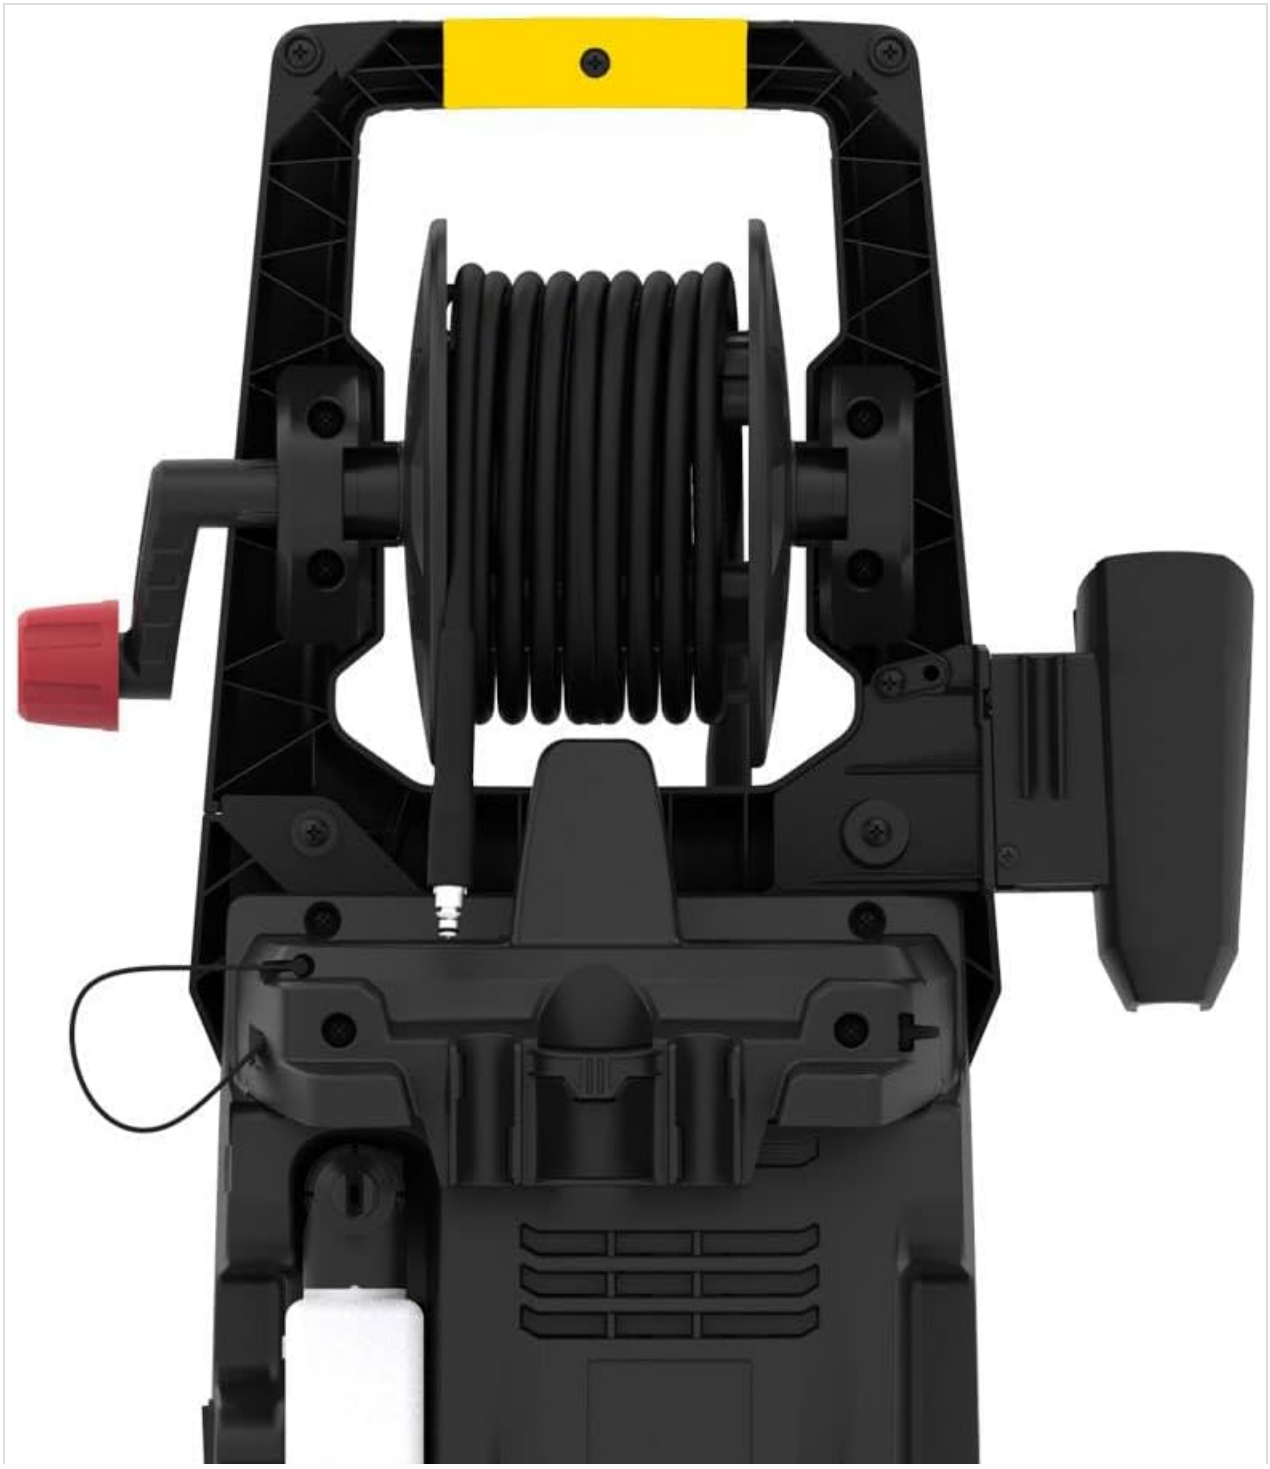




Image: Side view of the Stanley SXPW19B pressure washer, highlighting its compact design and wheels for transport.



Image: Back view of the Stanley SXPW19B pressure washer, showing the hose reel and accessory storage.



Image: The Stanley SXPW19B pressure washer actively cleaning a patio surface, demonstrating the powerful water jet.

Maintenance and Storage

- **Cleaning:** After each use, clean the exterior of the pressure washer with a damp cloth. Do not use harsh chemicals.
- **Water Inlet Filter:** Regularly inspect and clean the water inlet filter to prevent blockages and ensure optimal performance.
- **Nozzle Cleaning:** Clear any blockages in the nozzles using the provided nozzle cleaning tool (if included) or a thin wire.
- **Hose and Cord Storage:** Use the integrated static hose reel to neatly store the high-pressure hose. The 5-meter power cord also has integrated storage.
- **Winter Storage:** If storing in an area where temperatures may drop below freezing, drain all water from the pump,

hoses, and spray gun to prevent damage from freezing. Run an anti-freeze solution through the pump for added protection.

- **Accessory Storage:** Utilize the integrated accessory storage on the unit to keep all components organized.

Troubleshooting

Problem	Possible Cause	Solution
No power	Power cord unplugged, circuit breaker tripped, ON/OFF switch off.	Check power connection, reset circuit breaker, turn ON/OFF switch to "ON".
No water pressure	Water supply off, clogged water inlet filter, air in the pump, kinked hose.	Ensure water supply is on, clean filter, purge air from system (see Operating Instructions), straighten hose.
Pulsating pressure	Air in the pump, restricted water supply, clogged nozzle.	Purge air from system, check water supply, clean nozzle.
Water leaks	Loose connections, damaged O-rings.	Tighten all connections, inspect and replace O-rings if damaged.

If you encounter issues not listed here or if the problem persists after attempting the solutions, please contact Stanley customer support.

Technical Specifications

Feature	Specification
Model Number	SXPW19B
Power Absorbed	1900 W
Maximum Pressure	150 bar
Maximum Flow Rate	440 l/h
Maximum Water Inlet Temperature	50 °C
High-Pressure Hose Length	6 meters
Power Cord Length	5 meters
Product Dimensions (L x W x H)	28 x 25.3 x 70.5 cm
Item Weight	10.7 Kilograms
Power Source	Corded Electric
Foam Cleaning Kit Volume	0.4 Liters
Maximum Liquid Volume (General)	4 Liters
Color	Black and Yellow
Certifications	CE

Warranty and Support

For warranty information, technical support, or to inquire about spare parts, please refer to the documentation included with your purchase or visit the official Stanley website. Keep your proof of purchase for warranty claims.

Manufacturer: Annovi Reverberi spa

© 2025 Stanley. All rights reserved.
This manual is for informational purposes only. Specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question