Irene House 9188

Irene House 9188 Lift Chair Recliner Instruction Manual

Model: 9188

1. Introduction

Thank you for choosing the Irene House 9188 Lift Chair Recliner. This electric recliner is designed to provide comfort and support, featuring a dual-motor system for independent control of the backrest and footrest, a lay-flat sleeping position, and integrated heat and massage functions. This manual provides essential information for assembly, operation, maintenance, and troubleshooting to ensure safe and optimal use of your new recliner.



Image 1.1: The Irene House 9188 Lift Chair Recliner in cream faux leather.

2. Safety Information

Please read all safety warnings and instructions carefully before using the recliner. Failure to follow these instructions may result in injury or damage to the product.

- Ensure all power cords are securely connected and routed to prevent tripping hazards or damage.
- Do not allow children or pets to play on or around the recliner, especially during operation.
- Keep hands and feet clear of the reclining mechanism to avoid pinching.
- The massage and heat functions are designed with an automatic shut-off feature for safety, typically after about 15 minutes of continuous use.
- Do not use the recliner if any part is damaged or appears to be malfunctioning. Contact customer support immediately.
- Avoid spilling liquids on the recliner, especially near electrical components.
- Do not exceed the maximum weight capacity of 300 lbs (136 kg).
- For electrical safety, consider using a quality surge protector, especially in areas prone to power fluctuations.

3. Package Contents

Your Irene House 9188 Lift Chair Recliner typically ships in two boxes, which may arrive separately. Please verify all components are present before beginning assembly.

- Chair Base
- Backrest
- Left Armrest
- Right Armrest
- Power Adapter and Cord
- Hand Remote Control (for lift/recline)
- Massage/Heat Remote Control
- Lumbar Pillow (if included with specific model variant)
- Assembly Instructions

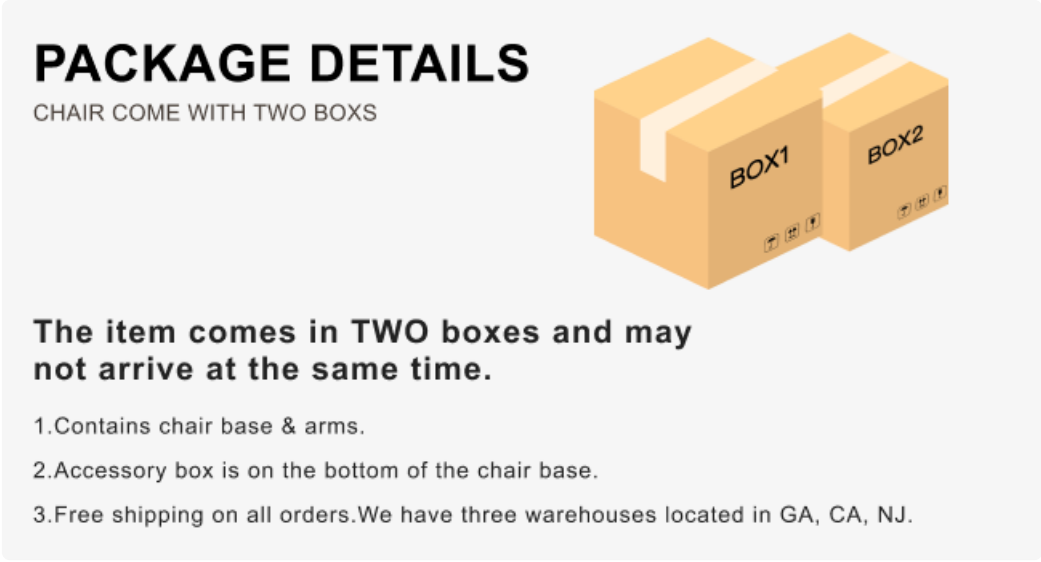


Image 3.1: The recliner components are typically shipped in two separate boxes.

4. Setup and Assembly

Assembly of the Irene House 9188 recliner is designed to be quick and straightforward, typically taking about 15 minutes. It is recommended to have a second person assist with the assembly due to the weight of some components.

1. **Unpack Components:** Carefully remove all parts from the packaging. The accessory box is usually located at the bottom of the chair base.
2. **Attach Backrest:** Slide the backrest onto the metal posts on the chair base until it clicks securely into place. The removable backrest design facilitates easier transport through doorways.
3. **Install Armrests:** Attach the left and right armrests to the corresponding sides of the chair. Ensure they are correctly oriented (e.g., LSF for Left Side Facing, RSF for Right Side Facing).
4. **Connect Wiring:** Locate the color-coded electrical connectors. Match and securely plug in all corresponding wires for the motors, heat, and massage functions.
5. **Secure Wires:** Use the integrated Velcro strips to neatly secure any exposed wires beneath the chair. This enhances safety and prevents damage.
6. **Connect Power:** Plug the power adapter into the chair's power input, then plug the power cord into a wall outlet.



Image 4.1: Secure exposed wires using the provided Velcro strips for safety and aesthetics.

5. Operating Instructions

Your Irene House 9188 recliner features a dual-motor system for independent control of the backrest and footrest, along with integrated massage and heating functions.

5.1. Lift and Recline Functions (Main Remote)

The main hand remote controls the chair's lift and recline positions.

- **To Recline:** Press and hold the appropriate button to move the backrest backward and extend the footrest. The dual motors allow independent adjustment, enabling a full 180° lay-flat position.
- **To Lift/Stand Assist:** Press and hold the button to gently lift the chair, assisting the user to a standing position.
- **To Return to Upright:** Press and hold the button to retract the footrest and bring the backrest to the upright sitting position.



Image 5.1: The dual motor system allows independent adjustment of the backrest and footrest, including a 180° lay-flat position.



Image 5.2: The recliner in its full 180° lay-flat position.

5.2. Massage and Heating Functions (Secondary Remote)

A separate remote controls the four-point vibration massage and lumbar heating features.

- **Massage:** Select from 8 adjustable modes and 3 vibration intensities. The massage targets the backrest area.
- **Lumbar Heating:** Activate the heating function for soothing warmth in the lumbar region.
- **Timer:** Both functions have adjustable timer settings and will automatically shut off after approximately 15 minutes for safety.



Image 5.3: The secondary remote controls the four-point vibration massage and lumbar heating.

6. Maintenance and Care

Proper care will extend the life and appearance of your Irene House recliner.

- **Cleaning:** For the faux leather upholstery, wipe clean with a damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Spills:** Blot spills immediately with a clean, dry cloth. Do not rub.
- **Frame Inspection:** Periodically check all bolts and connections to ensure they are tight. Do not overtighten.
- **Electrical Components:** Keep electrical cords and components dry and free from obstruction.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause the faux leather to fade or crack.

7. Troubleshooting

If you encounter issues with your recliner, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Chair does not recline or lift.	Power cord disconnected; remote control issue; motor malfunction.	Check all power connections. Ensure the outlet is working. Inspect remote control for damage. If issues persist, contact customer support.
Massage/Heat functions not working.	Secondary remote disconnected; automatic shut-off activated; wiring issue.	Ensure the massage/heat remote is properly connected. Wait for the automatic shut-off timer to reset. Check for loose wiring.
Unusual noises during operation.	Loose bolts; obstruction in mechanism; motor issue.	Inspect for loose bolts and tighten if necessary. Check for any objects obstructing the reclining mechanism. If noise persists, contact support.
Gap between seat and back when reclined.	Normal design characteristic; padding shift.	This can be a design characteristic. A lumbar pillow or additional cushioning may be used for comfort if desired.
Feeling the frame through the upholstery.	Padding shift; wear and tear.	Attempt to redistribute padding by gently massaging the affected area. If the issue is significant or due to manufacturing defect, contact customer support.


8. Specifications


Feature	Detail
Brand	Irene House
Model Name	9188
Color	Cream Fauxleather
Product Dimensions	38.5"D x 33"W x 42.5"H
Seat Depth	20.4 inches
Size	Medium
Back Style	Solid Back
Special Feature	Arm Rest, Cushion Availability
Product Care Instructions	Wipe Clean
Recommended Uses	Reading, Sleeping
Style	Classic
Pattern	Solid


Feature	Detail
Finish Type	Brushed
Age Range (Description)	Adult
Included Components	Lumbar Pillow, Side Pocket, Arm Rest
Fill Material	Sponge
Reclining Position Count	Infinite (180° Lay Flat)
Weight Capacity	Up to 300 lbs
Frame Material	Reinforced Metal Frame, CARB P2 Certified Solid Wood

DIMENSIONS

IreneHouse

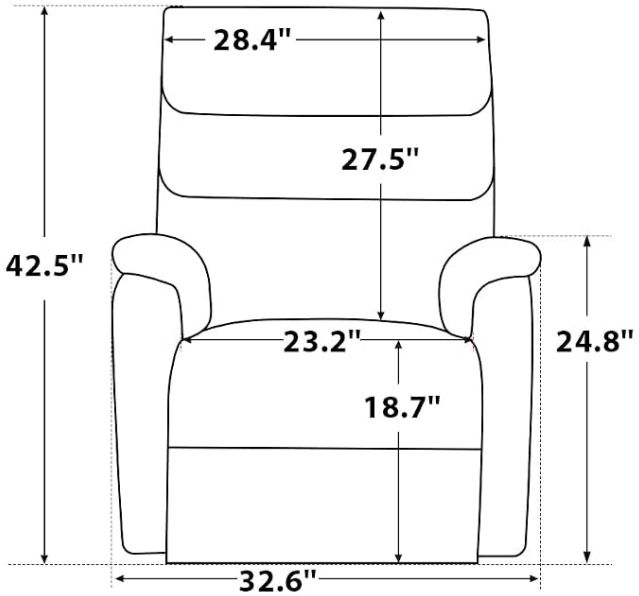

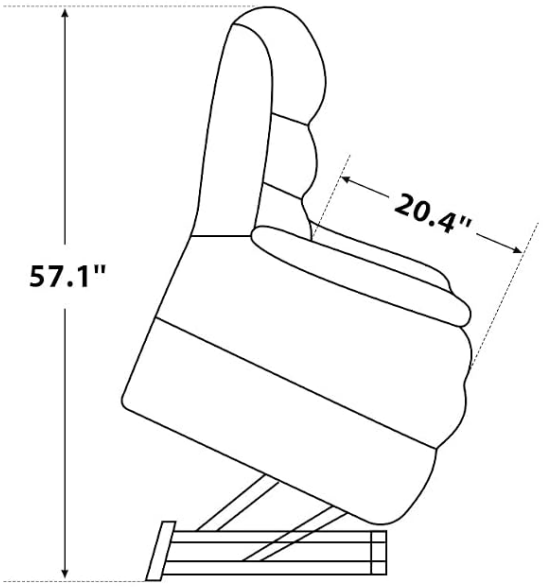

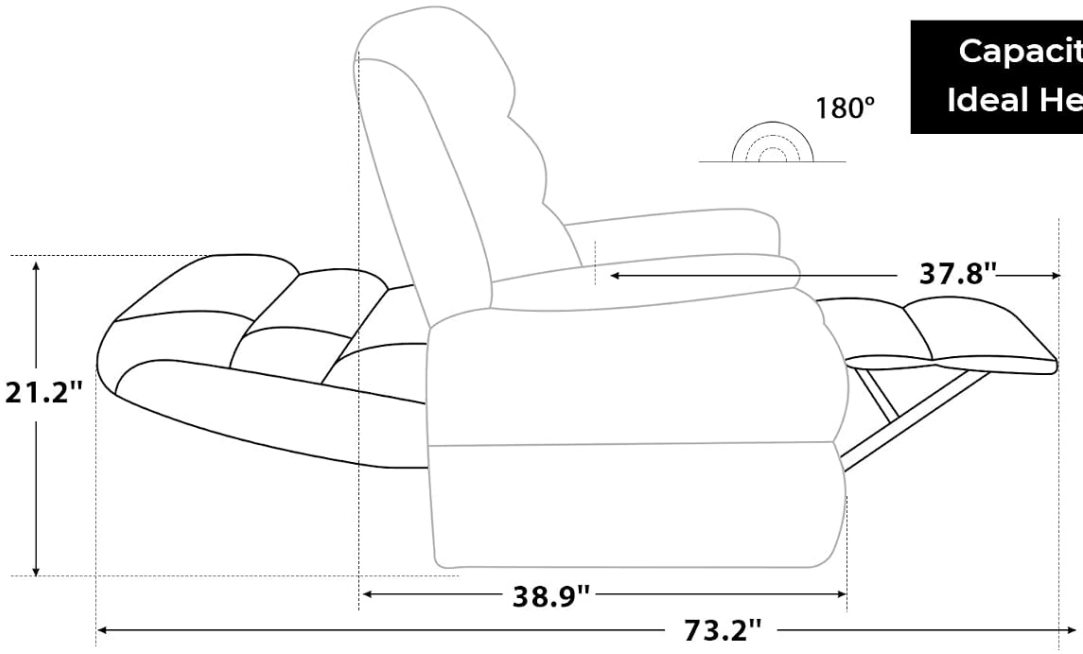

Capacity: 300lbs
Ideal Height: 5'2"-5'9"

Image 8.1: Detailed dimensions of the Irene House 9188 Lift Chair Recliner.

9. Warranty and Support

Irene House is committed to providing high-quality products and excellent customer service.

9.1. Warranty Information

Your Irene House 9188 Lift Chair Recliner is backed by a**2-year warranty**. This warranty covers the motor, frame, and electrical components against manufacturing defects. Please retain your proof of purchase for warranty claims.

9.2. In-Home Repair Service

During the warranty period, Irene House provides an in-home repair service, eliminating the need for you to transport the chair for service.



Image 9.1: In-Home Repair Service is available during the warranty period.

9.3. Return Policy

You are allowed to return or exchange the furniture within 30 days of when you receive it. Please refer to the full return policy on the Irene House official store or contact customer service for details.



Image 9.2: 30-Day Return Policy for furniture.

9.4. Contact Us

For any questions, support, or warranty claims, please contact Irene House customer service:

Email: service@irenehouse.com

Phone: 800-622-8287



Image 9.3: Contact details for Irene House customer support.

© 2024 Irene House. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question