Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Geeni GN-CW066-101

Geeni Vantage WiFi Outdoor Security Camera

User Manual

Introduction

The Geeni Vantage WiFi Outdoor Security Camera provides reliable 1080p HD surveillance for your home, both day and night. Designed for outdoor use with IP65 weather resistance, it features two-way audio, motion detection, night vision, and voice control compatibility with Amazon Alexa and Google Home. This manual will guide you through the setup, operation, and maintenance of your new security camera.



Image: The Geeni Vantage camera shown next to its product packaging, highlighting its sleek black design and key features.

What's Included

Please check the contents of your package. If any items are missing or damaged, contact Geeni customer support.

- 1x Geeni Vantage Camera Body
- 1x Power Adapter
- 1x User Manual (this document)
- Mounting Hardware (screws and anchors)



Image: An illustration detailing the key features of the Geeni Vantage camera, such as 1080p resolution, motion detection, two-way audio, and night vision.

Setup Guide

1. Download the Geeni App

Download the Geeni app from the App Store (for iOS devices) or Google Play Store (for Android devices). Search for "Geeni".

2. Register/Login

Open the Geeni app. If you are a new user, tap "Register" and follow the on-screen instructions to create an account. If you already have an account, log in.

3. Add Device

1. Plug in your Geeni Vantage camera using the provided power adapter. Wait for the indicator light to flash rapidly,

indicating it's ready for pairing.

2. In the Geeni app, tap the "+" icon in the top right corner to add a new device.
3. Select "Camera" from the device list.
4. Follow the in-app instructions to connect the camera to your 2.4GHz Wi-Fi network. Ensure your phone is connected to the same Wi-Fi network.
5. Scan the QR code displayed on your phone screen with the camera lens. You will hear a confirmation sound from the camera once scanned successfully.
6. Once connected, you can name your camera and begin using it.

4. Installation

Choose a suitable location for your camera. The Geeni Vantage is IP65 weatherproof, making it ideal for outdoor installation. Use the included mounting hardware to securely attach the camera to a wall or ceiling. Ensure the camera has a clear line of sight to the area you wish to monitor and is within range of your Wi-Fi signal.



Image: The Geeni Vantage camera is shown being sprayed with water, illustrating its IP65 weatherproof certification.

Operating Instructions

1. Live View & Controls

Once connected, you can access the live video feed from your camera anytime, anywhere, through the Geeni app. The app interface provides controls for recording, taking screenshots, and accessing settings.



Image: A person holding a smartphone displaying the live video feed from the Geeni Vantage camera, showing a delivery person at a doorstep.

2. Two-Way Audio

The camera features a built-in microphone and speaker, enabling two-way communication. Tap the microphone icon in the live view to speak through the camera, and listen to audio from the camera's surroundings.



Image: The Geeni Vantage camera mounted on a blue wall, with a speech bubble next to it asking, "Can you leave the package at the front door?" illustrating its two-way audio capability.

3. Motion Detection & Alerts

The Geeni Vantage camera is equipped with motion detection. You can customize sensitivity settings and set up notifications to receive instant alerts on your smartphone when motion is detected in the camera's field of view.



Image: A close-up of a smartphone screen displaying a notification from the Geeni app: "Human body detected now Geeni VANTAGE camera has detected human body."

4. Night Vision

The camera automatically switches to night vision mode in low-light conditions, providing clear black-and-white video up to 20 feet. This ensures continuous surveillance even in complete darkness.



Image: The Geeni Vantage camera mounted outdoors at night, with its infrared lights visible, demonstrating its night vision capability.

5. Storage Options

The camera supports local storage via a microSD card (up to 128GB, not included) for continuous recording or event-triggered recordings. Cloud storage options may also be available through the Geeni app for subscription-based services.

6. Voice Control Integration

Integrate your Geeni Vantage camera with Amazon Alexa or Google Home for convenient voice control. Once linked, you can use voice commands to view your camera feed on compatible smart displays.



Image: A tablet displaying the live feed from the Geeni Vantage camera, with text bubbles indicating voice commands like "Alexa, show me the outdoor camera."

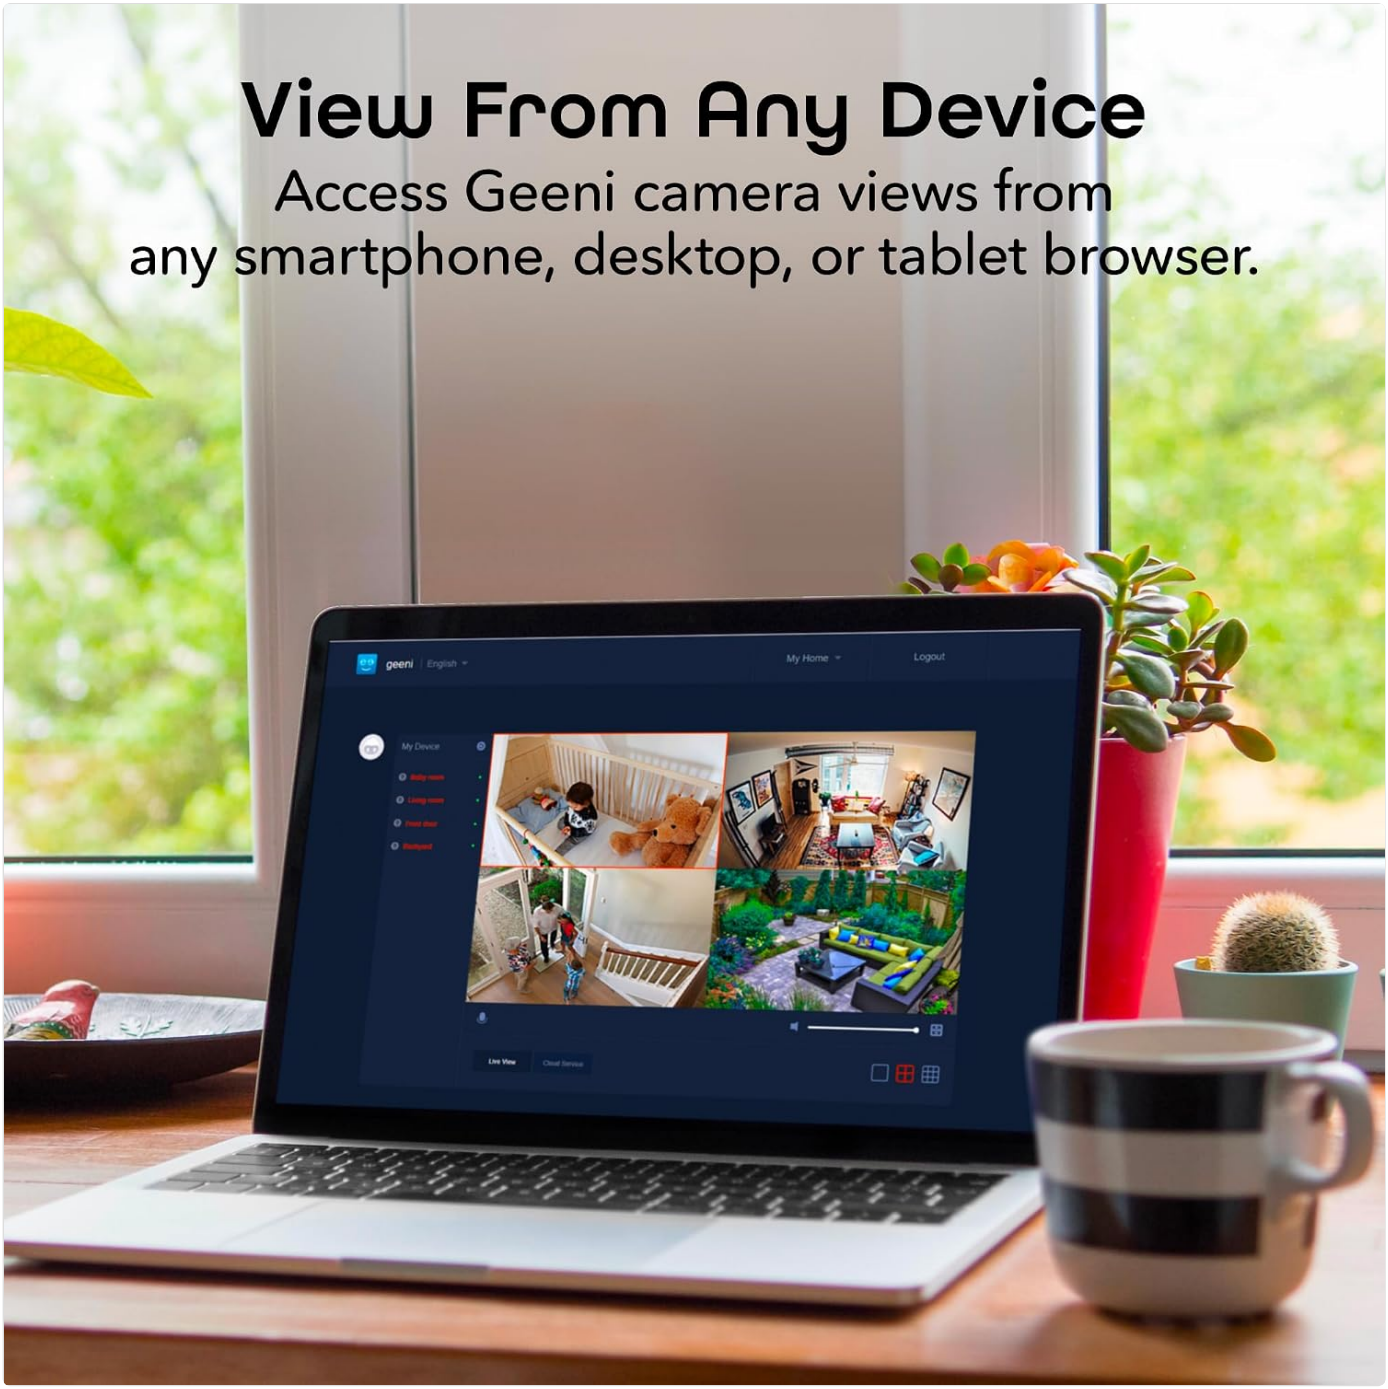


Image: A laptop and a smartphone side-by-side, both displaying multiple live camera feeds from the Geeni app, demonstrating multi-device access.

Maintenance

To ensure optimal performance and longevity of your Geeni Vantage camera:

- **Cleaning:** Periodically wipe the camera lens and body with a soft, damp cloth to remove dust and debris. Avoid using harsh chemicals or abrasive cleaners.
- **Firmware Updates:** Check the Geeni app regularly for firmware updates. Keeping your camera's firmware up-to-date ensures you have the latest features and security enhancements.
- **Power Supply:** Ensure the power adapter and cable are not damaged and are securely connected.

Troubleshooting

Problem	Possible Solution

Problem	Possible Solution
Camera not connecting to Wi-Fi	Ensure your Wi-Fi network is 2.4GHz. The camera does not support 5GHz networks. Check Wi-Fi password for accuracy. Move the camera closer to your Wi-Fi router. Restart your router and the camera.
No live view/offline	Verify the camera is powered on. Check your internet connection. Restart the camera by unplugging and replugging it.
Motion detection not working	Check motion detection settings in the Geeni app (sensitivity, detection zones). Ensure notifications are enabled for the Geeni app on your phone.
Two-way audio issues	Ensure microphone and speaker permissions are granted to the Geeni app on your phone. Check volume settings on your phone and within the app.

Specifications

Model Name: Geeni Vantage

Model Number: GN-CW066-101

Video Capture Resolution: 1080p HD

Indoor/Outdoor Usage: Outdoor, Indoor

Water Resistance Level: IP65 Weatherproof

Connectivity Technology: Wireless (Wi-Fi)

Power Source: Corded Electric

Night Vision Range: 20 Feet

Flash Memory Supported Size Maximum: 128 GB (microSD)

Special Features: Motion Alerts, 2-Way Audio, Night Vision, Weatherproof, Voice Control (Alexa, Google Home)

Dimensions (L x W x H): 4.72 x 3.5 x 22.91 inches

Item Weight: 14.9 ounces

Material: Acrylonitrile Butadiene Styrene (ABS)

Safety Information

Please read and follow these safety guidelines to prevent damage to the product or injury to yourself:

- Do not expose the camera to extreme temperatures or humidity beyond its operating range.
- Use only the provided power adapter. Using unauthorized power sources may damage the device and void the warranty.
- Do not attempt to disassemble or repair the camera yourself. Refer all servicing to qualified personnel.
- Keep the camera and its components out of reach of children and pets.
- Ensure proper ventilation around the camera to prevent overheating.

Warranty and Support

The Geeni Vantage WiFi Outdoor Security Camera comes with a 1-year limited warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use. For warranty claims, technical support, or any questions regarding your product, please visit the official Geeni website or contact their customer service team. Contact information can typically be found on the product packaging or the Geeni app.
For the latest information and support resources, please visit:www.geeni.com

© 2025 Geeni. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CPQBH5N8

More documents and user manuals: **https://manuals.plus/**