Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Kestanlora YDXJ-02

Kestanlora HD 1080P Pet Camera Collar User Manual

Model: YDXJ-02

Product Overview

The Kestanlora HD 1080P Pet Camera Collar (Model YDXJ-02) is a compact, wireless mini sport camera designed for capturing video from your pet's perspective. It features 1080P video recording, a wide-angle lens, and a built-in battery, making it suitable for various outdoor and indoor activities without the need for WiFi connectivity.



Image: The Kestanlora HD 1080P Pet Camera Collar, shown with a dog and cat wearing the device, alongside the various accessories included in the package.

Key Features:

- **HD 1080P Video Recording:** Captures clear, high-definition video.
- **170° Ultra HD Wide Angle Lens:** Provides a broad field of view.
- **Built-in Battery:** For portable and wireless operation.
- **Loop Recording:** Automatically overwrites old footage when storage is full.
- **Electronic Image Stabilization (EIS):** Helps reduce video shake.
- **0.96-inch HD Color Screen:** For preview and playback.
- **Magnetic Attraction:** For secure mounting.



Image: Visual representation of the camera's six main features, including 1080P resolution, color screen, wide-angle lens, built-in battery, loop recording, and electronic image stabilization.

Package Contents

Please verify that all items are present in your package:

- 1 x HD 1080P Pet Camera
- 1 x Back Clip
- 1 x Type-C Reader Adapter
- 1 x USB Charging Cable
- 1 x Silicone Case
- 1 x Pet Collar Attachment



Image: An overhead view of all components included in the product package, such as the camera unit, various mounting accessories, and charging/data transfer cables.

Component Identification

Familiarize yourself with the different parts of your Kestanlora Pet Camera:

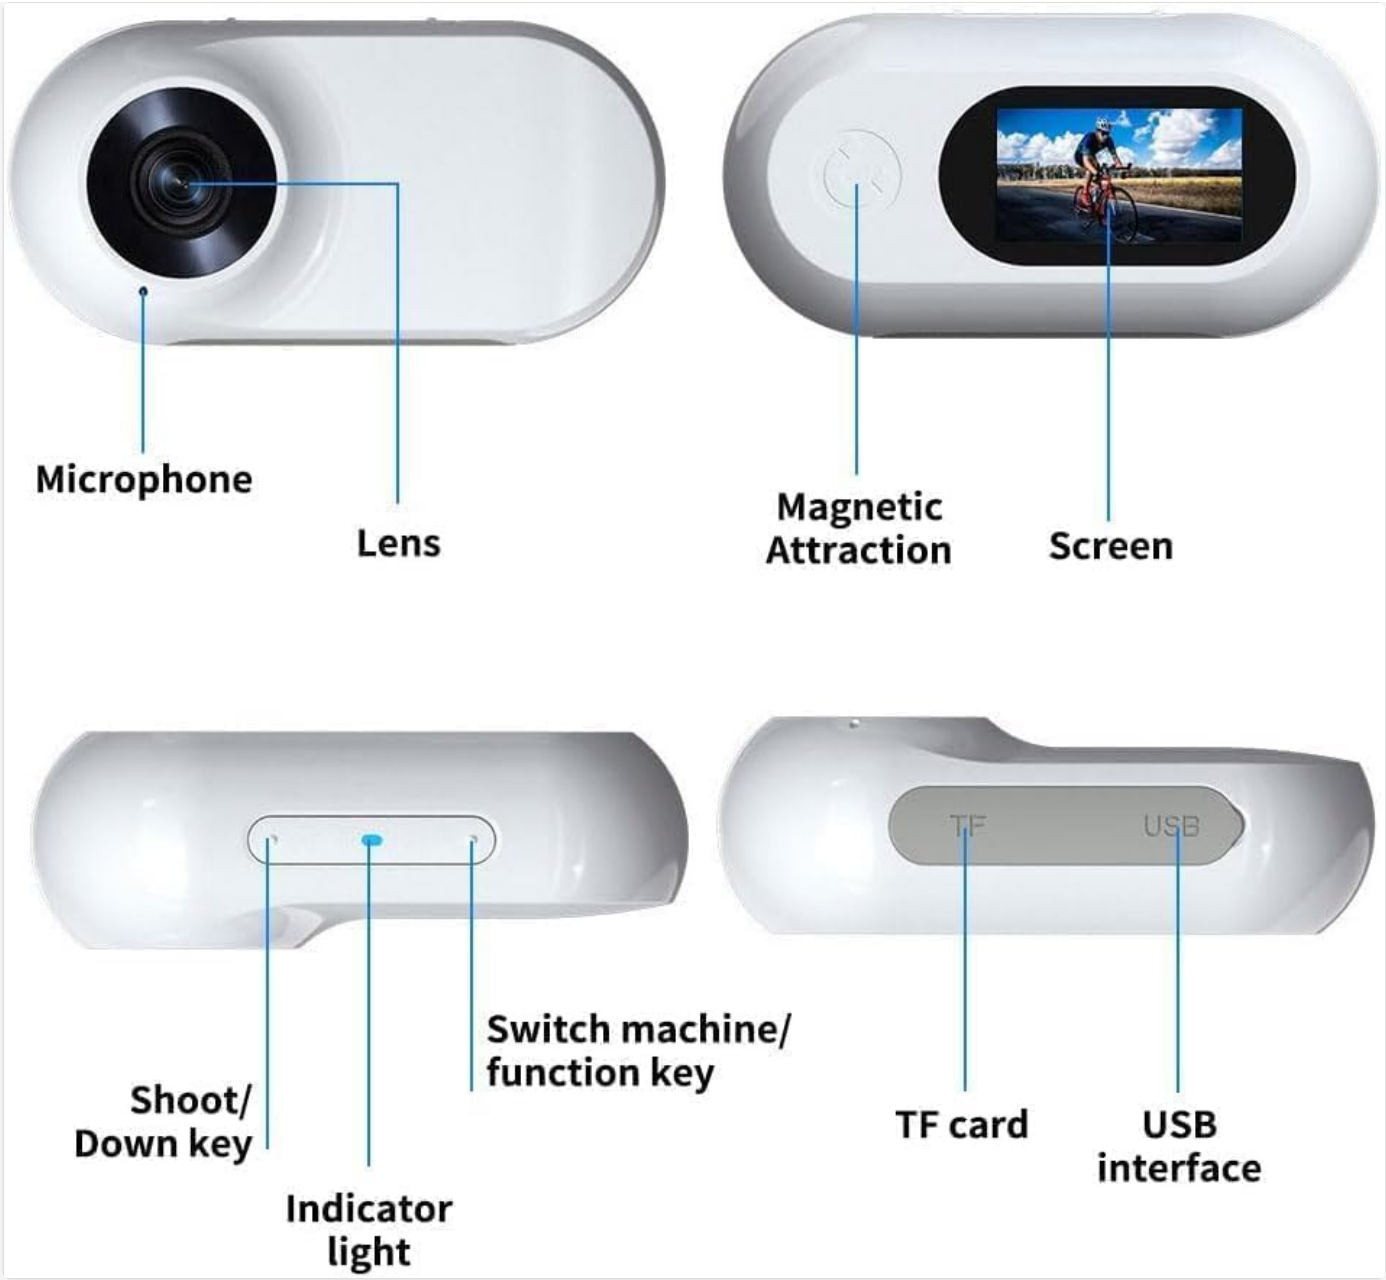


Image: A detailed diagram labeling the key components of the camera, such as the lens, microphone, screen, control buttons, and ports for memory card and USB connection.

- **Microphone:** Captures audio during video recording.
- **Lens:** The primary optical component for capturing images and video.
- **Magnetic Attraction:** For secure attachment to compatible mounts.
- **Screen:** Displays camera status, preview, and playback.
- **Shoot/Down Key:** Used to initiate recording and navigate menus.
- **Indicator Light:** Provides visual feedback on camera status (e.g., recording, charging).
- **TF Card Slot:** For inserting a microSD card (required for storage, not included).
- **USB Interface:** For charging and data transfer.
- **Switch Machine/Function Key:** Power on/off and mode selection.

Setup and First Use

1. **Charge the Camera:** Connect the camera to a power source using the provided USB cable. The indicator light will show charging status. Ensure the camera is fully charged before first use.

2. **Insert an SD Card:** The camera requires a microSD (TF) card for storing recordings. Insert a compatible microSD card into the TF card slot until it clicks into place. *(Note: SD card is not included and must be purchased separately.)*
3. **Power On:** Long press the "Down" button to power on the camera. The screen will illuminate.
4. **Attach to Collar:** Secure the camera to your pet's collar using the provided silicone case and collar attachment. Ensure the camera is positioned to capture the desired view.



Image: A visual guide detailing the initial setup and operational steps for the camera, from charging to viewing recorded files on a computer.

Operating Instructions

1. **Start Recording:** Once powered on, press the "Function" key once to begin video recording. The indicator light will change to confirm recording is active.
2. **Pause/Save Video:** To pause recording and save the current video file, press the "Function" key again.
3. **Playback Mode:** To enter playback mode and review recorded videos, press the "Down" button twice. Use the "Shoot/Down" and "Function" keys to navigate through files and play videos.
4. **Power Off:** Long press the "Down" button to power off the camera.

Viewing Files on Computer:

1. **Connect to Computer:** Insert the microSD card into the Type-C Reader Adapter, then connect the adapter to your computer's USB port. Alternatively, connect the camera directly to your computer using the USB cable.
2. **Access Files:** The camera or SD card will appear as a removable drive on your computer. Open the drive to access and transfer your video (AVI) and audio (MP3) files.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the camera body and lens. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the camera regularly, even if not in use for extended periods.
- **SD Card Management:** Regularly back up important recordings and format the microSD card periodically to maintain optimal performance and prevent data corruption.

Troubleshooting

Problem	Possible Cause	Solution
Camera does not power on.	Low battery; Incorrect power button press.	Charge the camera fully. Ensure you long press the "Down" button to power on.
Cannot record video.	No SD card inserted; SD card full or corrupted; Camera in playback mode.	Insert a compatible microSD card. Format or replace the SD card. Exit playback mode.
Poor video quality (blurry/shaky).	Lens is dirty; Insufficient lighting; Excessive movement.	Clean the lens. Ensure adequate lighting. Minimize sudden movements.
Camera not recognized by computer.	Faulty USB cable/adapter; Driver issue; Camera not in data transfer mode.	Try a different USB cable/port. Ensure the camera is powered on when connected. Use the Type-C Reader Adapter for direct SD card access.
Recordings only show the ground/feet.	Camera angle incorrect on pet's collar.	Adjust the camera's position and angle on the collar to ensure a clear forward view. Experiment with different placements.

Specifications

Feature	Detail
Model Number	YDXJ-02
Brand	Kestanlora
Video Capture Resolution	1080p
Video Capture Format	AVI
Supported Audio Format	MP3
Photo Sensor Technology	CMOS
Maximum Aperture	3.04 Millimeters

Feature	Detail
Flash Memory Type	SD (microSD required, not included)
Screen Size	0.96 Inches
Connectivity Technology	USB
Color	Black
Product Dimensions	1.17 x 7 x 2.8 inches
Item Weight	5 ounces

Warranty and Support

For warranty information and customer support, please refer to the contact details provided with your purchase or visit the official Kestanlora website. Keep your purchase receipt as proof of purchase for any warranty claims.
Manufacturer: Kestanlora
ASIN: B0CPXXPX6L

© 2024 Kestanlora. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CPXXPX6L

More documents and user manuals: **https://manuals.plus/**