Roilpet 3L

Roilpet Wireless Cat Water Fountain User Manual

Model: 3L

Introduction

The Roilpet Wireless Cat Water Fountain is designed to provide fresh, clean water for your pets with ultimate convenience and quiet operation. Its cordless design allows for flexible placement anywhere in your home, eliminating concerns about power outlets or chewed wires. Featuring a long-lasting battery and multiple intelligent work modes, this fountain ensures your pet stays hydrated and healthy.



Image: Roilpet Wireless Cat Water Fountain, showcasing its compact design and a cat nearby.

Key Features:

- **Wireless & Highly Secure:** Offers flexible placement without the need for power outlets, ensuring safety from chewed wires.
- **Long Battery Life:** Built-in 4000mAh rechargeable battery provides up to 90 days of operation in sensor/timer mode, or 48 hours in continuous mode. The battery is removable for separate charging.
- **Multiple Work Modes:** Choose from Motion-activated, Timer, or Continuous flow modes to suit your pet's drinking habits.
- **Advanced Filtration:** A 4-layer vertical filtration system ensures oxygen-rich, clean water, free from impurities.
- **Ultra-Quiet Operation:** Operates at less than 25 decibels, providing a peaceful environment for both pets and owners.
- **Water Level Protection:** Automatically stops the pump and indicates low water level with a red light to prolong pump lifespan.

Product Components

Before assembly, please ensure all components listed below are present in your package:



Image: Contents of the Roilpet Wireless Pet Fountain box.

- 1x Roilpet Wireless Pet Fountain (Water Tank, Water Tray)
- 1x Water Dispenser Control Box (with Infrared Sensor)
- 1x Spout
- 1x Water Pump with Power Cord
- 2x Water Pump Connecting Tubes
- 4x Filters
- 2x Filter Sponges
- 1x Type-C Charging Cable
- 1x Tweezers
- 1x Brush
- 1x User Manual

Setup and Installation

Follow these steps to assemble and set up your Roilpet Wireless Cat Water Fountain:

Step-by-Step Assembly:

1. **Soak the Filter:** Before installation, soak the filter in clean water (approximately 41-112°F / 5-45°C) for about 5-10 minutes. This helps remove any loose carbon dust and prepares the filter for optimal performance.
2. **Connect Water Pump:** Align the water pump interface with the bottom interface of the water tray and tighten it securely. Ensure the power cord is properly aligned with the electrodes.
3. **Insert Water Pipe:** Insert the water pump connection tube into the corresponding positions of the water pump and water tray. Press firmly until fully connected.
4. **Place Filter:** Place the soaked filter into the filter holder and put it into the groove underneath the water tray.
5. **Fill Water Tank:** Pour clean water into the water tank. Do not exceed the maximum water level line indicated on the tank.
6. **Assemble Tray and Tank:** Carefully place the water tray onto the water tank, ensuring it sits securely.
7. **Attach Control Box and Spout:** Place the control box onto its designated spot on the water tray and then attach the spout.
8. **Power On:** Press the power button on the control box to turn on the fountain and begin operation.

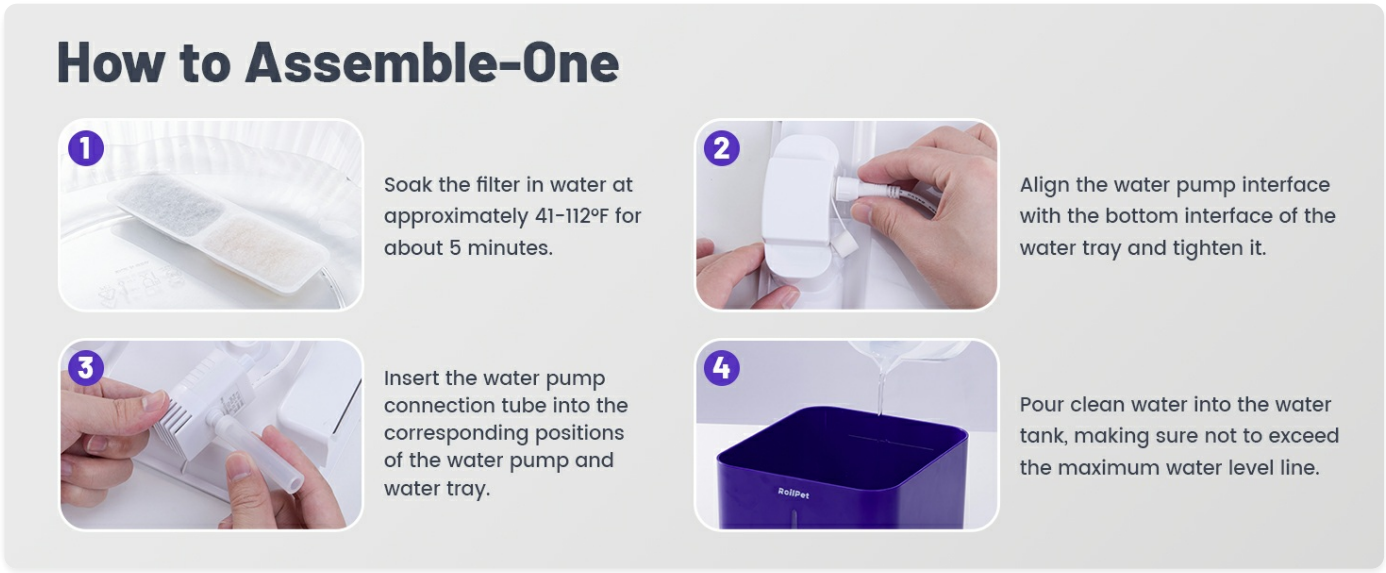


Image: How to Assemble - Part One.



Image: How to Assemble - Part Two.

Installation Video:

Your browser does not support the video tag.

Video: Official Roilpet "How to Install?" guide, demonstrating the assembly process.

Operating Modes

The Roilpet Wireless Cat Water Fountain offers three intelligent work modes to cater to your pet's hydration needs:

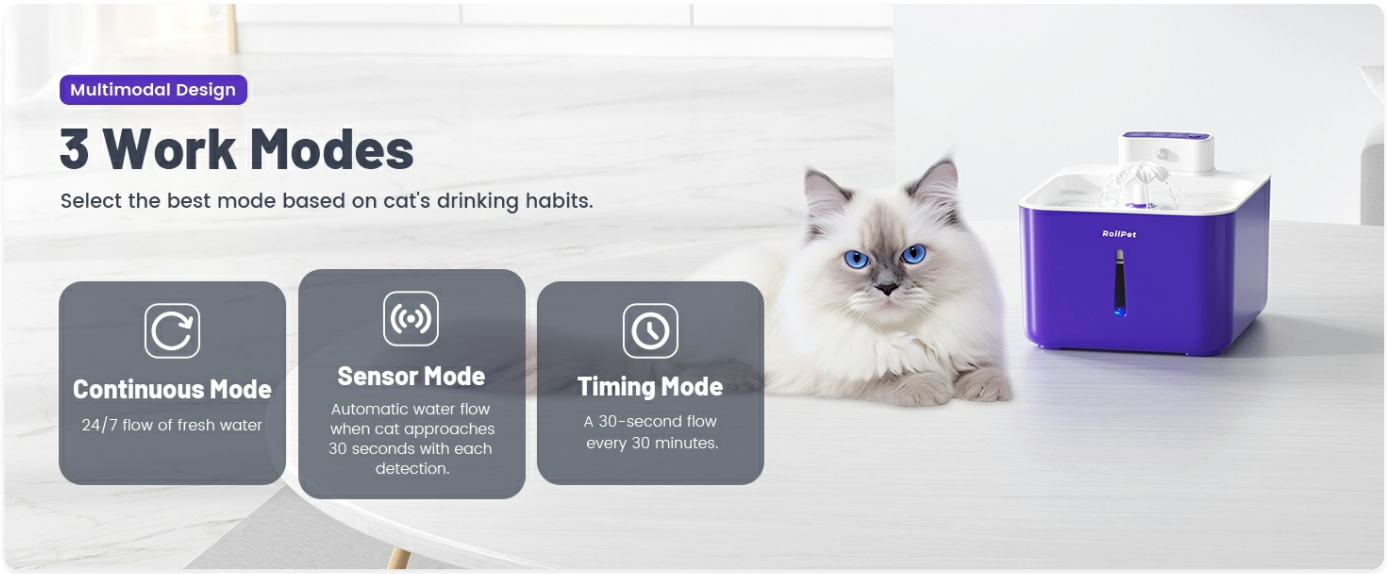


Image: Multimodal Design - Three Work Modes.

- **Motion-Activated Mode (Sensor Mode):**

  Water dispenses for 30 seconds when your cat approaches within 5 feet (1.5 meters) and a 120° angle. This mode encourages curiosity and increased water intake. Ideal for energy saving and engaging pets.

- **Timer Mode:**

  Water is released every 30 minutes for a duration of 30 seconds. This provides regular access to fresh water throughout the day.

- **Continuous Flow Mode:**

  Provides a constant flow of fresh water. This mode is recommended for use when the fountain is plugged in via the Type-C charging cable.

To switch between modes, press the corresponding button on the control box. The indicator lights will confirm the active mode.

Your browser does not support the video tag.

Video: Roilpet Wireless Cat Water Fountain Battery Operated, demonstrating the different operating modes and features.

Maintenance

Regular maintenance is crucial to ensure the longevity of your fountain and the freshness of your pet's water.

Filtration System:

The fountain features a 4-layer vertical filtration system:

- Non-woven Fabric
- Activated Carbon
- Ion Exchange Resin
- Additional Non-woven Fabric

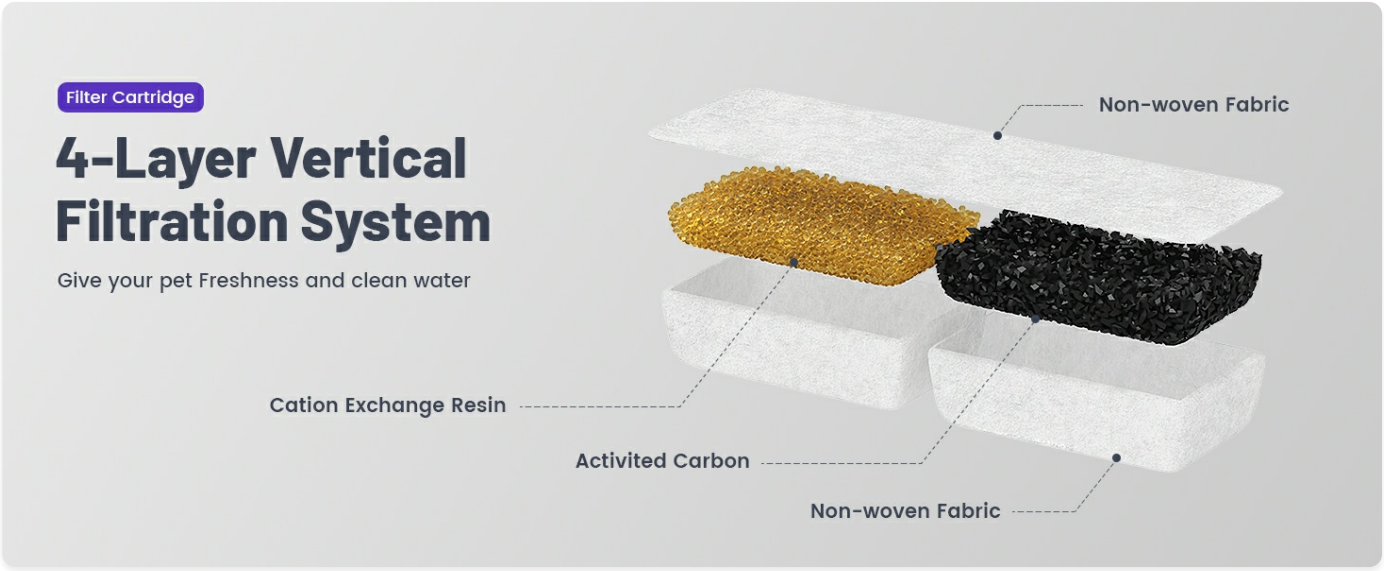


Image: 4-Layer Vertical Filtration System.

Filter Replacement:

- It is recommended to replace the filters every 7-15 days.
- Replace the filter sponge every 30 days.
- After replacing the filter cartridge, double-click the "Filter" button on the control box to reset the filter's usage time.

Cleaning:

Clean the fountain regularly after use to prevent algae buildup and ensure optimal hygiene. The fountain is designed for easy disassembly for thorough cleaning.

Troubleshooting

This section addresses common issues you might encounter with your Roilpet Wireless Cat Water Fountain.

Indicator Lights:



Image: Low Water Level Reminder.



Image: Light Reminder for Low Battery and Filter Replacement.

- **Blue Light:** Indicates normal operation.
- **Red Light (Water Tank):** Indicates low water level. The pump will automatically stop to prevent overheating and damage. Refill the water tank immediately.
- **Red Light (Control Box - Power Button):** Indicates low battery warning. Recharge the battery promptly.
- **Yellow Light (Control Box - Filter Button):** Indicates filter replacement reminder. Replace the filter and reset the timer as described in the Maintenance section.

Common Issues:

- **Fountain not dispensing water:**
  - Check water level: Ensure water is above the minimum level.
  - Check battery: Recharge the battery if the low battery indicator is on.
  - Check pump connection: Ensure the water pump and pipe are securely connected.
  - Check for blockages: Clean the pump and spout for any debris or hair.
- **Excessive noise:**
  - Check water level: Low water can cause pump noise.
  - Clean pump: A dirty pump can vibrate and cause noise.

- Ensure proper assembly: Make sure all parts are fitted correctly and securely.

- **Water tastes like plastic (new unit):**
  - Thoroughly wash all components with mild soap and water before first use.
  - Soak filters as per instructions to remove any manufacturing residue.

Specifications

Attribute	Detail
Brand	Roilpet
Model Name	Cat Fountain (Model: 3L)
Capacity	3 Liters (101 oz)
Material	ABS Plastic (BPA-Free)
Color	Purple
Item Dimensions (LxWxH)	9.45 x 5.91 x 5.91 inches
Item Weight	1.92 pounds
Battery	4000mAh Rechargeable Lithium Ion (2 included)
Noise Level	Less than 25 decibels
Target Audience	Cats, Small Animals, Dogs (Small Breed)
Specific Uses	Indoor

Warranty and Support

Your Roilpet Wireless Cat Water Fountain comes with a **1-Year Limited Warranty** from the date of purchase, covering manufacturing defects.
For technical support, troubleshooting assistance, or warranty claims, please contact Roilpet customer service through the retailer's platform or visit the official Roilpet website for contact information.
Please retain your proof of purchase for warranty validation.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question