Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Soundcore A3138

Soundcore Boom 2 Outdoor Speaker User Manual

Model: A3138
Brand: Soundcore

Introduction

Welcome to your Soundcore Boom 2 Outdoor Speaker. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device.



The Soundcore Boom 2 Outdoor Speaker in black. This portable speaker is designed for powerful audio and vibrant


light effects, featuring a durable, waterproof build.

Setup

Charging Your Speaker

Before first use, fully charge your Soundcore Boom 2.

- Connect the provided USB-C to C cable to the speaker's charging port and a compatible USB-C power adapter (not included).
- The charging time is approximately 5.5 hours for a full charge.
- The built-in power bank allows you to charge other devices via the USB-C port.

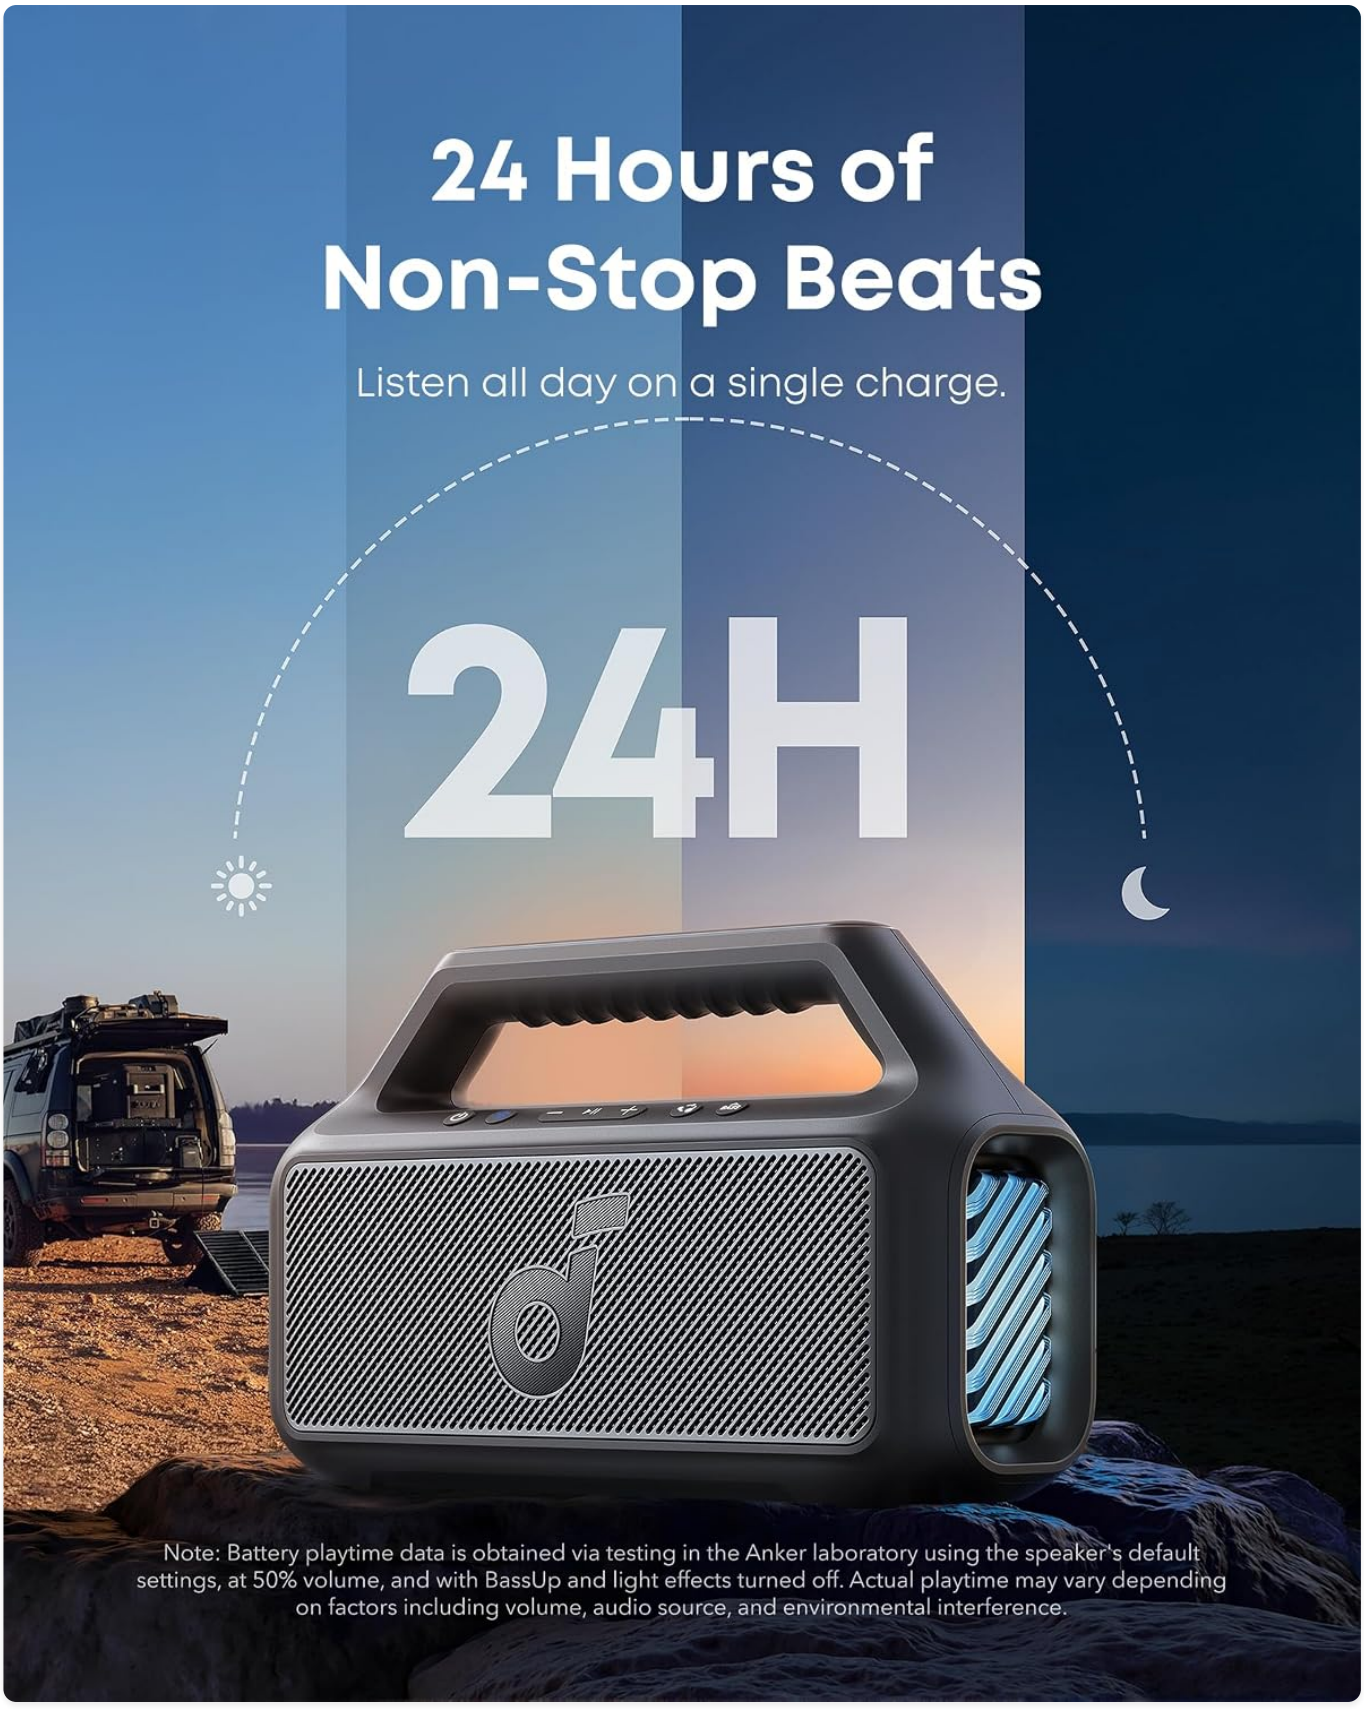

The Soundcore Boom 2 features a built-in power bank, enabling you to charge your mobile devices on the go, ensuring your phone stays powered during outdoor activities.

Bluetooth Pairing

To connect your speaker to a Bluetooth-enabled device:

1. Power on the Soundcore Boom 2. The Bluetooth indicator will flash blue, indicating it's in pairing mode.
2. On your device, enable Bluetooth and select "Soundcore Boom 2" from the list of available devices.

3. Once connected, the Bluetooth indicator will turn solid blue.

For optimal performance, ensure your device is within 10 meters (33 feet) of the speaker.

Operating Your Speaker

Basic Controls

The Soundcore Boom 2 features intuitive button controls for various functions:

- **Power Button:** Press and hold to power on/off.
- **Volume Up/Down:** Press to adjust volume.
- **Play/Pause:** Press to play or pause audio.
- **BassUp 2.0 Button:** Press to activate or deactivate enhanced bass mode.
- **Light Show Button:** Press to cycle through light modes or turn off the light show.

Audio Features

The speaker delivers 80W max booming bass with a 50W racetrack subwoofer and dual 15W tweeters for 2.1 stereo clarity.



An internal diagram of the Soundcore Boom 2 highlights its advanced audio components, including a powerful subwoofer and dual tweeters, designed for rich, clear sound.

Light Show

The Soundcore Boom 2 features a beat-driven outdoor light show with customizable RGB lights.



The Soundcore Boom 2 showcases its dynamic, beat-driven light show, perfect for enhancing the atmosphere during outdoor gatherings.

PartyCast 2.0

Connect up to 100+ Soundcore speakers with PartyCast 2.0 for an expanded audio experience. Refer to the Soundcore app for detailed instructions on linking multiple speakers.

Soundcore App

Download the Soundcore app to customize your listening experience, including:

- Custom EQ settings to tailor the sound to your preference.
- Control over the light show effects.
- Firmware updates.

Your browser does not support the video tag.

An official video demonstrating the Soundcore Boom 2 outdoor speaker's features and capabilities, including its sound and light show.

Maintenance and Care

Waterproofing

The Soundcore Boom 2 is IPX7 waterproof, meaning it can be submerged in up to 1 meter of water for up to 30 minutes.

Important: Ensure the rubber cover on the back of the speaker is securely sealed for effective waterproofing.



The Soundcore Boom 2 is shown partially submerged in water, highlighting its IPX7 waterproof rating and ability to float, making it ideal for poolside or beach use.

Cleaning

Clean the speaker with a soft, damp cloth. Avoid using abrasive cleaners or solvents.

Storage

Store the speaker in a cool, dry place away from extreme temperatures.

Troubleshooting

Speaker will not power on.

Ensure the speaker is fully charged. Connect it to a power source and try again.

Cannot pair with Bluetooth device.

1. Ensure the speaker is in pairing mode (flashing blue indicator).
2. Turn off Bluetooth on your device and turn it back on.
3. Clear the "Soundcore Boom 2" from your device's Bluetooth history and try pairing again.
4. Ensure no other devices are currently connected to the speaker.

Poor sound quality or distortion.

1. Adjust the volume on both the speaker and your connected device.
2. Ensure the speaker is within Bluetooth range and there are no obstructions.
3. Try adjusting the EQ settings via the Soundcore app.
4. Disable BassUp 2.0 if distortion occurs at high volumes.

Light show not working.

1. Ensure the light show feature is enabled via the button on the speaker or the Soundcore app.
2. Check for firmware updates through the Soundcore app.

Specifications

Feature	Detail
Model Name	soundcore Boom 2
Model Number	A3138
Speaker Type	Indoor/Outdoor/Subwoofer
Speaker Maximum Output Power	80 Watts
Battery Life	24 Hours
Charging Time	5.5 Hours
Waterproof Rating	IPX7
Connectivity Technology	Bluetooth 5.3
Bluetooth Range	100 Meters
Product Dimensions	11.65"D x 7.28"W x 3.98"H

Feature	Detail
Item Weight	1.66 Kilograms (3.65 pounds)
Included Components	soundcore Boom 2, USB-C to C Cable, Safety Sheet

Warranty and Support

Your Soundcore Boom 2 speaker is covered by a manufacturer's warranty. For detailed warranty information and support, please visit the official Soundcore website or contact customer service.
You can also find additional resources and FAQs on theSoundcore Store.
For a digital copy of the user manual, please refer to the official document:User Manual (PDF).

© 2024 Soundcore. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CQ53RVTW

More documents and user manuals: **https://manuals.plus/**