Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

USHA 40015ICHEFSG270N

Usha iChef Sandwich Grill 1500W Instruction Manual

Model: 40015ICHEFSG270N

Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance has a 1500 Watt rating and requires a 15-Amp plug. Ensure your electrical circuit can support this wattage.

Product Overview

The Usha iChef Sandwich Grill is designed for versatile grilling, offering features for convenient and safe operation.

Key Features

- **Large 2-Slice Flat Bed Griller:** Features 275 mm x 180 mm plates, suitable for larger breads.
- **0-180° Flat Bed Functionality:** Allows the grill to open completely flat for use as an open grill.
- **Floating Hinge Design:** Adapts to various sandwich thicknesses for even grilling.

- **Power ON and Ready Indicator Lights:** Provides visual cues for operational status.
- **2-Stage Thermal Safety:** Equipped with a thermostat and thermal fuse for enhanced safety.
- **Detachable Oil Drip Collector Tray:** Facilitates mess-free usage and easy cleaning.
- **Anti-Skid Feet:** Ensures stability during operation.
- **100% Copper Motor:** For durable and efficient performance.

Components

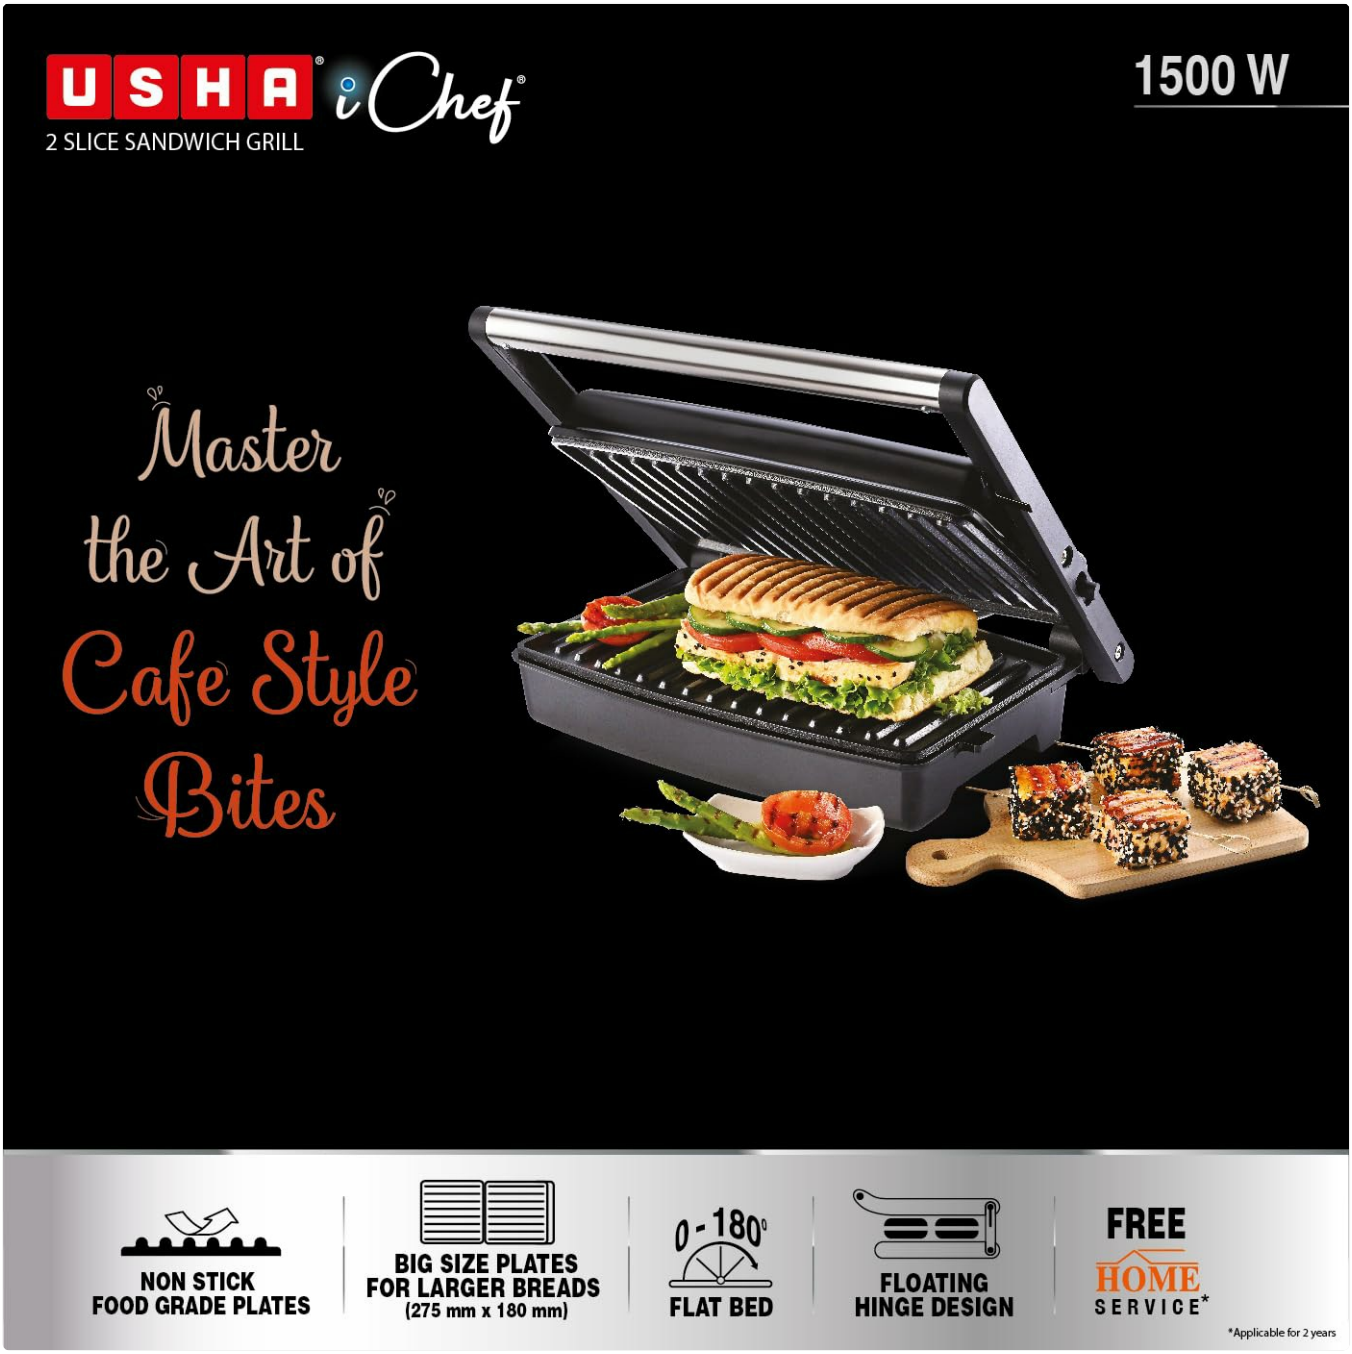


Figure 1: The Usha iChef Sandwich Grill in operation, showing a grilled sandwich and vegetables on the plates.



Figure 2: The grill opened, highlighting the non-stick food grade plates and the handle lock design for secure closure.



Figure 3: Side view illustrating the 0-180 degree flatbed capability and the floating hinge design, which accommodates varying food thicknesses.



Figure 4: Close-up of the control panel, showing the Power ON and Ready indicator lights, and the detachable oil drip collector tray.

Setup

Initial Setup

1. Unpack the sandwich grill and all its components. Remove any packaging materials, stickers, or promotional labels.
2. Wipe the exterior of the appliance with a damp cloth.
3. Clean the non-stick grill plates and the detachable oil drip collector tray with a damp cloth or sponge using mild detergent. Rinse thoroughly and dry completely.
4. Place the grill on a stable, heat-resistant, and flat surface, ensuring adequate ventilation around the appliance.
5. Ensure the detachable oil drip collector tray is correctly inserted into its designated slot at the front of the grill.

Before First Use

1. Plug the power cord into a grounded 230V AC electrical outlet. The Power ON indicator light will illuminate.
2. Allow the grill to preheat for approximately 5-10 minutes with the lid closed. This helps to burn off any manufacturing residues and

season the non-stick plates. A slight odor or smoke may be present during this initial heating; this is normal.

3. Unplug the appliance and allow it to cool completely.
4. Wipe the grill plates again with a damp cloth. The appliance is now ready for use.

Operating Instructions

Basic Operation

1. Ensure the grill is clean and the drip tray is in place.
2. Plug the appliance into a suitable electrical outlet. The Power ON indicator (red) will light up.
3. Close the grill and allow it to preheat. The Ready indicator (green) will light up when the grill has reached the optimal cooking temperature.
4. Once preheated, carefully open the grill using the cool-touch handle.
5. Place your food onto the bottom grill plate. Do not overload the grill.
6. Close the lid. The floating hinge design will adjust to the thickness of your food.
7. Cook for the desired time. The Ready indicator light may cycle on and off during cooking as the grill maintains its temperature.
8. When cooking is complete, carefully remove the food using a heat-resistant plastic or wooden utensil. Do not use metal utensils, as they can damage the non-stick coating.
9. Unplug the appliance from the wall outlet and allow it to cool completely before cleaning.

Grilling Sandwiches

- Prepare your sandwiches with desired fillings. For best results, lightly butter or oil the outer sides of the bread.
- Preheat the grill until the Ready indicator light illuminates.
- Place up to two sandwiches on the bottom grill plate.
- Close the lid and gently press down to ensure even contact.
- Grill for 3-5 minutes, or until the sandwiches are golden brown and the cheese (if any) is melted. Cooking time may vary based on bread type and filling.
- Carefully remove the grilled sandwiches.

Using 0-180° Flat Bed Mode

The grill can be opened completely flat to provide a larger grilling surface, ideal for cooking multiple items simultaneously or larger foods.

1. Ensure the grill is plugged in and preheated until the Ready indicator light illuminates.
2. Carefully open the grill to its maximum 180-degree flat position. The floating hinge allows for this full opening.
3. Place food items such as vegetables, paneer, or other flat foods onto both grilling surfaces.
4. Cook, turning food as needed, until desired doneness is achieved.
5. When finished, unplug the grill and allow it to cool before returning it to the closed position and cleaning.

Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the life of your Usha iChef Sandwich Grill.

General Cleaning

- Always unplug the appliance and allow it to cool completely before cleaning.
- Never immerse the main unit, cord, or plug in water or any other liquid.

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.

Cleaning the Grill Plates

- Once the grill plates have cooled, gently scrape off any excess food residue with a plastic spatula or wooden utensil.
- Wipe the non-stick plates with a damp cloth or sponge. For stubborn residue, a small amount of mild dish soap can be used. Ensure all soap residue is wiped away with a clean, damp cloth.
- Do not use metal brushes, abrasive cleaners, or sharp objects on the non-stick coating, as this will damage it.

Cleaning the Oil Drip Collector Tray

- Remove the detachable oil drip collector tray from the front of the grill.
- Empty any collected oil or food particles.
- Wash the tray in warm, soapy water. It can also be cleaned in a dishwasher.
- Rinse thoroughly and dry completely before reinserting it into the grill.

Storage

- Ensure the grill is completely cool and clean before storing.
- Wrap the power cord neatly around the cord storage area (if available) or secure it with a tie.
- Store the appliance in a dry, safe place, away from direct sunlight and out of reach of children.

Troubleshooting

If you encounter issues with your Usha iChef Sandwich Grill, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Grill does not heat up / Power ON light is off.	Appliance not plugged in or power outlet is faulty.	Ensure the power cord is securely plugged into a working 230V AC outlet. Check the circuit breaker.
Ready indicator light does not turn on.	Grill has not reached operating temperature yet.	Allow more time for preheating (5-10 minutes). If it still doesn't light up after sufficient time, contact customer service.
Food sticks to the grill plates.	Plates not properly cleaned or seasoned; insufficient oil/butter.	Ensure plates are clean. Lightly brush plates with cooking oil or butter before each use. Avoid using metal utensils.
Uneven grilling.	Food not evenly distributed or grill not fully preheated.	Ensure food is spread evenly. Allow the grill to fully preheat until the Ready light illuminates. The floating hinge should help with even contact.
Smoke or unusual odor during operation.	Initial use residue burn-off; food residue on plates; excessive oil.	A slight odor is normal during first use. For subsequent uses, ensure plates are clean and avoid excessive oil. If smoke persists, unplug and contact customer service.

Specifications

Model Number	40015ICHEFSG270N

Brand	USHA
Product Name	iChef Sandwich Grill
Wattage	1500 Watts
Voltage	230 Volts (AC)
Product Dimensions (D x W x H)	32.5D x 25W x 10H Centimeters
Item Weight	1870 Grams
Material	Stainless Steel
Special Feature	Temperature Control, 0-180° Flat Bed, Floating Hinge Design
Included Components	Sandwich grill, Instruction manual

Warranty and Support

Product Warranty

The Usha iChef Sandwich Grill comes with a **2-year warranty** on the product. This warranty covers manufacturing defects and ensures free home service where applicable. Please retain your purchase receipt for warranty claims.

Customer Support

For any queries, service requests, or technical assistance, please contact Usha International Limited customer support:

Manufacturer: Usha International Limited

Address: Plot No.15, Institution area, Sector -32, Gurugram, Haryana-122 001

Telephone: +91-124-4583106

You may also visit the official Usha Store on Amazon for more information.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CQ8TJ26X

More documents and user manuals: **https://manuals.plus/**