Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

VEGER V1115

VEGER Portable Charger V1115 User Manual

Model: V1115 | 10000mAh Ultra-Slim Power Bank with Built-in AC Plug and Cables

1. Introduction

This manual provides essential instructions for the safe and efficient use of your VEGER Portable Charger V1115. This all-in-one power bank features a 10000mAh capacity, built-in AC plug, and integrated charging cables (Lightning, USB-C, Micro USB) for convenient charging of multiple devices. Please read this manual thoroughly before use and retain it for future reference.

2. Product Overview

2.1 Key Features

- **All-in-One Design:** Integrated AC wall plug and built-in Lightning, USB-C, and Micro USB cables eliminate the need for external adapters or cables.
- **Multi-Device Charging:** Capable of simultaneously charging up to four devices at 15W fast charging speeds.
- **High Capacity:** 10000mAh battery provides multiple charges for smartphones and other portable electronics.
- **Ultra-Slim and Portable:** Compact design (0.72 inches thick, 8 ounces) for easy transport.
- **Universal Compatibility:** Supports a wide range of devices including iPhones, iPads, Samsung Galaxy, Google Pixel, tablets, Bluetooth headphones, and smartwatches.
- **Comprehensive Protections:** Built-in safeguards against short circuit, over current, over voltage, and over heat.

2.2 Components

The VEGER Portable Charger V1115 includes:

- VEGER Portable Charger V1115
- Mesh Travel Pouch
- User Manual (this document)



Image: Front and back view of the VEGER Portable Charger V1115, highlighting the integrated AC plug and various built-in charging cables.

3. Setup

Before first use, it is recommended to fully charge your VEGER Portable Charger.

1. Unpack the portable charger and included accessories.

2. Inspect the device for any visible damage.
3. Proceed to the "Charging the Power Bank" section to fully charge the device.

4. Operating Instructions

4.1 Charging the Power Bank

The VEGER Portable Charger offers two methods for recharging:

- **Using the Built-in AC Wall Plug:**
    a. Fold out the integrated AC plug from the side of the power bank.
    b. Plug the power bank directly into any standard wall outlet.
    c. The digital display will show the charging progress. A full charge typically takes approximately 6 hours.
- **Using the USB-C Input Port:**
    a. Connect a USB-C charging cable (not included) to the USB-C input port on the power bank.
    b. Connect the other end of the USB-C cable to a compatible USB wall adapter (not included).
    c. Plug the adapter into a wall outlet. A full charge typically takes approximately 5 hours.



Image: Illustration of the two methods to recharge the power bank: directly into a wall outlet using the built-in AC plug, or via a USB-C cable and adapter.

4.2 Charging Your Devices

The power bank can charge up to four devices simultaneously.

- **Using Built-in Cables:**
    a. Identify the correct built-in cable for your device (Lightning for Apple, USB-C for modern Android/other

devices, Micro USB for older Android/accessories).

b. Connect the appropriate built-in cable to your device's charging port.
c. The power bank will automatically begin charging.

- **Using External USB Ports:**

a. Connect your device's charging cable (not included) to one of the available USB output ports (USB-A or USB-C) on the power bank.
b. Connect the other end of your cable to your device.
c. Charging will commence automatically.



Image: The VEGER Portable Charger V1115 connected to and charging an iPad, two smartphones, and a pair of wireless earbuds, demonstrating its multi-device charging capability.

5. Universal Compatibility

The VEGER Portable Charger V1115 is designed for broad compatibility with various electronic devices.

Compatible Device Types

Connection Type	Examples of Compatible Devices
Lightning (Built-in)	iPhone 13/12/11/Xs/X/8 series, iPad, Apple AirPods Pro/AirPods
USB-C (Built-in & Port)	Google Pixel P5/P4/P3XL, Samsung S21/S20/S10/S9/Z Fold2/Note20/Note10, and other USB-C enabled devices
Micro USB (Built-in)	Older Android phones, Bluetooth headphones, smartwatches, and other Micro USB devices
USB-A (Output Port)	Any device requiring a standard USB-A connection with your own cable



Image: Visual representation of the VEGER Portable Charger V1115's broad compatibility with various devices, categorized by connection type.

6. Safety Information and Protections

Your VEGER Portable Charger V1115 is equipped with multiple safety features to ensure reliable operation and protect your devices.

- **Short Circuit Protection:** Prevents damage from electrical shorts.
- **Over Current Protection:** Safeguards against excessive current flow.
- **Over Voltage Protection:** Protects against voltage surges.
- **Over Heat Protection:** Monitors and regulates internal temperature to prevent overheating.

General Safety Guidelines:

- Do not expose the power bank to extreme temperatures, direct sunlight, or moisture.
- Do not disassemble, modify, or attempt to repair the device.
- Keep out of reach of children.
- Avoid dropping or subjecting the device to strong impacts.
- Dispose of the product responsibly according to local regulations.

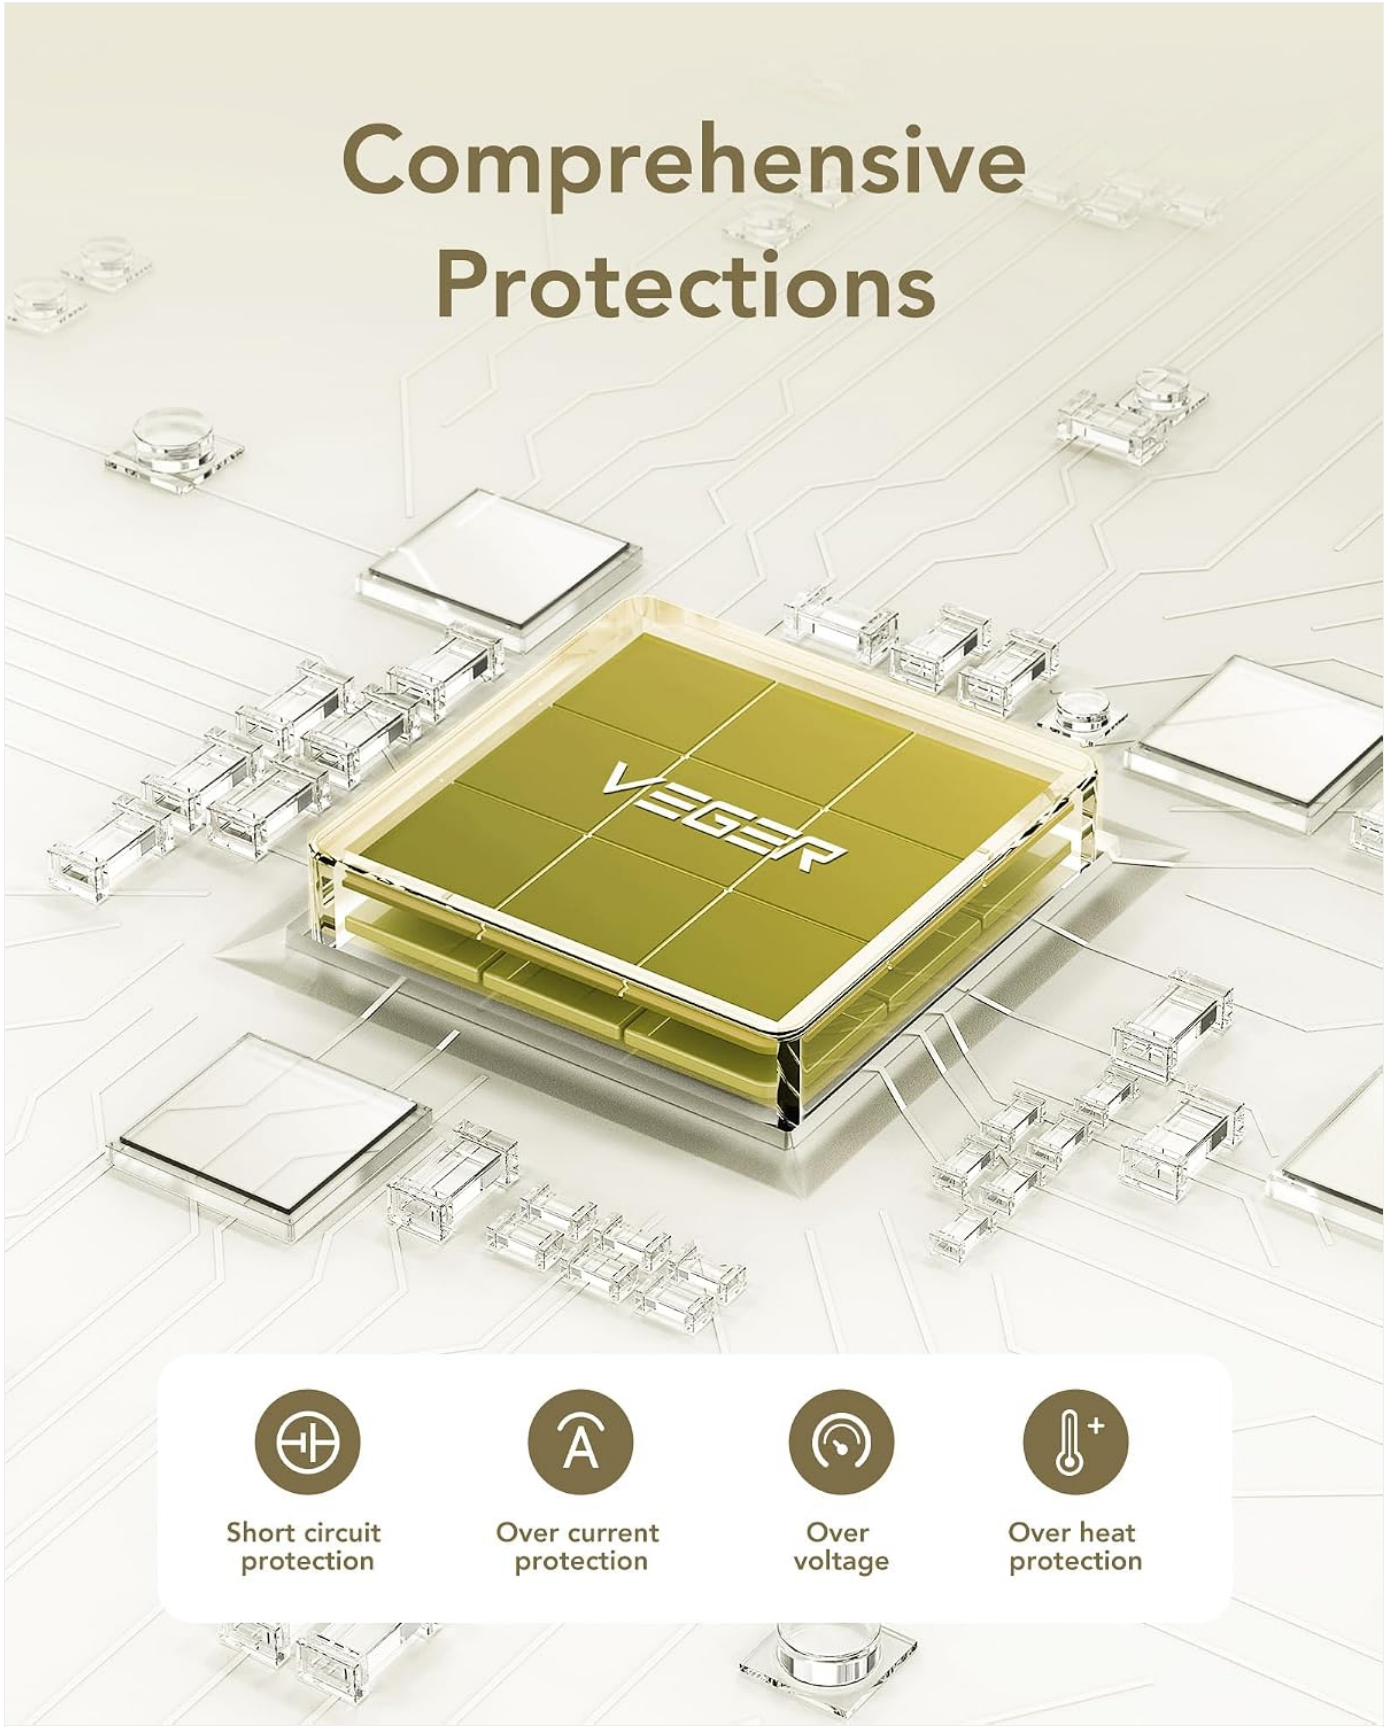


Image: An internal view diagram highlighting the comprehensive protection mechanisms integrated into the VEGER Portable Charger V1115.

7. Maintenance

To ensure the longevity and optimal performance of your VEGER Portable Charger V1115, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the power bank. Do not use liquid cleaners or aerosols.
- **Storage:** Store the power bank in a cool, dry place away from direct sunlight and extreme temperatures. If storing for extended periods, charge the power bank to approximately 50-75% every three months to maintain battery health.
- **Avoid Physical Damage:** Protect the device from drops, impacts, and excessive pressure.

8. Troubleshooting

If you encounter issues with your VEGER Portable Charger V1115, refer to the following common problems and solutions:

Troubleshooting Guide

Problem	Possible Cause	Solution
Power bank not charging	AC plug not fully inserted, faulty outlet, damaged cable (if using USB-C input)	Ensure AC plug is firmly in the outlet. Try a different outlet. If using USB-C, try a different cable or adapter.
Device not charging from power bank	Power bank battery depleted, incorrect cable, loose connection, device incompatibility	Recharge the power bank. Ensure the correct built-in cable is used or try a different external cable. Check connections. Verify device compatibility.
Slow charging	Using a non-fast charging port/cable, multiple devices charging simultaneously, device drawing low current	Ensure you are using a fast-charging compatible port/cable. Charging multiple devices may reduce individual charging speeds.
Power bank gets warm during use	Normal operation, especially during fast charging or multi-device charging	This is generally normal. If it becomes excessively hot or emits smoke/odor, discontinue use immediately and contact support.

9. Specifications

VEGER Portable Charger V1115 Specifications

Feature	Detail
Model Number	V1115
Battery Capacity	10000 Milliamp Hours (Lithium Polymer)
Product Dimensions	5.9 x 2.7 x 0.72 inches
Item Weight	8 ounces
Input (AC Plug)	100-240V ~ 50/60Hz (Typical for AC wall plugs)
Input (USB-C)	5V/3A, 9V/2A (Typical for fast charging power banks)
Output (Total)	Up to 15W Fast Charging
Built-in Cables	Lightning, USB-C, Micro USB
Additional Output Ports	USB-A, USB-C (also functions as input)
Special Features	Built-in AC Plug, Built-in Cables, Digital Display

10. Warranty and Support

VEGER provides a **12-month warranty** for the Portable Charger V1115. This warranty covers manufacturing defects and ensures a reliable experience with your power bank.

For any questions, concerns, or warranty claims, please contact our customer support team. They are available 24/7 and aim to respond within 12 hours.

Contact Information: Refer to the contact details provided on the product packaging or the official VEGER website.

© 2025 VEGER. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

My VEGER V1115 portable charger is not charging; where is the reset button located?

Based on the official user manual for the VEGER V1115, there is no dedicated physical reset button on this device. Most modern power banks of this type are reset by performing a "loop back"...

Read full answer

Open the live page

https://manuals.plus/asin/B0CQN8N6BM

More documents and user manuals: **https://manuals.plus/**