**PROTKPETS PROTKPETS-CD Player**

# PROTKPETS Portable CD Player User Manual

Model: PROTKPETS-CD Player

## 1. Introduction

Thank you for purchasing the PROTKPETS Portable CD Player. This device is designed to provide high-fidelity audio playback from your favorite CDs, while also offering modern connectivity options like Bluetooth 5.0. Its retro suitcase design makes it a stylish addition to any home, and its portable nature allows you to enjoy music anywhere. This manual will guide you through the setup, operation, and maintenance of your new CD player.

Key features include:

- HI-FI Sound Quality for clear audio.
- Exquisite Exterior Design with a vintage, textured leather finish.
- Multifunctional Connectivity: Bluetooth 5.0 for wireless streaming and a 3.5mm AUX port for wired connections.
- Rechargeable and Portable: Built-in 3600mA battery for up to 5 hours of continuous use, with the ability to operate while charging.

## 2. Product Overview and Components

The PROTKPETS Portable CD Player comes with essential accessories to get you started. Familiarize yourself with the main unit and its included items.

### What's in the Box:

- PROTKPETS Portable CD Player
- USB-C Charging Cable
- Remote Control

### Main Unit Features:

The player features a compact suitcase design with a hinged lid that opens to reveal the CD tray and playback arm. It includes integrated speakers and various control buttons.



Figure 2.1: PROTKPETS Portable CD Player with included accessories (remote control and USB-C cable).




Figure 2.2: Detailed view of the player's control panel and secure latches.

## 3. Setup

### 3.1 Charging the Device

Before first use, it is recommended to fully charge the CD player. The device has a built-in 3600mA high-capacity battery.

1. Locate the USB-C charging port on the back of the unit.
2. Connect the provided USB-C cable to the player and the other end to a compatible USB power source (e.g., wall adapter, power bank, car charger).
3. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off, depending on the model.

The player can be used while it is charging.




Figure 3.1: The CD player supports USB-C fast charging from various power sources.

### 3.2 Initial Power On

To power on the device, press and hold the 'Stop/Power' button located on the control panel until the display illuminates.

## 4. Operating Instructions

### 4.1 CD Playback

1. Open the lid of the CD player.
2. Carefully place a CD onto the spindle, ensuring it is seated correctly.
3. Close the lid.
4. Press the 'Play/Pause' button to start playback.
5. Use the 'Prev' and 'Next' buttons to skip tracks.
6. Adjust the volume using the volume knob.

7. Press the 'Stop/Power' button to stop playback.

## 4.2 Bluetooth Connection

The CD player can function as a Bluetooth speaker, allowing you to stream audio wirelessly from your mobile devices.

1. Power on the CD player.
2. Press the 'M' (Mode) button until the Bluetooth mode is selected. The player will enter pairing mode, indicated by a flashing Bluetooth icon or audible prompt.
3. On your mobile device, enable Bluetooth and search for available devices.
4. Select 'PROTKPETS CD Player' (or similar name) from the list of devices.
5. Once paired, you can play music from your mobile device through the CD player's speakers.




Figure 4.1: Seamless Bluetooth 5.1 connectivity for wireless audio streaming.

## 4.3 AUX Mode

Connect external audio devices using the 3.5mm AUX port.

1. Connect one end of a 3.5mm audio cable (not included) to the AUX IN port on the CD player.
2. Connect the other end to the audio output of your external device (e.g., smartphone, MP3 player).
3. Press the 'M' (Mode) button until AUX mode is selected.
4. Play audio from your external device.

## 4.4 Control Buttons Overview

The control panel features several buttons for easy operation:

- **Play/Pause:** Starts or pauses CD playback.
- **Stop/Power:** Stops playback; long press to power on/off.
- **AB Repeat:** Repeats a specific section of audio (A to B).
- **Prev:** Skips to the previous track or rewinds.
- **Next:** Skips to the next track or fast forwards.
- **M (Mode):** Switches between CD, Bluetooth, and AUX modes.
- **Volume Knob:** Rotates to adjust the audio volume.




Figure 4.2: Overview of the player's control buttons and their functions.

## 5. Maintenance

Proper care and maintenance will ensure the longevity and optimal performance of your PROTKPETS Portable CD Player.

### 5.1 Cleaning

- Use a soft, dry cloth to wipe the exterior of the unit. Avoid abrasive cleaners or solvents.
- For the CD lens, use a specialized CD lens cleaner disc or a soft, lint-free cloth designed for optical lenses. Do not touch the lens directly.
- Keep the lid closed when not in use to prevent dust accumulation on the CD tray and lens. The suitcase design includes a dust cover feature.

### 5.2 Storage

Store the CD player in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. Ensure the lid is securely latched during storage or transport.

## 6. Troubleshooting

If you encounter any issues with your PROTKPETS Portable CD Player, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|---|---|---|
| Player does not power on. | Low battery; power button not pressed correctly. | Charge the device fully. Press and hold the 'Stop/Power' button for a few seconds. |
| CD does not play or skips. | CD is dirty, scratched, or inserted incorrectly; lens is dirty. | Clean the CD. Ensure the CD is placed correctly. Clean the CD lens. Try a different CD. |
| No sound from speakers. | Volume too low; incorrect mode selected; device not paired (Bluetooth). | Increase volume. Press 'M' to select correct mode (CD, Bluetooth, AUX). Re-pair Bluetooth device. |
| Bluetooth device cannot connect. | Player not in pairing mode; device too far; interference. | Ensure player is in Bluetooth pairing mode. Move device closer. Turn off other Bluetooth devices. |
| Buzzing or distorted sound. | Interference; faulty audio source; damaged CD. | Move player away from other electronics. Try a different audio source or CD. |

## 7. Specifications

Detailed technical specifications for the PROTKPETS Portable CD Player:

- **Model Name:** PROTKPETS-CD Player
- **Product Dimensions:** 8.07 x 6.1 x 4.13 inches
- **Item Weight:** 3.06 pounds
- **Batteries:** 1 Lithium Polymer battery (included)
- **Connectivity Technology:** Auxiliary, Bluetooth 5.0
- **Special Feature:** Portable, HI-FI Speakers, Rechargeable

- **Color:** White
- **Manufacturer:** PROTKPETS
- **Country of Origin:** China

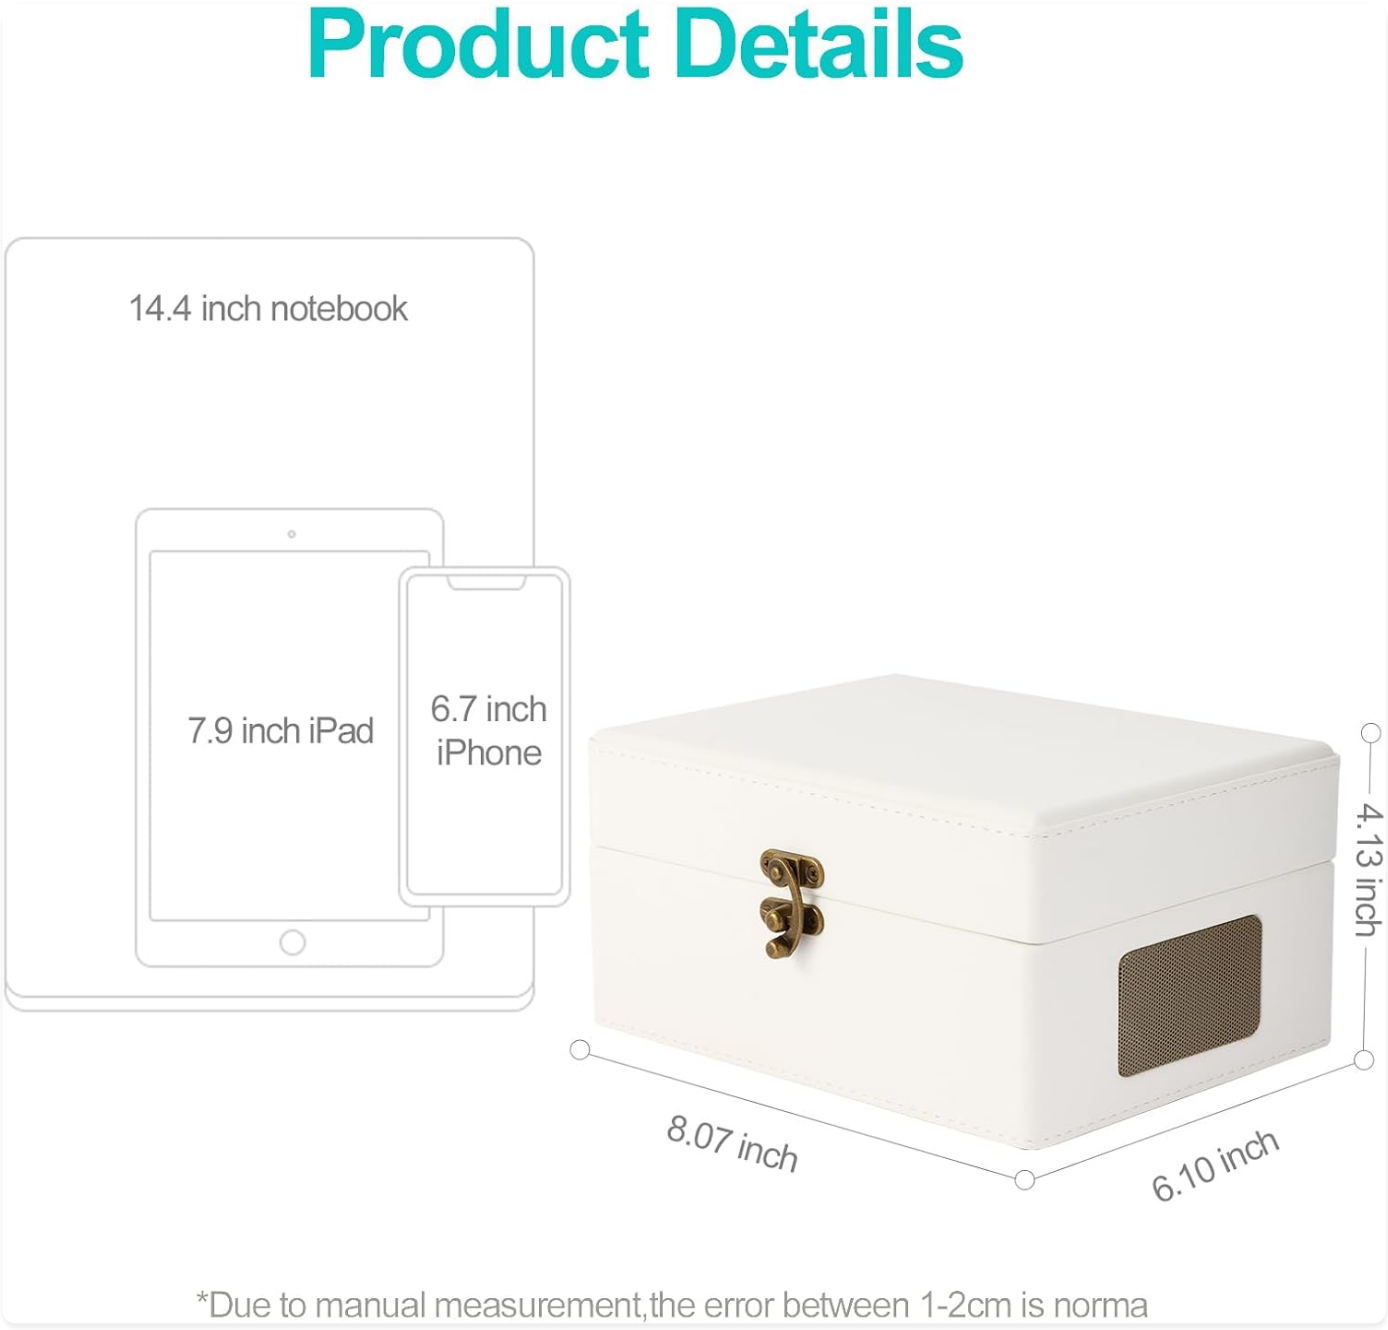



Figure 7.1: Product dimensions for the PROTKPETS Portable CD Player.

## 8. Warranty and Support

PROTKPETS is committed to providing high-quality products. This product is covered by a standard manufacturer's warranty against defects in materials and workmanship. Please refer to the product packaging or the official PROTKPETS website for specific warranty terms and conditions.

### Customer Support:

For technical assistance, troubleshooting not covered in this manual, or warranty claims, please contact PROTKPETS customer support through the retailer's platform or the official brand website. Please have your model number (PROTKPETS-CD Player) and purchase information ready when contacting support.

## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question