Emerson ESTD-2400

Emerson ESTD-2400 24" Class HD Smart TV with Built-in DVD Player User Manual

Model: ESTD-2400

Important Safety Instructions

Please read all safety and operating instructions carefully before using this television. Keep these instructions for future reference.

- **Power Source:** Ensure the TV is connected to a power supply within the specified voltage range.
- **Ventilation:** Do not block ventilation openings. Allow adequate space around the TV for proper airflow.
- **Water and Moisture:** Do not expose the TV to rain or moisture. Do not place objects filled with liquids, such as vases, on the TV.
- **Cleaning:** Unplug the TV from the wall outlet before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Heat:** Do not place the TV near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Lightning Storms:** Unplug the TV during lightning storms or when unused for long periods.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

Product Overview

The Emerson ESTD-2400 is a 24-inch Class HD Smart TV featuring a built-in DVD player, designed for versatile entertainment in various spaces. It offers 720p HD resolution for clear visuals and integrated Wi-Fi for access to popular streaming applications.



Front view of the Emerson ESTD-2400 Smart TV, displaying a vibrant landscape scene.



Front view of the Emerson ESTD-2400 TV, showcasing its slim bezel design.



Side view of the Emerson ESTD-2400 TV, highlighting the integrated DVD player slot.



Rear view of the Emerson ESTD-2400 TV, showing various input ports including HDMI, USB, and RCA.


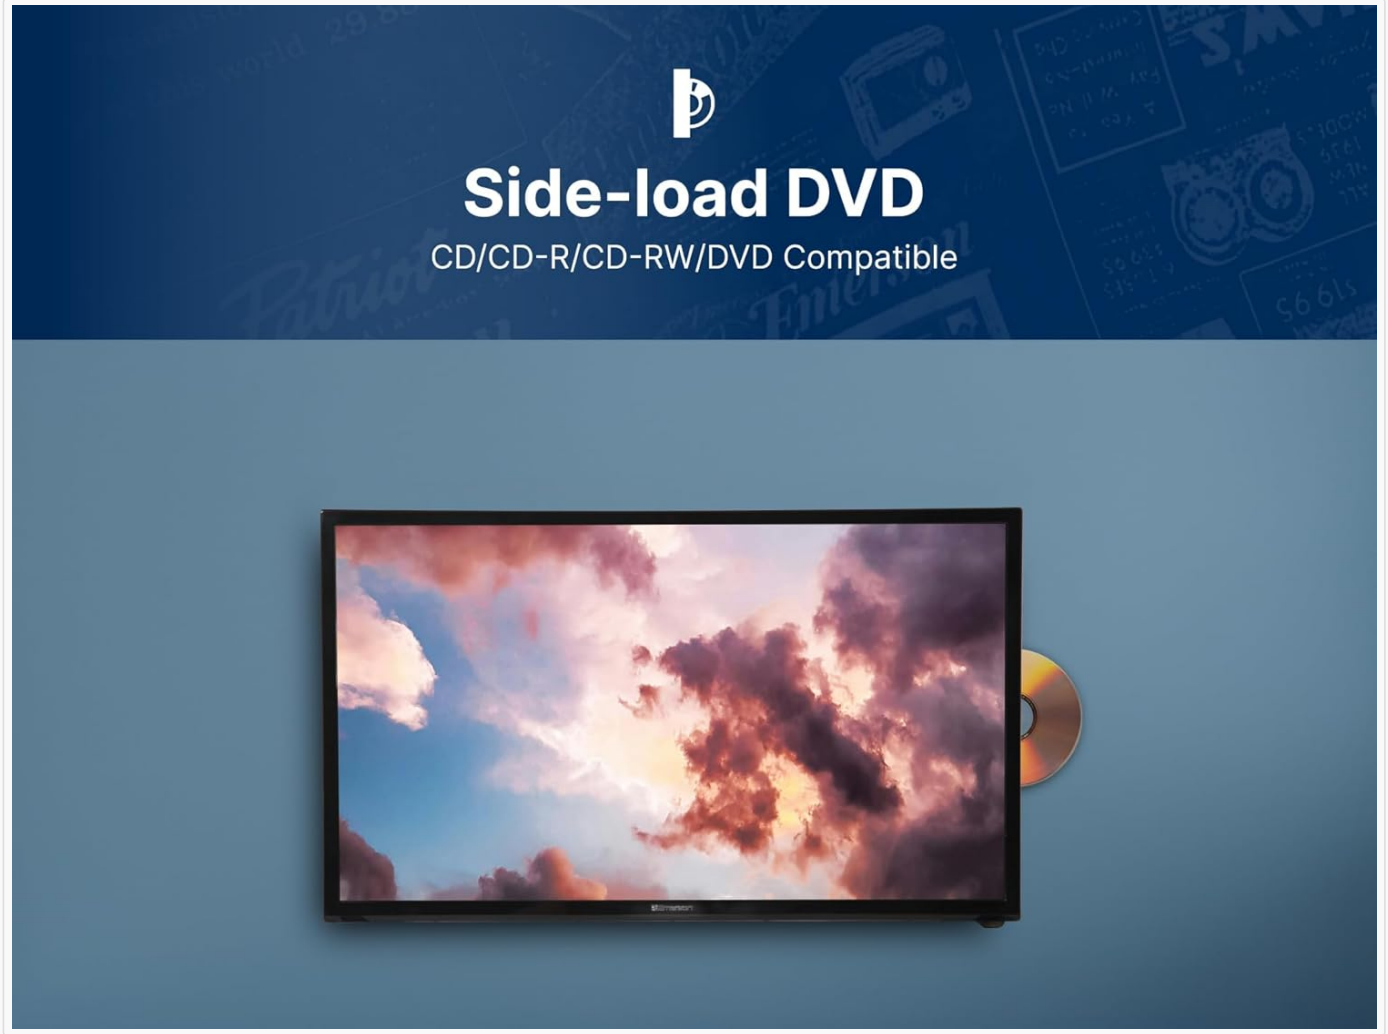


Image showing a family enjoying content on the Emerson ESTD-2400 Smart TV, illustrating its use in a living room setting.



Close-up image of a DVD being inserted into the side-load DVD player of the Emerson ESTD-2400 TV.

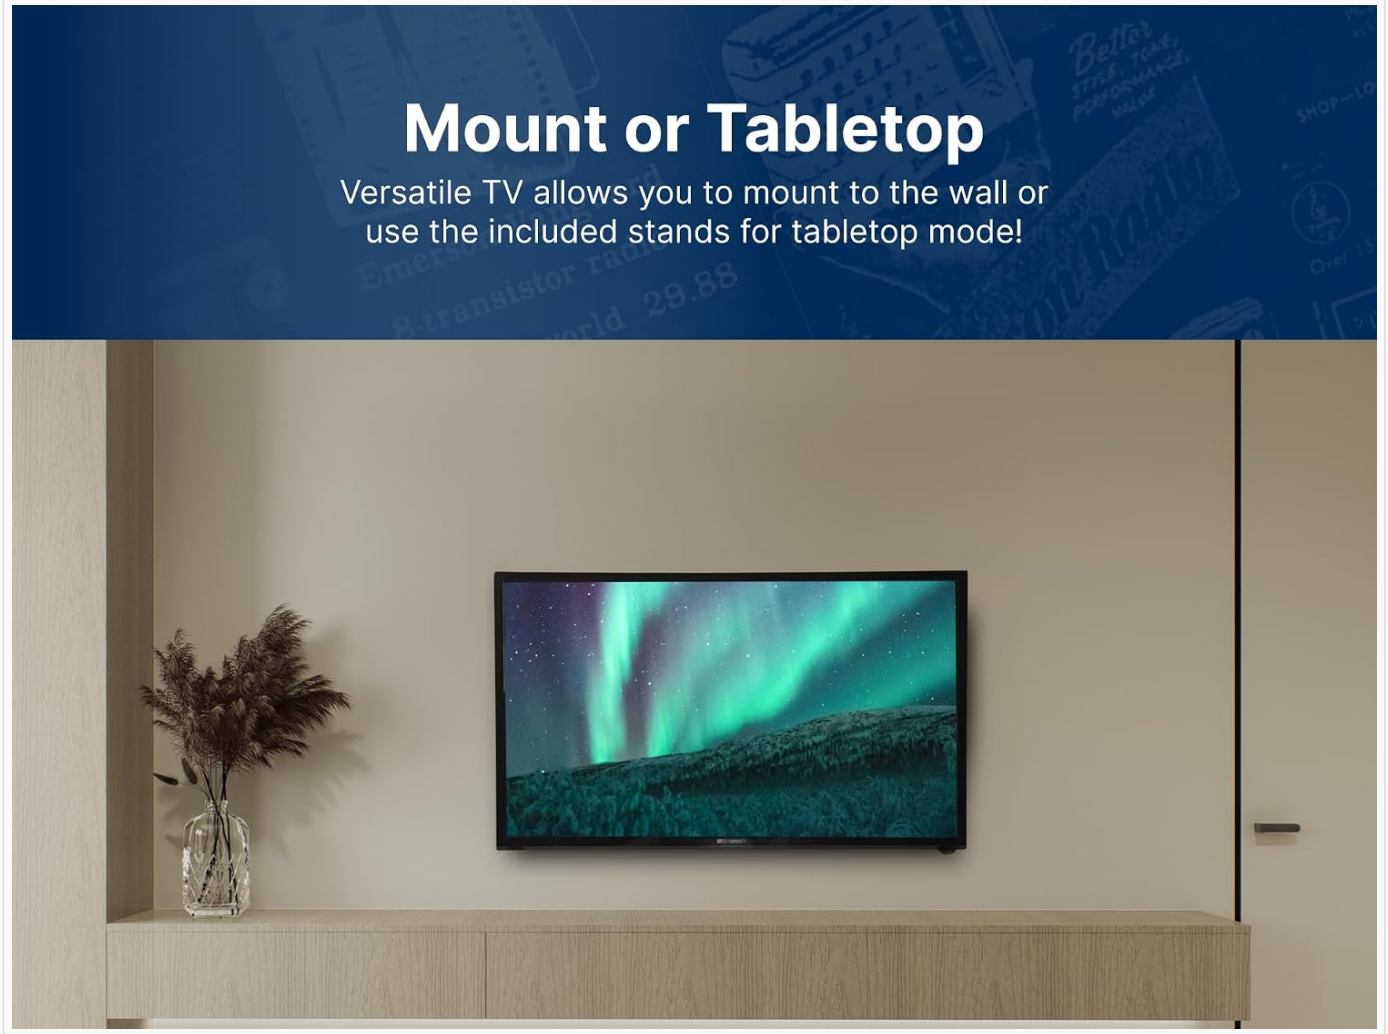

A user holding the full-function remote control for the Emerson ESTD-2400 TV, demonstrating its ease of use.



The Emerson ESTD-2400 TV mounted on a wall, showcasing its versatile installation options.



Diagram illustrating the dimensions (height, width, depth) and weight of the Emerson ESTD-2400 TV.

Key Features:

- **HD Smart TV with Built-in DVD Player:** Combines a 24" Class HD Smart TV with an integrated DVD player for seamless entertainment.
- **Vibrant 720p HD Resolution:** Delivers clear, crisp visuals with vibrant colors and sharp details.
- **Smart TV Features with Streaming Apps:** Access favorite streaming services directly with built-in Wi-Fi.
- **Integrated DVD Player:** Watch movies and TV shows without an additional device, ideal for space-saving.
- **Multiple Connectivity Options:** Versatile connectivity with HDMI, USB, and RCA inputs for various external devices.

Setup

1. Unpacking and Inspection

Carefully remove the TV and all accessories from the packaging. Verify that all items listed below are included and undamaged:

- Emerson ESTD-2400 TV
- Full-function remote control
- TV stand (2 pieces)
- AC power adapter
- Warranty Card

- User manual (this document)

2. Attaching the TV Stand (Tabletop Use)

If you plan to place the TV on a tabletop, attach the included stands:

1. Place the TV face down on a soft, clean surface to prevent screen damage.
2. Align each stand with the corresponding slots on the bottom of the TV.
3. Secure each stand using the provided screws. Do not overtighten.

3. Wall Mounting (Optional)

If you plan to wall mount the TV, ensure you use a VESA-compatible wall mount kit (not included) appropriate for the TV's size and weight. Follow the instructions provided with your wall mount kit. Remove the tabletop stands if they were attached.

4. Connecting Devices

Connect your external devices to the TV using the appropriate ports:

- **HDMI:** For high-definition devices like cable boxes, gaming consoles, or Blu-ray players. The TV has multiple HDMI inputs.
- **USB:** For connecting USB flash drives to play media files.
- **RCA (Composite):** For older devices like VCRs or legacy gaming systems.
- **RF (Antenna/Cable):** For connecting an antenna for over-the-air broadcasts or a coaxial cable for cable TV.

5. Power Connection

Connect the AC power adapter to the TV's power input, then plug the adapter into a standard wall outlet.

6. Initial Power On

Press the Power button on the remote control or on the TV itself to turn on the TV. Follow the on-screen prompts for initial setup, including language selection, network connection (for Smart TV features), and channel scanning.

Operating Instructions

1. Basic TV Functions

- **Power On/Off:** Press the **POWER** button on the remote.
- **Volume Control:** Use the **VOL +/-** buttons to adjust volume.
- **Channel Selection:** Use the **CH +/-** buttons or number pad to change channels.
- **Input Source:** Press the **INPUT** or **SOURCE** button to select between HDMI, USB, RCA, TV, or DVD inputs.
- **Menu Navigation:** Use the **MENU** button and arrow keys (**UP**/**DOWN**/**LEFT**/**RIGHT**) to navigate on-screen menus. Press **OK**/**ENTER** to confirm selections.

2. Smart TV Features

The Emerson ESTD-2400 features built-in Wi-Fi and a Smart TV platform for accessing online content.

1. **Connect to Wi-Fi:** From the main menu, navigate to Network Settings. Select your Wi-Fi network and enter the

password.

2. **Access Streaming Apps:** Once connected, you can access pre-installed streaming applications like Netflix, Hulu, and others directly from the Smart TV home screen.
3. **App Management:** Explore the app store (if available) to download additional applications or manage existing ones.

3. DVD Player Operation

The integrated DVD player is located on the side of the TV.

1. **Insert Disc:** Gently insert a DVD or CD into the disc slot with the label side facing up. The TV will automatically detect the disc.
2. **Select DVD Input:** If the TV does not automatically switch, press the**INPUT** or **SOURCE** button on the remote and select the DVD input.
3. **Playback Controls:** Use the dedicated DVD control buttons on the remote (Play, Pause, Stop, Fast Forward, Rewind, Skip) to manage playback.
4. **Eject Disc:** Press the **EJECT** button on the remote or on the TV to remove the disc.

4. Using the Remote Control

The included full-function remote control provides access to all TV and DVD features. Ensure the included AAA batteries are correctly inserted. Point the remote directly at the TV's remote sensor.

Maintenance

1. Cleaning the TV Screen

To clean the screen, first unplug the TV from the power outlet. Use a soft, lint-free cloth, slightly dampened with water or a specialized screen cleaner. Do not spray cleaner directly onto the screen. Wipe gently to avoid scratching.

2. Cleaning the TV Exterior

For the TV's frame and back panel, use a soft, dry cloth. If necessary, a slightly damp cloth can be used, but ensure no moisture enters the ventilation openings.

3. DVD Player Care

- Keep the disc slot free of dust and debris.
- Handle discs by their edges to avoid fingerprints and scratches.
- Do not use scratched or damaged discs, as they may harm the player.

4. Software Updates

Periodically check for software updates through the TV's settings menu (usually under System or About). Keeping the software updated ensures optimal performance and access to the latest features.

Troubleshooting

If you encounter issues with your Emerson ESTD-2400 TV, refer to the following common problems and solutions:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
No Power	Power cord unplugged; outlet not working; remote batteries dead.	Check power cord connection; test outlet with another device; replace remote batteries.
No Picture, but Sound is Present	Incorrect input source selected; loose video cable connection.	Press SOURCE/INPUT button to cycle through inputs; check HDMI/RCA cable connections.
No Sound, but Picture is Present	Volume muted or too low; incorrect audio output settings; external audio system issue.	Unmute volume or increase level; check TV audio settings (e.g., ensure internal speakers are selected if not using external audio); if using a soundbar, check its power and input.
Remote Control Not Working	Batteries are dead or inserted incorrectly; obstruction between remote and TV sensor.	Replace batteries; ensure correct polarity; remove obstructions; try operating TV with manual buttons.
DVD Not Playing	Disc inserted incorrectly; disc is dirty or scratched; incorrect input source.	Re-insert disc with label side up; clean disc with a soft cloth; select DVD input source.
Poor Sound Quality	Audio settings misconfigured; inherent speaker limitations.	Adjust audio settings (e.g., equalizer, sound mode) in the TV menu. For enhanced audio, consider connecting an external soundbar or speaker system via HDMI ARC or optical audio output.

Specifications

The following table outlines the technical specifications for the Emerson ESTD-2400 TV:

Feature	Specification
Brand	Emerson
Model Number	ESTD-2400
Screen Size	24 Inches (61 cm diagonal)
Display Technology	LED
Resolution	720p
Refresh Rate	60 Hz
Aspect Ratio	16:9
Special Features	Built-in DVD Player, Built-In Speaker, Flat Panel
Connectivity Technology	RF, USB, HDMI
Product Dimensions (D x W x H)	6.7 x 21.6 x 14.1 inches
Item Weight	6.03 pounds
Color	Black

Feature	Specification
Batteries Required	3 AAA batteries (included for remote)

Warranty and Support

Warranty Information

Your Emerson ESTD-2400 TV comes with a limited warranty. Please refer to the Warranty Card included in your product packaging for detailed terms and conditions, including warranty period and coverage. Keep your purchase receipt as proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty service, please contact Emerson customer support. Contact information can typically be found on the Warranty Card, the official Emerson website, or the product packaging.
When contacting support, please have your product model number (ESTD-2400) and serial number ready. The serial number is usually located on a sticker on the back of the TV.

© 2024 Emerson. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question