Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Coinmit 9953

Coinmit Battery Operated Wall Sconces with Remote Control (Model 9953) - User Manual

Comprehensive instructions for your Coinmit 5W 5000mAh Dimmable Wireless Wall Sconces.

Introduction

Thank you for choosing the Coinmit Battery Operated Wall Sconces. This manual provides essential information for the safe and efficient use of your new lighting fixtures. Please read it thoroughly before installation and operation, and retain it for future reference.

Important Safety Instructions

- Read all instructions carefully before use.
- Do not expose the product to water or excessive moisture. This product is designed for indoor use only.
- Do not attempt to disassemble or modify the product. This may void the warranty and pose safety risks.
- Use only the provided USB-C charging cable and a 5V 1A-2A adapter for charging to prevent damage to the battery.
- Keep the product away from heat sources and direct sunlight.
- Ensure the mounting surface is clean and dry before installation.
- Keep the remote control and small parts out of reach of children.

Package Contents

Verify that all components are present before proceeding with installation:

- Coinmit Wall Sconce (2 units)
- Remote Control (1 unit)
- USB-C Charging Cable (2 units)
- Mounting Hardware (screws, wall anchors)

Setup and Installation

These wall sconces are battery-operated and do not require electrical wiring, offering flexible placement options.

1. **Choose Location:** Select a desired indoor location on a wall. Ensure the surface is clean and dry.
2. **Install Base Plate:** Use the provided screws and wall anchors to securely fix the base plate to the wall.

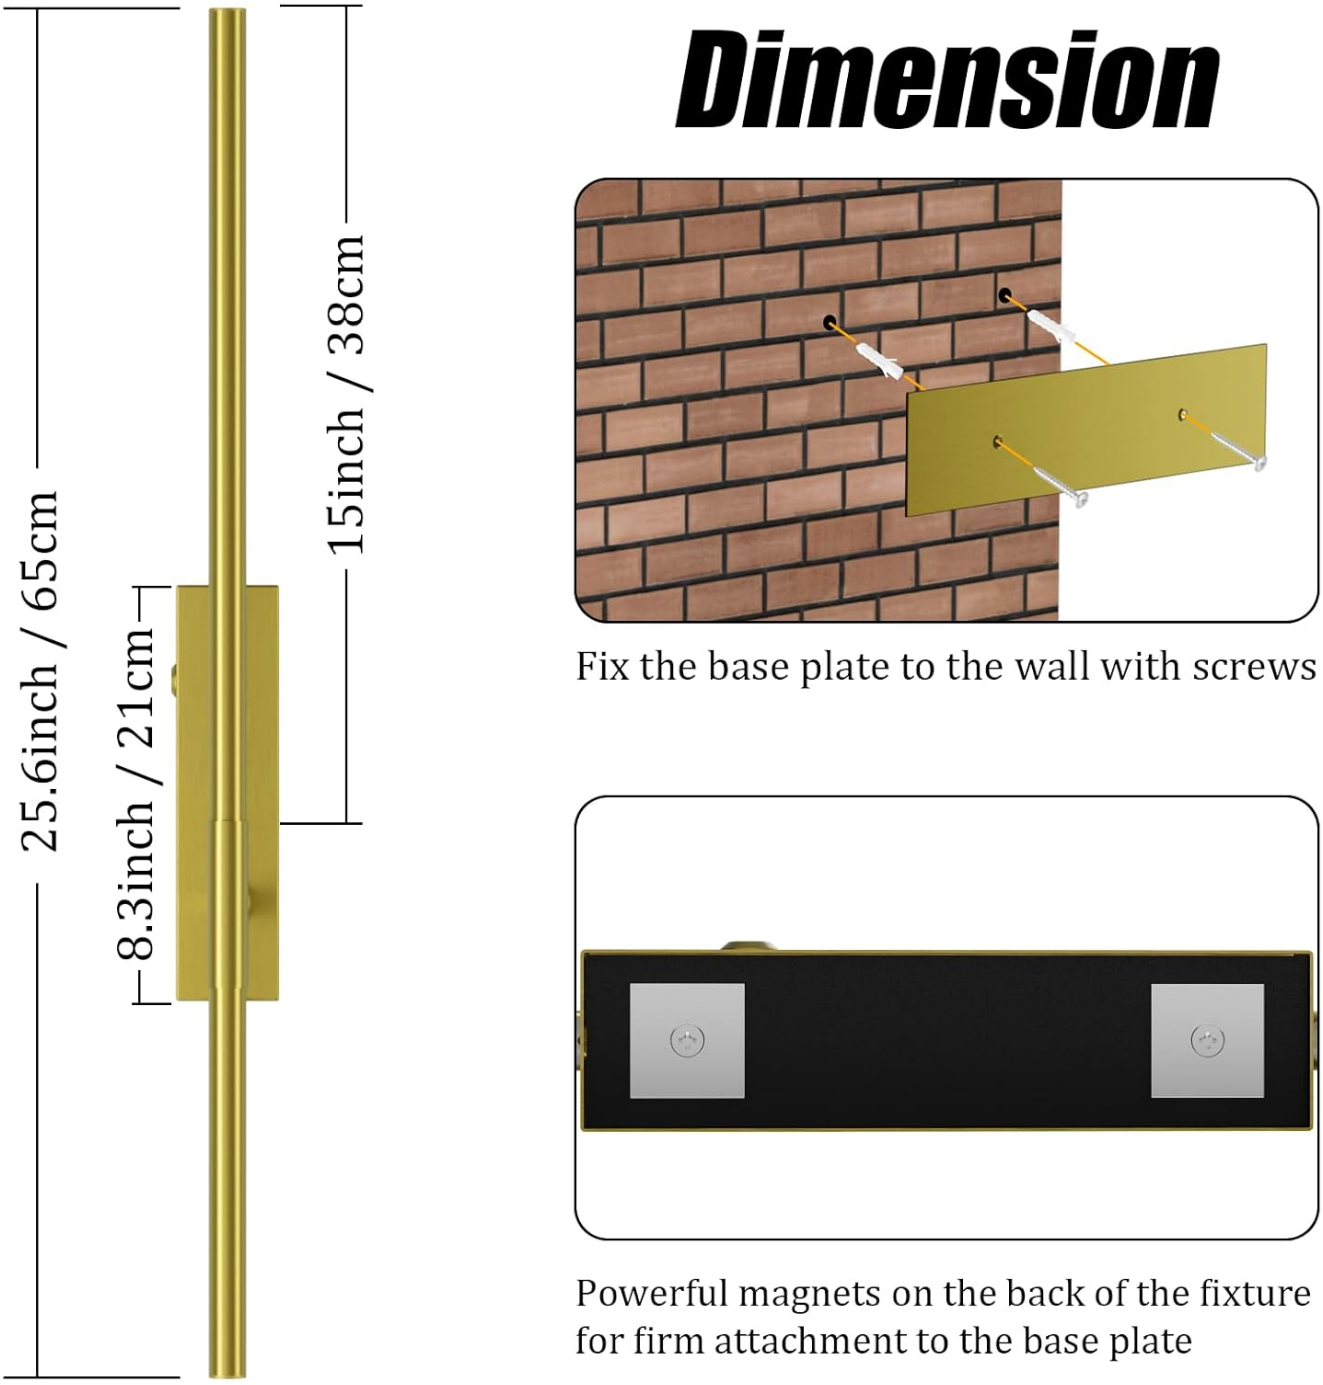


Image: Installation diagram showing the base plate being screwed into a brick wall, and the magnetic attachment of the light fixture.

3. **Attach Sconce:** The wall sconce features powerful magnets on its back. Align the sconce with the installed base plate and allow the magnets to firmly attach it. This magnetic attachment allows for easy removal for recharging.

Charging the Battery

The wall sconce has a built-in 5000mAh rechargeable battery.

- When the battery is low, remove the sconce from its magnetic base.
- Connect the provided USB-C charging cable to the charging port on the sconce and to a 5V 1A-2A USB power adapter (not included).
- A full charge typically takes 4-5 hours.

- Once fully charged, the sconce can provide continuous light for 18-40 hours, depending on the brightness level used.



Image: Visual representation of the 5000mAh battery capacity, charging time, and usage duration.

Operation

Remote Control Functions

The included remote control provides convenient access to all lighting features.

- **ON/OFF:** Press the "ON" or "OFF" button to turn the light on or off.
- **Color Temperature Adjustment:** Cycle through 3000K (warm white), 4000K (neutral white), and 6000K (cool white) settings.
- **Dimming:** Adjust brightness from 10% to 100%. Specific buttons for 10%, 30%, 50%, 70%, and 100% are available, along with '+' and '-' buttons for stepless dimming.

- **Timer Function:** Set the light to automatically turn off after 0.5H, 1H, 2H, 4H, 6H, or 8H.



Image: Overview of remote and button control features, including dimming and color temperature options.



Image: Demonstration of the 3 color temperature options available by clicking the sconce's button.



Power: 5W	Battery: 5000mAh
Charging time: 4-5h	Using time: 10h

Image: Visual guide to the dimming function, showing how brightness changes from 10% to 100% with a long press.



Image: Illustration of the timed lights off feature, useful for setting the sconce to turn off automatically.

Manual Button Control

- **Switch Color Temperature:** Directly click the switch button on the sconce to cycle through 3000K, 4000K, and 6000K color temperatures.
- **Dimming:** Long-press the switch button to adjust the brightness from 10% to 100%.
- **Turn Off:** Double-click the switch button to turn off the light.

360° Rotatable Light

The light bar of the sconce can be rotated 360 degrees, allowing you to direct the light as needed for optimal illumination or ambiance.



Image: Diagram illustrating the 360-degree rotatable feature of the light bar.

Product Demonstration Video

Your browser does not support the video tag.

Video: A demonstration of the Coinmit Battery Operated Wall Sconces, showcasing their features and operation, including the magnetic attachment and light control.

Care and Maintenance

- **Cleaning:** Wipe the sconce with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Recharge when the light dims significantly. If storing for an extended period, charge the battery to about 50% every 3-6 months.
- **Storage:** Store the sconce in a cool, dry place when not in use for long periods.



Image: Detailed view of the sconce's gold finish, highlighting the quality of materials for proper care.

Troubleshooting

Problem	Possible Cause	Solution
Light does not turn on.	Battery is discharged. Remote control battery is dead. Sconce not properly attached to base.	Charge the sconce battery. Replace remote control battery. Re-attach the sconce firmly to the magnetic base.
Light dims unexpectedly or does not reach full brightness.	Low battery level.	Recharge the sconce battery.
Remote control is not working.	Remote battery is dead. Obstruction between remote and sconce. Remote not paired (if applicable, though not specified for this model).	Replace the remote control battery. Ensure a clear line of sight. (If pairing is required, refer to specific pairing instructions not provided in current data).
Light flickers.	Low battery. Faulty unit.	Recharge the sconce battery. Contact customer support if flickering persists after charging.

Specifications

Feature	Detail
Brand	Coinmit
Model Number	9953
Power	5W

Feature	Detail
Battery Capacity	5000mAh
Charging Time	4-5 hours
Usage Time (Max Brightness)	18-40 hours
Color Temperature	3000K / 4000K / 6000K (Adjustable)
Dimming Range	10% - 100%
Brightness	450 lumens (Max)
Control Method	Remote Control, Manual Button
Product Dimensions	25.2"L x 25.2"W x 25.2"H (Note: This seems to be a generic cube dimension, actual length is 25.2 inches / 65cm based on image PT06)
Material	Metal
Indoor/Outdoor Usage	Indoor Only
Included Components	Charging Cable, Remote Control

Note: Product dimensions are approximate. Refer to the installation diagram for detailed measurements.



Image: The sconce providing stable, flicker-free LED lighting in a contemporary interior.

Warranty and Customer Support

Coinmit is committed to providing high-quality products. If you encounter any issues or have questions regarding your wall sconces, please do not hesitate to contact our customer support team.

- **Contact:** For assistance, please reach out to Coinmit customer service.
- **Response Time:** We aim to respond to all inquiries within 24 hours to assist with refunds, replacements, or technical support.
- **Online Support:** Visit the official Coinmit store on Amazon for more information and support:Coinmit Amazon Store.

© 2023 Coinmit. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CQR3GXT9

More documents and user manuals: **https://manuals.plus/**