TECURS WK007

TECURS WK007 Wireless Gaming Keyboard User Manual

Model: WK007

1. Introduction

This manual provides detailed instructions for the setup, operation, and maintenance of your TECURS WK007 Wireless Gaming Keyboard. Please read this manual thoroughly before using the product to ensure optimal performance and longevity. The TECURS WK007 is a full-size wireless keyboard designed for both gaming and productivity, featuring a silent membrane design, adjustable backlighting, and multimedia controls.

2. Package Contents

Verify that all items are present in the package:

- TECURS WK007 Wireless Gaming Keyboard
- 2.4G USB Receiver
- USB Charging Cable
- User Manual (this document)



Image: The TECURS WK007 Wireless Gaming Keyboard, USB charging cable, 2.4G USB receiver, and user manual are shown as included components.

3. Product Overview

The TECURS WK007 is a full-sized wireless keyboard with an Italian layout, designed for comfort and efficiency. It features advanced 2.4 GHz wireless technology for a stable connection up to 10 meters (33 feet) and a silent membrane key structure for reduced typing noise. The keyboard includes adjustable rainbow backlighting and dedicated multimedia keys for enhanced control.



Image: The TECURS WK007 Wireless Gaming Keyboard with its retail packaging, showcasing the rainbow backlighting and the included USB receiver.



Image: An overview of the WK007 Wireless Keyboard highlighting its 2.4G wireless connectivity, adjustable backlighting, Windows/Mac compatibility, and 3-key anti-ghosting feature.

4. Setup Instructions

4.1 Charging the Keyboard

Before first use, fully charge the keyboard. Connect the supplied USB charging cable to the keyboard's charging port and the other end to a USB power source (e.g., computer USB port, USB wall adapter). The charging indicator light will illuminate during charging and turn off when fully charged. A full charge provides approximately 10 hours of use with backlighting on, or up to 15 days with backlighting off.

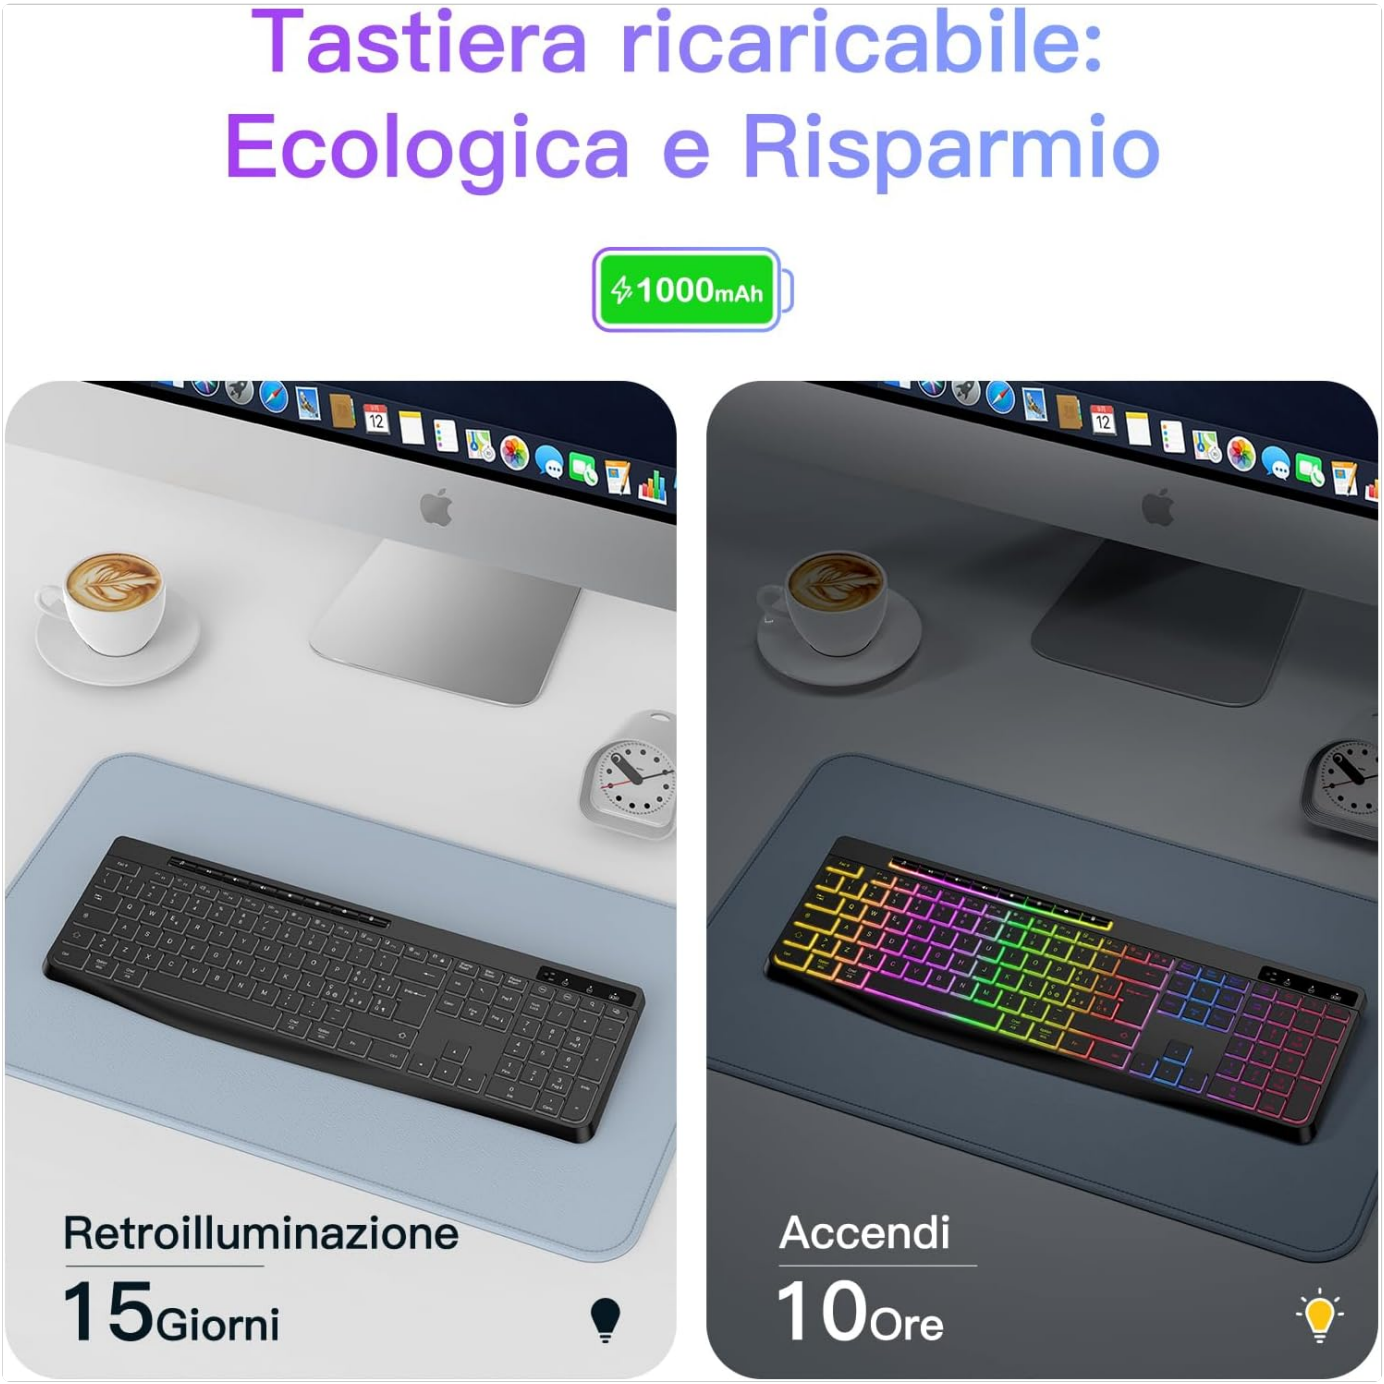


Image: Illustration showing the keyboard's rechargeable battery, indicating 15 days of use with backlight off and 10 hours with backlight on, powered by a 1000mAh battery.

4.2 Connecting the Keyboard

1. Locate the 2.4G USB receiver. It is typically stored in a compartment on the keyboard or included in the packaging.
2. Plug the USB receiver into an available USB port on your computer (PC, Mac, laptop).
3. Turn on the keyboard using the ON/OFF switch located on the top right side of the keyboard.
4. The keyboard should automatically connect to your device. No additional drivers are usually required.



Image: The TECURS WK007 Wireless Keyboard on a desk, with the 2.4G USB receiver prominently displayed, illustrating its wireless connectivity and reception range of 8-10 meters.

5. Operating Instructions

5.1 Operating System Compatibility Switch

The keyboard features a switch to optimize key functions for Windows or Mac operating systems. Locate the switch near the ON/OFF button and slide it to the appropriate position for your system.



Image: A close-up of the keyboard's top right section, showing the ON/OFF switch and the Windows (WIN) and Mac (MAC) operating system indicator lights.

5.2 Backlight Control

The keyboard features adjustable rainbow backlighting.

- To adjust backlight brightness: Press **Fn + End** repeatedly to cycle through brightness levels (off, low, medium, high).
- To activate/deactivate always-on backlight mode: Press and hold **Fn + Esc** for several seconds. This mode prevents the backlight from turning off automatically after a period of inactivity.



Image: Diagram illustrating the key combinations for backlight control: Fn + End to adjust brightness and Fn + Esc to toggle the always-on backlight feature.

5.3 Multimedia Keys

The keyboard is equipped with dedicated multimedia keys located above the function row (F1-F12) for quick access to media controls and other functions.

- **Media Player:** Open default media player.
- **Previous Track:** Skip to the previous song/video.
- **Play/Pause:** Play or pause media playback.
- **Next Track:** Skip to the next song/video.
- **Volume Down:** Decrease audio volume.

- **Volume Up:** Increase audio volume.
- **Mute:** Mute or unmute audio.
- **Web Browser:** Open default web browser.
- **Email:** Open default email client.
- **My Computer:** Open file explorer.
- **Calculator:** Open calculator application.



Image: A close-up view of the dedicated multimedia control keys located above the function keys on the TECURS WK007 keyboard.

6. Maintenance

6.1 Cleaning the Keyboard

To clean your keyboard, power it off and disconnect it from any power source. Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution. Avoid harsh chemicals or abrasive materials. Do not immerse the keyboard in liquid.

6.2 Battery Care

The keyboard uses a built-in rechargeable Lithium-ion battery. To prolong battery life:

- Avoid fully discharging the battery frequently.
- Charge the keyboard regularly, even if not in constant use.
- Store the keyboard in a cool, dry place if not used for extended periods.

7. Troubleshooting

- **Keyboard not responding:**
  Ensure the keyboard is turned ON. Check if the USB receiver is securely plugged into the computer. Try plugging the receiver into a different USB port. Ensure the keyboard battery is charged.
- **Backlight not working or staying on:**
  Press **Fn + End** to adjust brightness levels. If the backlight remains constantly on and drains the battery quickly, you may have activated the always-on mode. Press and hold **Fn + Esc** for several seconds to toggle this feature off.
- **Keys are noisy or unresponsive:**
  Ensure the keyboard is clean and free of debris. If keys become excessively noisy or unresponsive after prolonged use, this may indicate wear.
- **Connection issues / Lag:**

Ensure the keyboard is within the 10-meter operating range of the USB receiver. Avoid placing the receiver near strong interference sources (e.g., Wi-Fi routers, other wireless devices).

8. Specifications

Feature	Specification
Brand	TECURS
Model Name	WK007
Model Number	IT Layout-Schwarz
Connectivity Technology	2.4 GHz Wireless (USB Receiver)
Keyboard Description	Membrane
Operating System Compatibility	Windows 10, Mac OS 9 and above
Compatible Devices	Computer, PC, Mac, Laptop, Console
Special Feature	Backlit (Monochromatic Rainbow)
Power Source	Battery Powered (Rechargeable Lithium-ion)
Battery Capacity	1000 mAh (estimated from usage claims)
Product Dimensions	40 x 17 x 2.5 cm
Item Weight	700 g
Material	Plastic
Layout	Italian

9. Warranty and Support

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official TECURS website. Keep your proof of purchase for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question