Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

MIUZZY M241-US-BK02

MIUZZY Cordless Vacuum Cleaner User Manual

Model: M241-US-BK02

For a cleaner home, effortlessly.

1. Product Overview

The MIUZZY Cordless Vacuum Cleaner is designed for efficient and versatile cleaning across various surfaces. It features powerful suction, a long-lasting battery, and multiple attachments to meet diverse cleaning needs.



Figure 1: MIUZZY Cordless Vacuum Cleaner and included accessories.

Key features include a 260W brushless motor providing 30Kpa suction, a 7*2200mAh battery for up to 50 minutes runtime, a V-shaped anti-tangle brush, and a 5-stage high-efficiency filtration system.

2. Setup and Assembly

2.1 Unboxing

Carefully open the product packaging and remove all components. Ensure all parts listed in the user manual are present before proceeding with assembly.

Your browser does not support the video tag.

Video 1: Official MIUZZY M241 Unboxing and Assembly Guide.

2.2 Assembly

Assemble the main body, extension tube, and floor brush by aligning the connectors and pressing firmly until they click into place. The battery slides into the main unit until it locks securely.



Figure 2: Assembly of the main vacuum body, extension tube, and floor brush.

2.3 Charging

Before first use, fully charge the battery. Connect the power adapter to the charging port on the battery. A full charge takes approximately 4-5 hours. The LED screen will indicate battery status.



Figure 3: Battery specifications and charging port location.

3. Operating Instructions

3.1 Power On/Off and Suction Modes

Press the power button on the handle to turn the vacuum on or off. Use the mode selection button on the LED screen to cycle through the three available suction modes: low, medium, and max. The LED screen displays the current battery percentage and selected mode.



Figure 4: Vacuum in operation, highlighting its powerful suction capabilities.

3.2 Floor Types and LED Headlight

The vacuum is suitable for various floor types including carpet, hard floor, tile floor, and hardwood. The V-shaped rolling

brush is designed to reduce hair entanglement and is effective on both hard floors and carpets. The integrated LED headlight illuminates dust and debris in dark areas, ensuring a thorough clean.

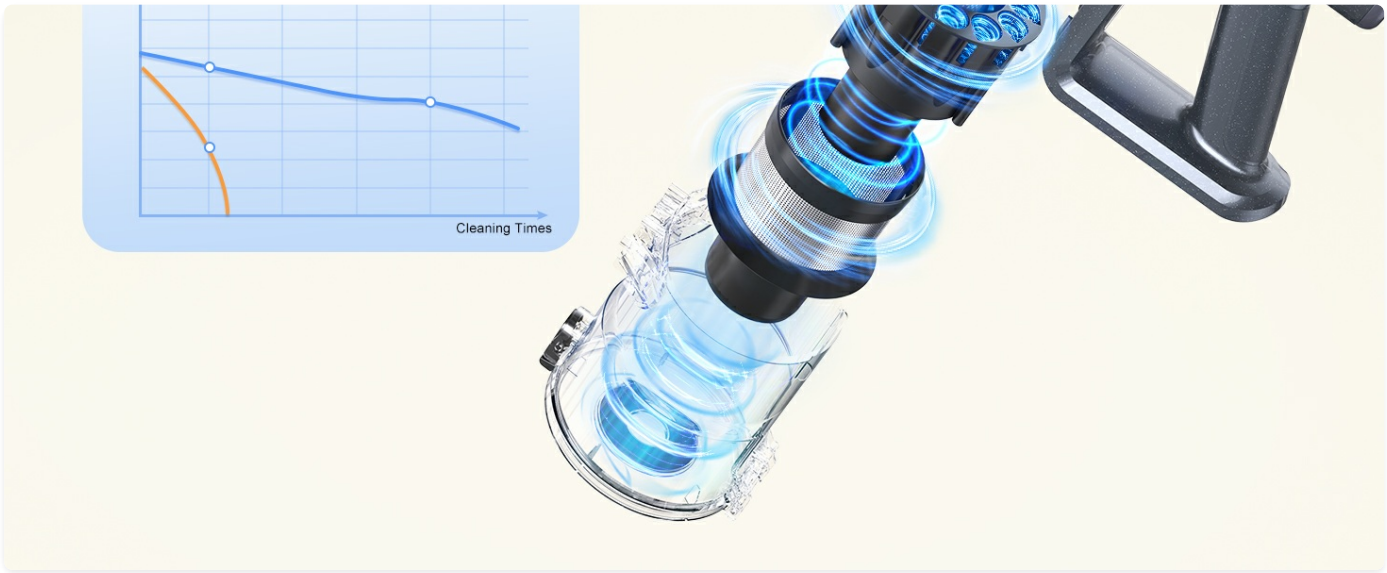


Figure 5: The flexible brush head with LED lights for enhanced visibility under furniture.

3.3 Using Attachments

The vacuum comes with a 2-in-1 long suction nozzle and a triangle brush for specialized cleaning tasks. To change attachments, press the release button on the main unit or extension tube, remove the current attachment, and click the desired one into place.



Figure 6: Demonstrating the versatility of the vacuum for cleaning various surfaces and tight spaces.

4. Maintenance

4.1 Dustbin Emptying

To empty the dustbin, hold the main unit over a trash can and press the release button on the dustbin. The bottom flap will open, allowing debris to fall out. Close the flap securely after emptying.

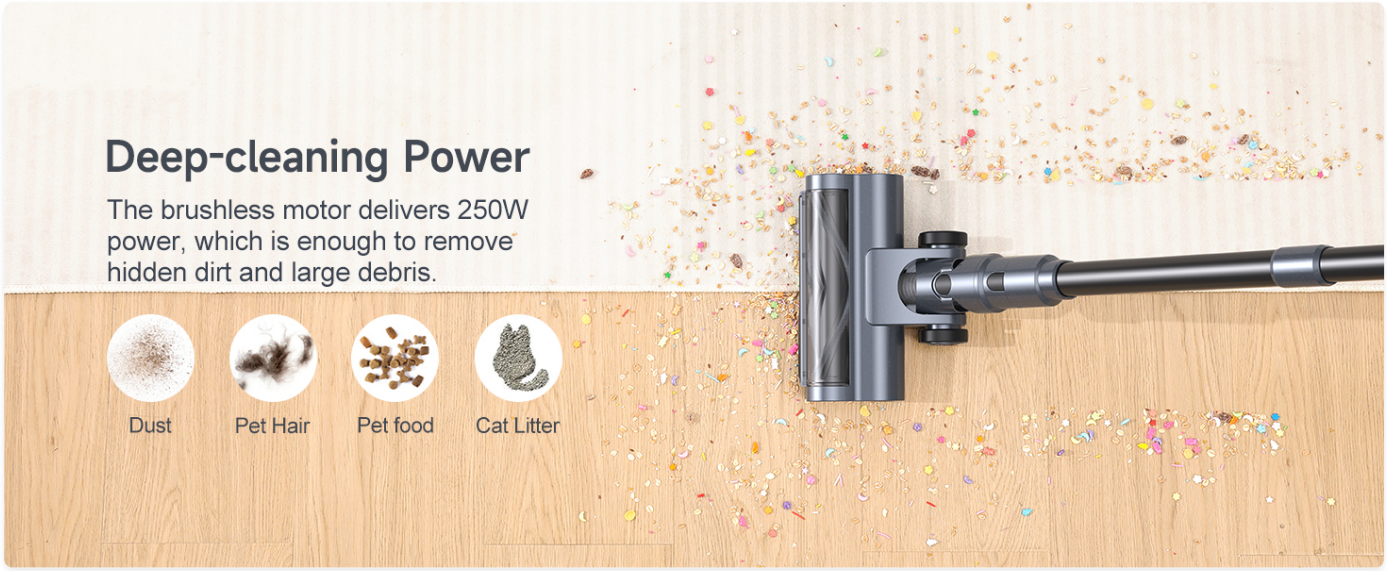


Figure 7: Easy one-click dustbin emptying process.

4.2 Filter Cleaning

The 5-stage filtration system includes a washable HEPA filter. Regularly remove and clean the filter to maintain optimal suction performance. Ensure the filter is completely dry before reinserting it into the vacuum.



Figure 8: Illustration of the advanced 5-stage filtration system.

4.3 Brush Roll Cleaning

The V-shaped anti-tangle brush roll can be removed for cleaning. Use the provided cleaning tool to cut and remove any tangled hair or fibers. Ensure the brush roll is free of obstructions for effective cleaning.



Figure 9: The V-shaped anti-tangle brush designed for reduced hair entanglement.

5. Troubleshooting

If the vacuum experiences reduced suction or performance, check the dustbin for fullness and empty if necessary. Inspect the filters and brush roll for clogs or tangled debris and clean them thoroughly. Ensure the battery is fully charged.

6. Specifications

Feature	Specification
Brand	MIUZZY
Model Name	Cordless Vacuum Cleaner (M241-US-BK02)
Motor Horsepower	260 Watts
Suction Power	30Kpa (Max)
Runtime	Up to 50 minutes (Min mode)
Charging Time	4-5 Hours
Battery Type	7*2200mAh Lithium-Ion
Dustbin Capacity	0.6 Liters
Filter Type	HEPA Filter (Washable)
Noise Level	66 dB
Item Weight	3 pounds
Product Dimensions	5"L x 5"W x 5"H

7. Warranty and Support

MIUZZY Vacuum provides a 2-year warranty for this product. For after-sales service or any concerns, please contact MIUZZY Online Support at +1(256)667-1252 from 7AM to 4PM (PST) on weekdays. 7*24 customer service is available.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CQTCY1HB

More documents and user manuals: **https://manuals.plus/**