Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

AMZCHEF CE-35G49-GXL-SK16

AMZCHEF Single Induction Cooktop 3500W User Manual

Model: CE-35G49-GXL-SK16


1. Important Safety Instructions

Please read all instructions carefully before using the AMZCHEF Single Induction Cooktop. Retain this manual for future reference.

- **Electrical Safety:** Ensure the power outlet matches the voltage (220V) and power (3500W) requirements of the appliance. Do not overload the circuit. A dedicated circuit is recommended.
- **Placement:** Place the cooktop on a stable, flat, and heat-resistant surface. Ensure adequate ventilation around the unit (at least 10 cm clearance on all sides). Do not place near flammable materials.
- **Cookware:** Use only induction-compatible cookware with a magnetic base. The base diameter should be between 12 cm and 30 cm.
- **Hot Surface:** The ceramic glass surface will become hot after cooking. Avoid touching the hot surface immediately after use. The cooktop will display a 'H' indicator for residual heat.
- **Children and Pets:** Keep the appliance out of reach of children and pets. Supervise children if they are near the appliance during operation.
- **Cleaning:** Always unplug the cooktop before cleaning. Allow it to cool completely. Do not immerse the unit in water or any other liquid.
- **Damage:** Do not operate the cooktop if it is damaged. Contact customer support for assistance.
- **Ventilation:** Do not block the ventilation openings on the cooktop.

2. Product Overview

The AMZCHEF Single Induction Cooktop is a portable and efficient cooking appliance designed for various culinary tasks. It features a durable ceramic glass surface and intuitive touch controls.

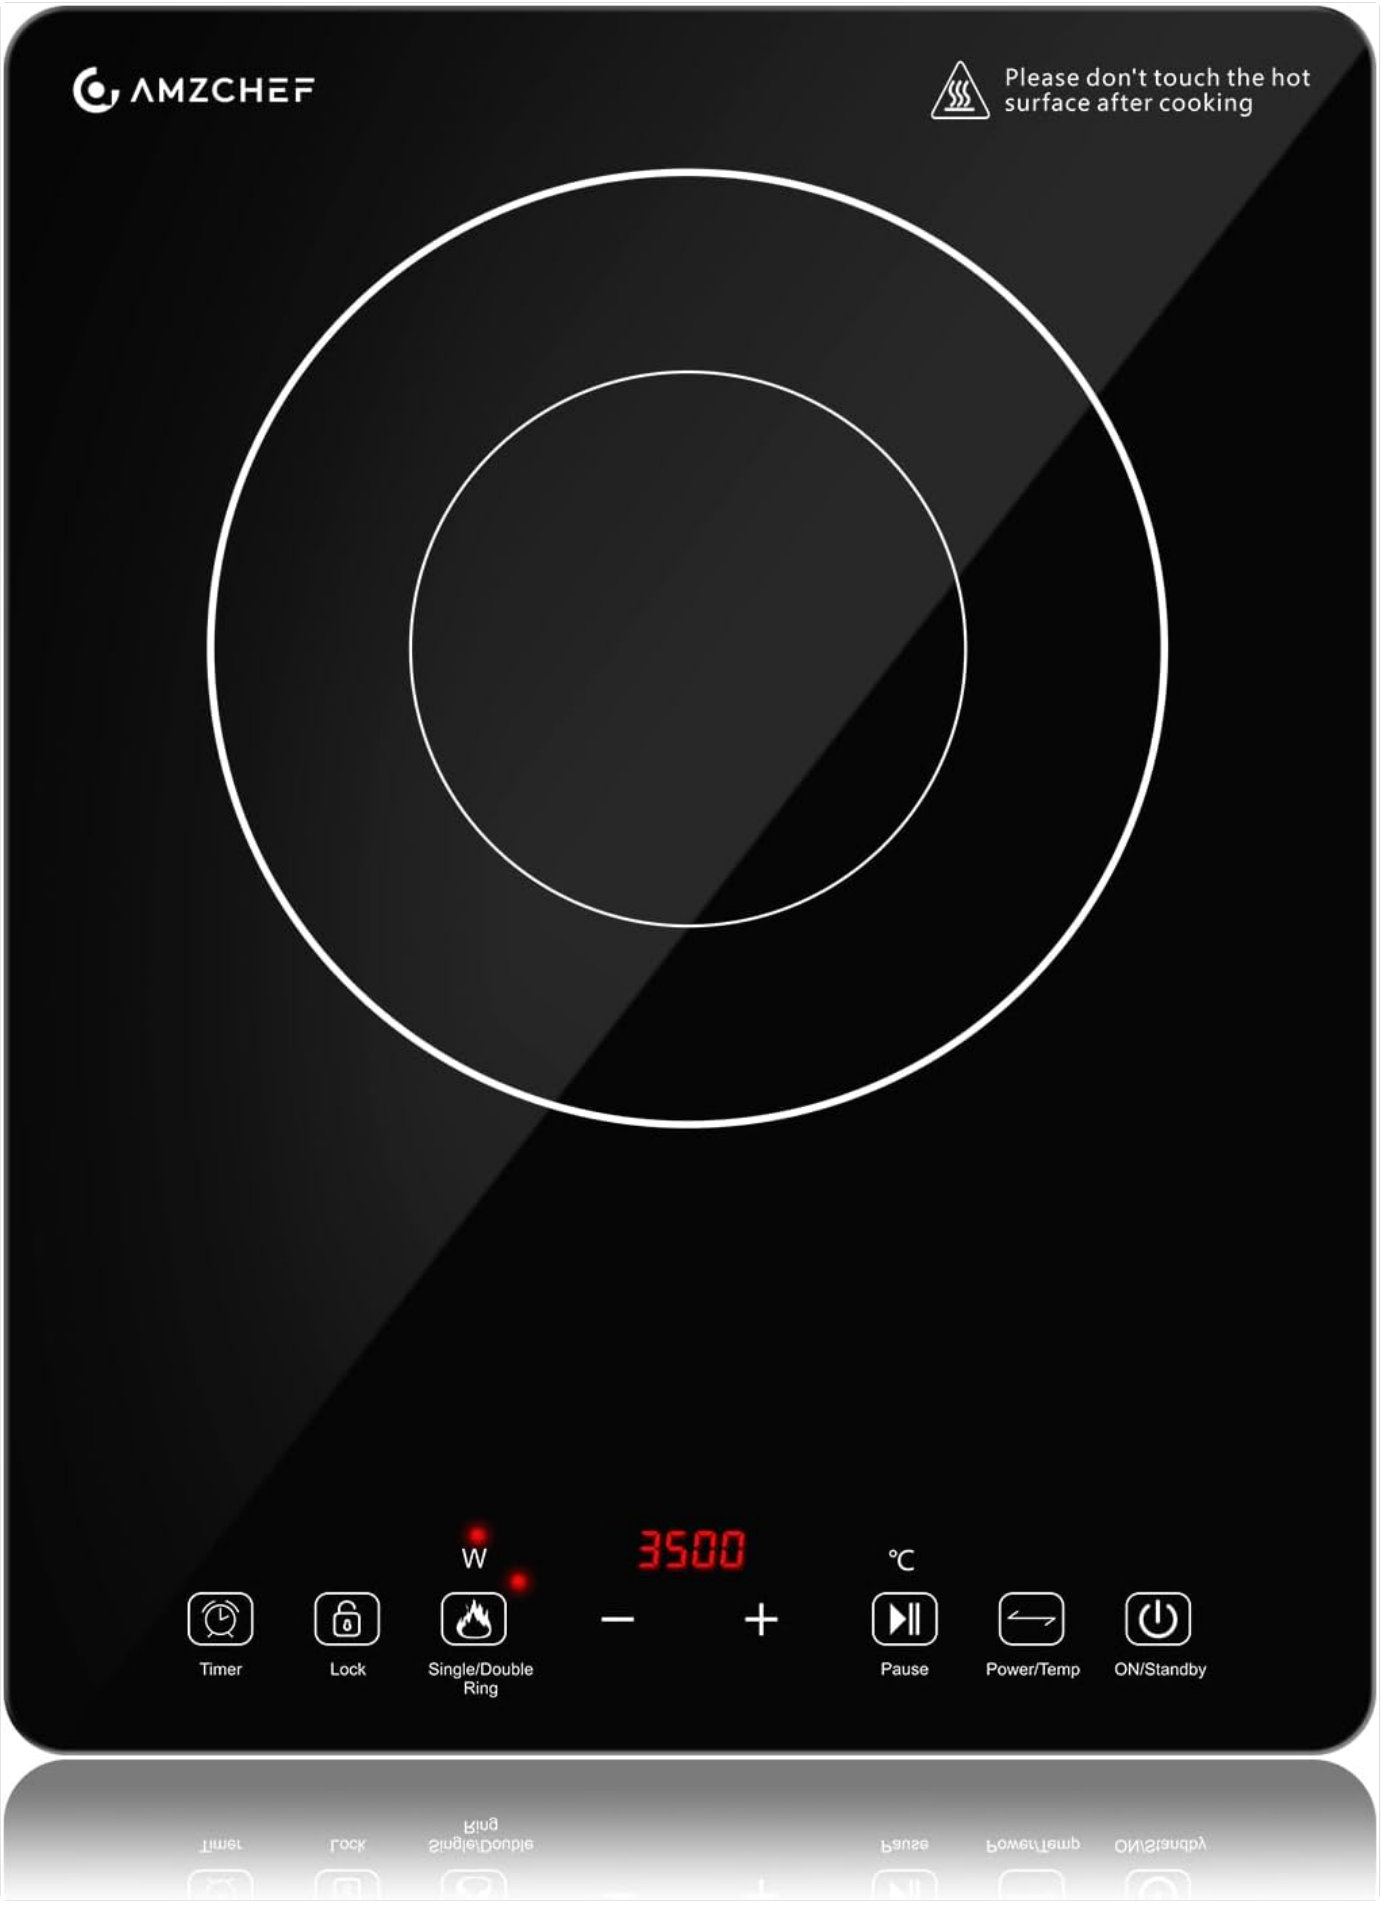

The image displays the AMZCHEF Single Induction Cooktop, featuring a black ceramic glass surface, a single induction cooking zone, and a touch control panel at the front. The control panel includes buttons for Timer, Lock, Power/Temperature, Pause, and On/Standby. A digital display shows the current power or temperature setting.

Control Panel Functions:

- **ON/Standby:** Powers the unit on or off.
- **Power/Temp:** Toggles between power (Wattage) and temperature (°C) settings.
- **+ / -:** Adjusts power or temperature levels.
- **Timer:** Activates and sets the cooking timer.
- **Lock:** Locks the control panel to prevent accidental changes.
- **Pause:** Temporarily pauses the cooking process.

3. Setup

1. **Unpacking:** Carefully remove the cooktop from its packaging. Retain packaging for storage or return if necessary.
2. **Placement:** Place the cooktop on a dry, stable, non-metallic, and heat-resistant surface. Ensure there is at least 10 cm of clear space around all sides for proper ventilation. Do not place on or near heat-sensitive surfaces.
3. **Power Connection:** Plug the power cord into a standard 220V electrical outlet. Ensure the outlet can support a 3500W appliance. It is advisable to use a dedicated circuit to avoid tripping breakers, especially if other high-power appliances are in use.
4. **Initial Cleaning:** Before first use, wipe the ceramic glass surface with a soft, damp cloth.

4. Operating Instructions

4.1 Powering On and Off

- To turn on, press the **ON/Standby** button. The display will illuminate.
- To turn off, press the **ON/Standby** button again. The display will turn off, and if the surface is still hot, an 'H' indicator will appear.

4.2 Selecting Cookware

Induction cooktops require specific types of cookware. Ensure your pots and pans are:

- Made of magnetic material (e.g., cast iron, magnetic stainless steel). A magnet should stick to the bottom.
- Flat-bottomed.
- Have a base diameter between 12 cm and 30 cm.

Place the cookware centrally on the cooking zone before turning on the unit or selecting settings.

4.3 Adjusting Power and Temperature

1. After powering on, the cooktop will typically default to a power setting.
2. Press the **Power/Temp** button to switch between power (Wattage) and temperature (°C) modes.
3. Use the **+** and **-** buttons to adjust the desired level. There are 9 power/temperature levels available for precise control.

4.4 Using the Timer

1. While cooking, press the **Timer** button. The timer indicator will light up.
2. Use the **+** and **-** buttons to set the desired cooking time.
3. The timer will count down, and the cooktop will automatically turn off when the time expires.

4.5 Lock Function

- To activate the lock function, press the **Lock** button. This prevents accidental changes to settings during cooking.

- To deactivate, press and hold the **Lock** button again for a few seconds.

4.6 Pause Function

- To temporarily pause cooking, press the **Pause** button. The cooktop will stop heating, and the display will show 'PA'.
- To resume cooking with the previous settings, press the **Pause** button again.

5. Cleaning and Maintenance

Regular cleaning and proper maintenance will ensure the longevity and optimal performance of your induction cooktop.

- **Before Cleaning:** Always unplug the cooktop from the power outlet and allow it to cool completely before cleaning.
- **Ceramic Glass Surface:** Wipe the surface with a soft, damp cloth and a mild detergent. For stubborn stains, use a ceramic cooktop cleaner. Avoid abrasive sponges, scouring pads, or harsh chemical cleaners, as these can scratch or damage the surface.
- **Control Panel:** Wipe the control panel with a soft, damp cloth. Ensure no liquid enters the control area.
- **Exterior:** Clean the exterior housing with a soft, damp cloth.
- **Ventilation Openings:** Keep the ventilation openings clear of dust and debris to prevent overheating. Use a soft brush or vacuum cleaner to gently remove any blockages.
- **Storage:** When not in use for extended periods, store the cooktop in a dry, safe place, away from direct sunlight and moisture.

6. Troubleshooting

If you encounter issues with your AMZCHEF Induction Cooktop, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cooktop does not turn on.	No power supply; Power cord not plugged in; Circuit breaker tripped.	Check power outlet and cord connection. Reset circuit breaker if necessary.
Cooktop turns off during operation.	Overheating protection activated; Timer expired; Cookware removed.	Allow unit to cool down. Check timer settings. Ensure cookware is on the zone.
Cookware not detected (Error code E0).	Non-induction compatible cookware; Cookware too small/large; No cookware present.	Use induction-compatible cookware. Ensure cookware diameter is within 12-30 cm. Place cookware centrally.
Display shows other error codes (e.g., E1, E2).	Internal malfunction; Sensor error.	Unplug the unit for 5 minutes, then plug it back in. If the error persists, contact customer support.
Fan continues to run after turning off.	Normal operation to cool internal components.	This is normal. The fan will stop automatically once the unit has cooled sufficiently.

If the problem persists after attempting these solutions, please contact AMZCHEF customer support.

7. Specifications

Technical details for the AMZCHEF Single Induction Cooktop.

Feature	Specification
Brand	AMZCHEF
Model Number	CE-35G49-GXL-SK16
Cooktop Type	Single Induction
Power	3500 Watts
Voltage	220 Volts
Control Type	Touch
Material	Ceramic Glass
Product Dimensions (L x W x H)	41.5 x 32.5 x 7.5 cm
Weight	4.32 kg
Components Included	None
Batteries Required	No
ASIN	B0CQY6J368

8. Warranty and Support

AMZCHEF is committed to providing high-quality products and excellent customer service.

- **Warranty Period:** All AMZCHEF products come with a 2-year repair period from the date of purchase.
- **Technical Support:** We offer lifetime technical support for our products.
- **Premium Service:** Enjoy 24-hour premium service for any inquiries or assistance you may need.
- **Contact Us:** For warranty claims, technical support, or any other questions, please refer to the contact information provided on the AMZCHEF official website or your purchase platform.

© 2025 AMZCHEF. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How long is the electrical cable for the AMZCHEF CE-35G49-GXL-SK16 Single Induction Cooktop?

The provided manual and technical specifications for the AMZCHEF CE-35G49-GXL-SK16 Single Induction Cooktop do not explicitly state the exact length of the electrical power cable. Typically, portable induction cooktops of this type feature a...

Read full answer

Open the live page

https://manuals.plus/asin/B0CQY6J368

More documents and user manuals: **https://manuals.plus/**