ALLIMITY MM-32GH-5023C-NP

ALLIMITY Replacement Remote Control User Manual

For UHD LED TV Models OTV 40GF-5023C, OTV 32GH-5023C, OTV 43AU-5023C, OTV 50AU-5023C

1. Introduction

This manual provides instructions for the ALLIMITY Replacement Remote Control, model MM-32GH-5023C-NP. This remote is designed to be a direct replacement for the original remote controls of specific UHD LED TV models, offering full functionality without the need for complex programming or setup. Its ergonomic and lightweight design ensures comfortable use and stable performance.

Compatible TV Models:

- OTV 40GF-5023C
- OTV 32GH-5023C
- OTV 43AU-5023C
- OTV 50AU-5023C

2. Setup and Battery Installation

The ALLIMITY replacement remote control requires no programming or pairing. Simply insert the batteries, and it will be ready for use with your compatible TV model.

2.1. Installing Batteries

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.





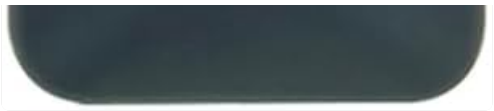


Figure 1: Back view of the remote control, illustrating the battery compartment location.

Note: Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.

3. Operating Instructions

Once batteries are installed, the remote control is ready to operate your compatible UHD LED TV. Point the remote control directly at the TV's infrared receiver.





Figure 2: Front view of the ALLIMITY remote control, displaying all buttons and their layout.

3.1. Button Functions Overview

The remote control features standard buttons for TV operation, including power, channel selection, volume control, navigation, and quick access buttons for popular streaming services.

- **Power Button ( ):** Turns the TV on or off.
- **Source/Input Button ( ):** Selects the input source (HDMI, AV, etc.).
- **Number Buttons (0-9):** Directly select channels.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.
- **Back Button (↰):** Returns to the previous menu or screen.
- **Home Button (⌂):** Accesses the TV's home screen or smart TV interface.
- **Volume Up/Down (+/-):** Adjusts the volume level.
- **Mute Button ( ):** Mutes or unmutes the TV sound.
- **Channel Up/Down (P^/P⌄):** Changes channels sequentially.
- **Netflix, YouTube, Prime Video Buttons:** Direct access to these streaming applications.
- **USB Button:** Accesses media from a connected USB device.
- **Info Button:** Displays program information.
- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies depending on the TV menu or application.
- **Microphone Button:** Activates voice control features if supported by your TV model.
- **Settings Button (⚙):** Opens the TV's settings menu.

For specific functions of advanced buttons, refer to your TV's original user manual.

4. Maintenance

Proper maintenance ensures the longevity and optimal performance of your remote control.

4.1. Cleaning

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's surface or internal components.
- Ensure no liquid enters the remote control.

4.2. Battery Care

- Remove batteries if the remote control will not be used for an extended period to prevent leakage.
- Dispose of used batteries according to local regulations.
- Do not expose batteries to excessive heat or direct sunlight.

5. Troubleshooting

If you experience issues with your remote control, try the following troubleshooting steps:

Problem	Possible Cause	Solution
Remote control is not working.	◦ Dead or incorrectly inserted batteries. ◦ Obstruction between remote and TV. ◦ Remote control is out of range. ◦ TV's IR receiver is blocked or faulty.	◦ Replace batteries with new ones, ensuring correct polarity. ◦ Remove any objects blocking the line of sight between the remote and the TV. ◦ Move closer to the TV (within 10 meters). ◦ Check your TV's manual for IR receiver location and ensure it's clear.
Buttons are unresponsive or sticky.	◦ Dirt or debris under buttons. ◦ Worn-out internal contacts.	◦ Clean the remote control as described in the Maintenance section. ◦ If cleaning does not resolve the issue, the remote may need replacement.
Specific functions (e.g., voice control) are not working.	◦ TV model does not support the feature. ◦ Feature needs to be enabled in TV settings.	◦ Consult your TV's original user manual to confirm feature compatibility and activation steps.

6. Specifications

Brand	ALLIMITY
Model Number	MM-32GH-5023C-NP
Color	Black
Connectivity Technology	Infrared
Special Feature	No programming required

Compatible Devices	OTV 40GF-5023C, 32GH-5023C, 43AU-5023C, 50AU-5023C
Number of Buttons	25
Maximum Range	10 Meters
Power Source	2 x AAA Batteries (not included)

7. Warranty and Support

Information regarding specific warranty terms and conditions for this product is not provided in the available product details. For any issues or inquiries, please refer to the retailer or your point of purchase for support.
Please note that information on spare parts availability and software updates is also not available.

© 2023 ALLIMITY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question