Uetmulik HC R2B 07

Uetmulik Power Recliner Lift Chair Remote Control

Model: HC R2B 07 User Manual

Introduction

This manual provides essential instructions for the proper installation, operation, and maintenance of your Uetmulik Power Recliner Lift Chair Remote Control, model HC R2B 07. Please read this manual thoroughly before use to ensure safe and efficient operation.

Safety Information

Always follow these safety guidelines to prevent injury or damage:

- Always follow the assembly instructions carefully.
- Keep the remote out of reach of children and pets.
- Do not attempt to operate the chair's functions while the user is not seated securely.
- Always test the chair's functions after assembly to ensure they work properly and safely.
- Ensure the power cord and remote cable are not pinched or damaged.
- Do not expose the remote to liquids or extreme temperatures.

Product Overview

The Uetmulik HC R2B 07 is a 4-button, 5-pin replacement hand control designed for Raffel Systems power recliner lift chairs. It features a backlight for improved visibility and a 9.8ft cable for flexible positioning.



Figure 1: Front view of the Uetmulik HC R2B 07 remote control, showing the four buttons, backlight, cable, and 5-pin connector.





Figure 2: Detailed view of the remote control buttons. The top two buttons control the 'BACK' function (recline/incline), and the bottom two buttons control the 'LIFT/FOOT' function (footrest extension/retraction and chair lift).




RAFFEL
SYSTEMS
Raffel Systems
Germantown, WI
www.raffel.com
Model: HC R2B 07
12/23 PO CN008750
PATENT PENDING
MADE IN CHINA
QC PASS
Line 3

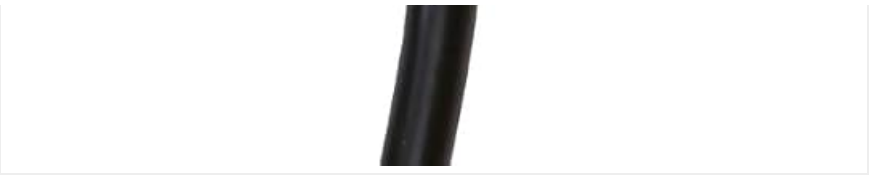


Figure 3: Rear view of the remote control, displaying the Raffel Systems manufacturer information and model number HC R2B 07.

Setup and Installation

Follow these steps to install your new remote control:

1. **Verify Compatibility:** Ensure your existing recliner system uses a 5-pin connector. This remote is specifically designed for 5-pin systems. If your current remote has a different pin configuration, this replacement will not be compatible.
2. **Disconnect Power:** Before beginning installation, unplug your power recliner from the wall outlet to prevent electrical hazards.
3. **Locate Existing Remote Cable:** Find where your old remote control cable connects to the chair's motor or control box.
4. **Disconnect Old Remote:** Carefully unplug the old remote control cable from the chair's system.
5. **Connect New Remote:** Take the new Uetmulik HC R2B 07 remote control's 5-pin connector and align it with the corresponding port on your chair's motor or control box. The connector has a 90-degree angle plug designed to fit straight into the motor connector. Push firmly until it is securely seated.
6. **Route Cable:** Route the 9.8ft controller cable to a convenient location, ensuring it is not tangled, pinched, or obstructing any moving parts of the chair.
7. **Restore Power:** Plug your power recliner back into the wall outlet.
8. **Test Functionality:** Test all functions of the remote control (Back, Lift/Foot) to ensure proper operation.

Operating Instructions

The Uetmulik HC R2B 07 remote control features four buttons to operate your power recliner lift chair:

- **BACK (Top Buttons):**
  - Press the **top-left button** to recline the chair back.
  - Press the **top-right button** to bring the chair back to an upright position.
- **LIFT/FOOT (Bottom Buttons):**
  - Press the **bottom-left button** to extend the footrest and/or lift the chair.
  - Press the **bottom-right button** to retract the footrest and/or lower the chair.

The remote control includes a backlight for easy visibility in low-light conditions.

Maintenance

To ensure the longevity and proper function of your remote control:

- **Cleaning:** Wipe the remote control surface with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners. The design allows for easy wiping and disinfection.
- **Cable Care:** Regularly inspect the cable for any signs of wear, cuts, or damage. Ensure the cable is not kinked or stretched excessively.

- **Storage:** When not in use, place the remote in a safe location where it will not be dropped or damaged.

Troubleshooting

If you encounter issues with your remote control, try the following steps:

- **Remote Not Responding:**
  - Ensure the chair is properly plugged into a working electrical outlet.
  - Check that the 5-pin connector of the remote control is securely plugged into the chair's motor or control box.
  - Inspect the remote control cable for any visible damage. If damaged, the remote may need replacement.
- **Backlight Not Working:**
  - If the remote functions but the backlight does not, this may indicate a minor electrical issue with the backlight component. The remote should still be functional.
- **Chair Functions Incorrectly:**
  - If the chair moves in an unexpected way, immediately release the button. Re-check the connection of the remote. If the issue persists, consult the chair's original manual or contact the chair manufacturer.

If these steps do not resolve the issue, please contact customer support.

Specifications

Model Name	HC R2B 07
Brand	Uetmulik
Manufacturer	Raffel Systems
Connector Type	5-Pin, 90-degree angle plug
Cable Length	9.8 feet (approximately 3 meters)
Number of Buttons	4 (Back Up, Back Down, Lift/Foot Up, Lift/Foot Down)
Special Features	Backlight
Material	Plastic
Item Weight	11.1 ounces (0.32 Kilograms)

Warranty and Support

For warranty information or technical support, please refer to the original purchase documentation or contact the seller directly. Keep your purchase receipt for warranty claims.
For further assistance, you may visit the Uetmulik store on Amazon:Uetmulik Store

© 2026 Uetmulik. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question