Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

SHLUCE FLA004

SHLUCE 19" Caged Ceiling Fan with Light User Manual

Model: FLA004 | Brand: SHLUCE

1. General Safety Information

Please read and understand this entire manual before attempting to assemble, operate, or install the product. Failure to do so could lead to electric shock, fire, or other injuries that could be fatal.

- Ensure the power is turned off at the circuit breaker before installation or maintenance.
- All electrical connections must be in accordance with local codes, ordinances, or national electrical codes. If you are unfamiliar with electrical wiring, consult a qualified electrician.
- The fan must be mounted with a minimum of 7 feet (2.1 meters) clearance from the trailing edge of the blades to the floor.
- Do not use the fan with a dimmer switch.
- Do not insert objects into the fan blades while the fan is operating.
- Ensure the mounting structure is strong enough to support the weight of the fan (approximately 4.99 kg).

2. Product Overview

The SHLUCE 19" Caged Ceiling Fan with Light is a modern fandelier designed for various room types including kitchens, bedrooms, and living rooms. It features a low-profile design with hidden ABS blades and a reversible motor for year-round comfort. The unit includes 6 E12 light bases (bulbs not included) and is controlled via a smart remote.



Figure 2.1: The SHLUCE 19" Caged Ceiling Fan with Light, showcasing its modern farmhouse design and integrated lighting.

Key Features:

- **Enclosed Design:** Hidden 8 ABS blades within a protective cage for safety.
- **Reversible DC Motor:** Provides cool air in summer (downdraft) and circulates warm air in winter (updraft).
- **Integrated Lighting:** Features 6 E12 light bases (bulbs not included) for ample illumination.
- **Smart Remote Control:** Offers 6 fan speeds, 1/2/4 hour timer settings, and independent control for fan and light.
- **Ultra-Quiet Operation:** Built-in pure copper DC motor ensures minimal noise for a comfortable environment.
- **Durable Construction:** Made with high-quality metal for longevity.
- **Adjustable Height:** Includes two hanging rods (3.9" and 7.9") to suit different ceiling heights.

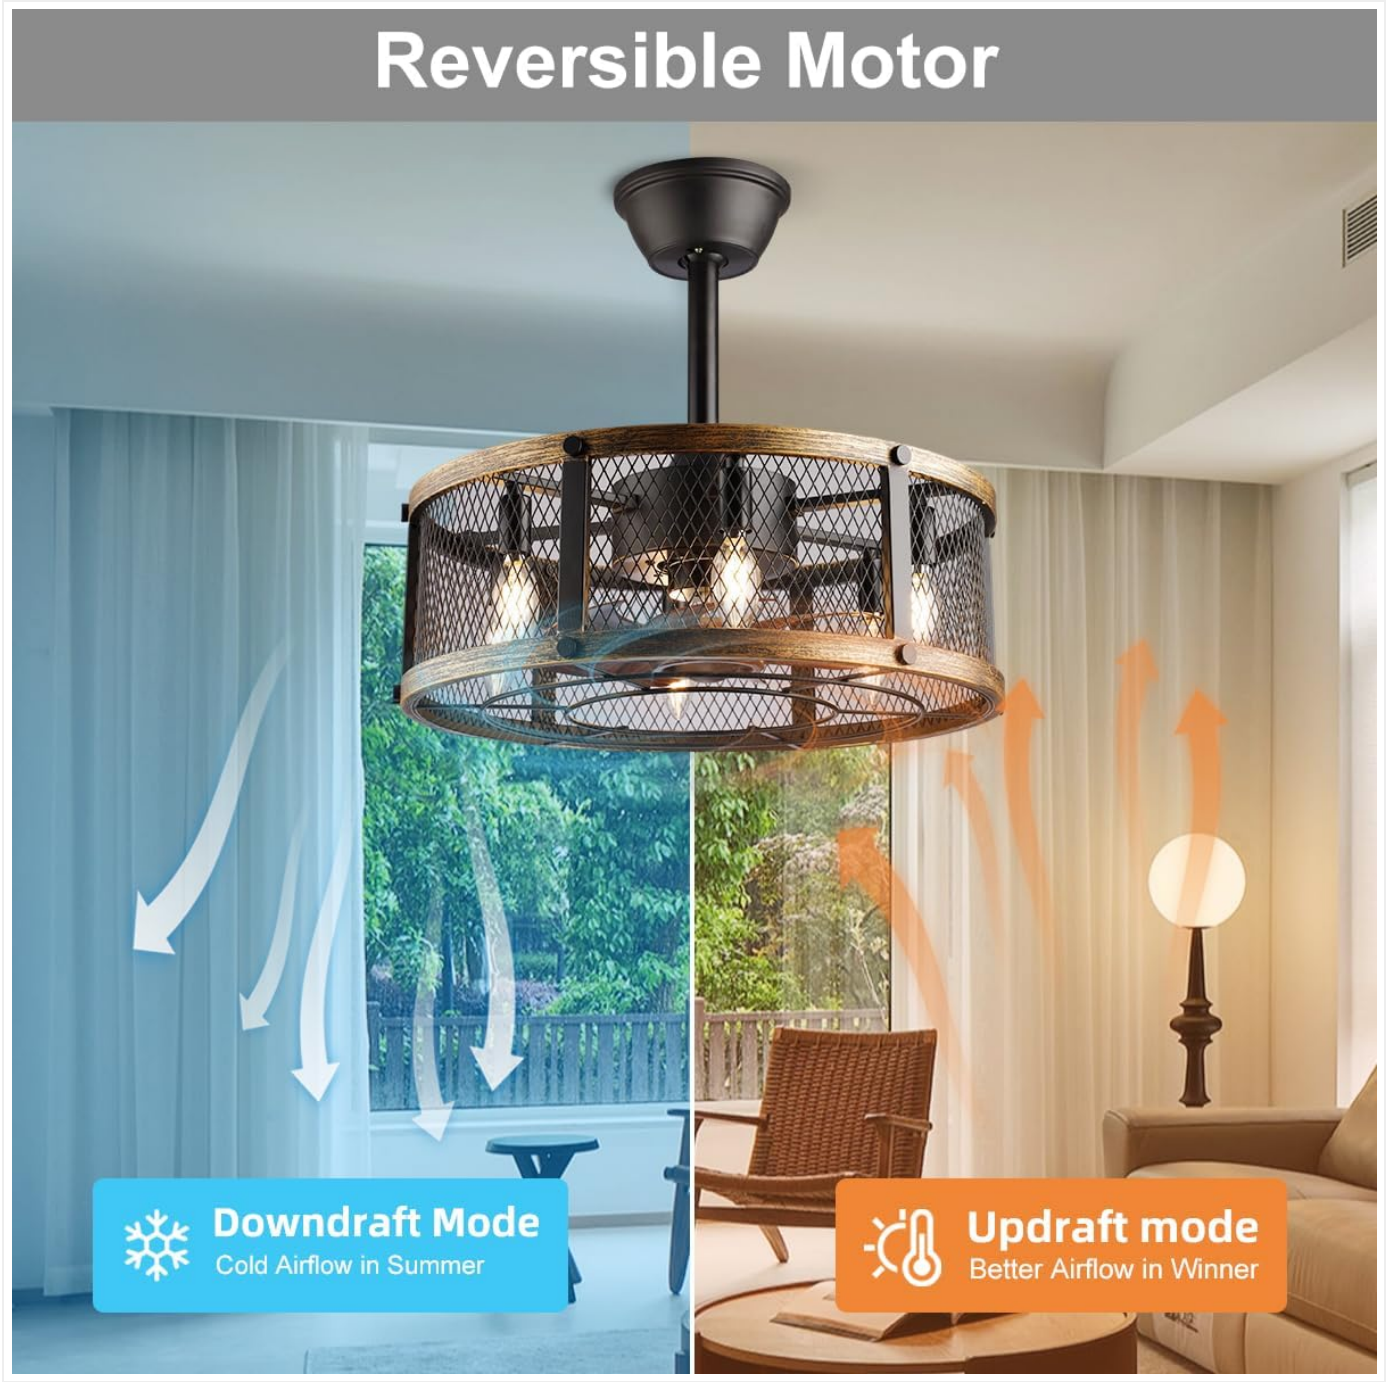


Figure 2.2: Illustration of the ultra-quiet motor technology and comparative noise levels, highlighting the low operational sound of the SHLUCE ceiling fan.

3. Package Contents

Before beginning installation, ensure all components listed below are present and undamaged. If any parts are missing or damaged, do not attempt to install and contact customer support.

- Ceiling Fan Light Fixture (Main Unit)
- Remote Control (2 AAA batteries NOT included)
- Hanging Rods (3.9" and 7.9")
- Mounting Hardware Kit (screws, wire nuts, etc.)
- Installation Instructions



Figure 3.1: Detailed views of key components: thickened metal frame, reversible ultra-silent motor, 8 hidden blades, and 6 E12 lamp holders.

4. Specifications

Attribute	Detail
Model Number	FLA004
Dimensions	48.26 x 48.26 x 40.89 cm (19 x 19 x 16.1 inches)
Weight	4.99 kg (11 lbs)
Material	Metal
Color	Black
Power Source	Corded Electric

Attribute	Detail
Installation Type	Flush Mount
Light Base	6 x E12 (Bulbs NOT Included)
Control Method	Remote Control
Fan Speeds	6 Speeds
Timer Settings	1H / 2H / 4H
Motor Type	DC Motor (Reversible)
Applicable Room Types	Farmhouse, Living Room, Kitchen, Bedroom, Dining Room, Entryway, Porch, Garages, Stairwells, Cafe, Office, Bar



Figure 4.1: Detailed product dimensions and an overview of the remote control functions and included downrods.

5. Installation

The SHLUCE ceiling fan is designed for easy installation, with most functional components pre-assembled. Follow these general steps. Refer to the included quick installation instructions for detailed diagrams and specific wiring information.

1. **Prepare for Installation:**
    - Turn off power at the main circuit breaker.
    - Clear the installation area and ensure you have all necessary tools (screwdriver, wire strippers, ladder, etc.).
2. **Mount the Mounting Bracket:**
    - Secure the mounting bracket to the ceiling electrical box. Ensure the electrical box is securely fastened to the building structure and can support the fan's weight.
3. **Assemble the Downrod:**
    - Choose the appropriate downrod (3.9" or 7.9") for your ceiling height.
    - Feed the electrical wires from the fan motor through the chosen downrod.
    - Attach the downrod to the fan motor assembly.
4. **Hang the Fan Assembly:**
    - Carefully lift the fan assembly and hang it onto the mounting bracket.
5. **Make Electrical Connections:**
    - Connect the fan's electrical wires to the household wiring according to the provided wiring diagram in the quick installation instructions. Use wire nuts to secure connections.
    - Ensure all connections are tight and properly insulated.
6. **Secure the Canopy:**
    - Slide the canopy up to the ceiling and secure it to the mounting bracket with the provided screws.
7. **Install Light Bulbs:**
    - Screw 6 E12 base light bulbs (not included) into the lamp holders.
8. **Restore Power:**
    - Turn the power back on at the circuit breaker.

For detailed wiring diagrams and specific assembly steps, please refer to the separate "Quick Installation Instructions" included in your package.

6. Operation

The SHLUCE ceiling fan is operated using the included remote control. Ensure 2 AAA batteries (not included) are installed in the remote control before use.



Figure 6.1: Layout of the remote control for the SHLUCE ceiling fan, showing buttons for fan speed, light control, timer, and reversal.

Remote Control Functions:

- **ON/OFF Button:** Turns the fan and light on or off.
- **Fan Speed Buttons (1-6):** Adjusts the fan speed from gentle (1) to strong (6).
- **Light ON/OFF Button:** Turns the light on or off independently of the fan.
- **Timer Buttons (1H/2H/4H):** Sets the fan to automatically turn off after 1, 2, or 4 hours.
- **Reverse Button (R):** Changes the direction of the fan blades (downdraft for summer, updraft for winter).

Fan Speed Control:

The fan offers 6 distinct speed settings to suit your comfort needs. Press the corresponding number on the remote (1-6) to select your desired speed.

- **Speeds 1-2:** Gentle Wind - Ideal for quiet environments or light air circulation.
- **Speeds 3-4:** Comfortable Wind - Provides a steady, pleasant breeze.
- **Speeds 5-6:** Strong Wind - For maximum airflow and cooling.



Figure 6.2: Visual representation of the 6 fan speeds, categorized into Gentle, Comfortable, and Strong Wind settings.

Reversible Motor Function:

The reversible motor allows you to change the direction of the fan's rotation to optimize air circulation for different seasons.

- **Downdraft Mode (Summer):** Press the "R" button to set the blades to rotate counter-clockwise, pushing cool air downwards to create a cooling effect.
- **Updraft Mode (Winter):** Press the "R" button again to set the blades to rotate clockwise, drawing air upwards to circulate warm air trapped near the ceiling.



Figure 6.3: Illustration of the reversible motor function, demonstrating downdraft mode for cooling in summer and updraft mode for circulating warm air in winter.

7. Maintenance

Regular maintenance will ensure the longevity and optimal performance of your SHLUCE ceiling fan. Always turn off the power at the circuit breaker before performing any maintenance.

- **Cleaning:**
  - Wipe the fan housing and blades with a soft, damp cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.
  - Ensure the fan is completely dry before restoring power.
- **Light Bulb Replacement:**
  - Allow bulbs to cool completely before attempting to replace them.
  - Unscrew the old E12 bulb and screw in a new one. Ensure the replacement bulb's wattage does not exceed the

maximum recommended wattage (refer to product specifications or the fixture label).

- **Tightening Screws:**
  - Periodically check all screws on the fan and mounting hardware to ensure they are tight. Loose connections can cause noise or malfunction.

8. Troubleshooting

If you experience issues with your SHLUCE ceiling fan, refer to the following common problems and their solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control batteries dead or incorrectly installed.	Check circuit breaker; Ensure all wire connections are secure; Replace remote control batteries (2 AAA).
Light does not work	Bulbs are loose or burnt out; Incorrect bulb type; Loose wire connection to light kit.	Tighten or replace bulbs; Ensure E12 base bulbs are used; Check light kit wiring.
Fan makes noise	Loose screws on fan housing or mounting bracket; Fan not properly balanced (unlikely with enclosed design); Obstruction in fan.	Tighten all screws; Ensure no objects are interfering with the fan blades.
Remote control not working	Dead batteries; Remote not paired (if applicable, though not specified for this model); Obstruction between remote and receiver.	Replace batteries (2 AAA); Ensure clear line of sight to fan's receiver.
Fan wobbles	Mounting bracket not securely fastened; Loose downrod connection.	Ensure mounting bracket is firmly attached to ceiling joist/electrical box; Tighten downrod screws.

9. Warranty and Support

SHLUCE provides a **2-year warranty** for this product, covering manufacturing defects from the date of purchase. Additionally, we offer a **30-day refund policy**.

If you encounter any problems with your chandelier ceiling fan with lights, or have questions regarding installation, operation, or maintenance, please do not hesitate to contact our customer service team. We are committed to providing satisfactory pre-sales and after-sales service and will respond to your inquiries within 24 hours.

For support, please refer to the contact information provided on your purchase receipt or the product packaging.

© 2024 SHLUCE. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CR46XTK7

More documents and user manuals: **https://manuals.plus/**