PureGear PureBoom Rugged Wireless Mini Speaker

PureGear PureBoom Rugged Wireless Mini Speaker User Manual

Model: PureBoom Rugged Wireless Mini Speaker

Introduction

Thank you for choosing the PureGear PureBoom Rugged Wireless Mini Speaker. This compact and powerful speaker is designed to deliver high-definition stereo sound wherever you go. With its durable, water-resistant design and versatile connectivity options, it's perfect for both indoor and outdoor use. This manual will guide you through the setup, operation, and maintenance of your new speaker.



The PureGear PureBoom Rugged Wireless Mini Speaker, showcasing its compact design and integrated carrying strap.

What's in the Box

- PureBoom Rugged Wireless Mini Speaker
- Charging Cable (USB-C)
- User Manual

Product Features

- **HD Stereo Sound:** Experience clear and powerful audio.
- **IPX4 Water Resistant:** Resistant to sweat, rain, and water splashes, ideal for outdoor use.
- **Built-in Microphone:** For hands-free calling.
- **Wide Compatibility:** Connects with a broad range of Bluetooth-enabled devices.

- **Micro SD Card Port:** Play music directly from a Micro SD card.
- **Long Battery Life:** Up to 6 hours of use time on a single charge.
- **Multi-point Connection:** Connect up to two Bluetooth devices simultaneously.
- **True Wireless Stereo (TWS):** Pair two PureBoom speakers for an immersive stereo experience.



Despite its mini size, the PureBoom speaker delivers robust sound, fitting comfortably in your hand.



The PureBoom speaker offers wide compatibility with various Bluetooth-enabled devices, including smartphones and tablets.

Setup

Charging the Speaker

Before first use, fully charge your PureBoom speaker. Connect the provided charging cable to the speaker's charging port and a USB power source. The charging indicator light will illuminate. A full charge takes approximately 2 hours.

Powering On/Off

- **To Power On:** Press and hold the Power button until you hear an audible prompt and the indicator light turns on.
- **To Power Off:** Press and hold the Power button until you hear an audible prompt and the indicator light turns off.

Bluetooth Pairing

1. Ensure the speaker is powered on and in pairing mode (the indicator light will flash).
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "PureBoom" from the list of found devices.
4. Once connected, you will hear a confirmation sound, and the indicator light will become solid.

The speaker has a Bluetooth range of up to 32 feet (approximately 10 meters).

Operating Instructions

Music Playback

- **Play/Pause:** Press the Play/Pause button once.
- **Next Track:** Short press the '+' button.
- **Previous Track:** Short press the '-' button.

Volume Control

- **Increase Volume:** Long press the '+' button.
- **Decrease Volume:** Long press the '-' button.

Hands-free Calling

When connected to a smartphone, you can use the speaker for calls:

- **Answer Call:** Press the Play/Pause button once.
- **End Call:** Press the Play/Pause button once during a call.
- **Reject Call:** Press and hold the Play/Pause button.


Micro SD Card Playback

Insert a Micro SD card with your music files into the designated slot. The speaker will automatically switch to Micro SD card mode and begin playing music. Use the same playback controls as for Bluetooth audio.

Connecting Two Speakers (TWS Function)

To create a true wireless stereo experience, you can pair two PureBoom speakers together:

1. Ensure both PureBoom speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker (this will be the primary speaker), double-press the Power button. You will hear a prompt indicating it's searching for another speaker.
3. The two speakers will automatically connect to each other. You will hear a confirmation sound once connected.
4. Now, connect your device to the primary speaker via Bluetooth as described in the "Bluetooth Pairing" section. Both speakers will play audio in stereo.

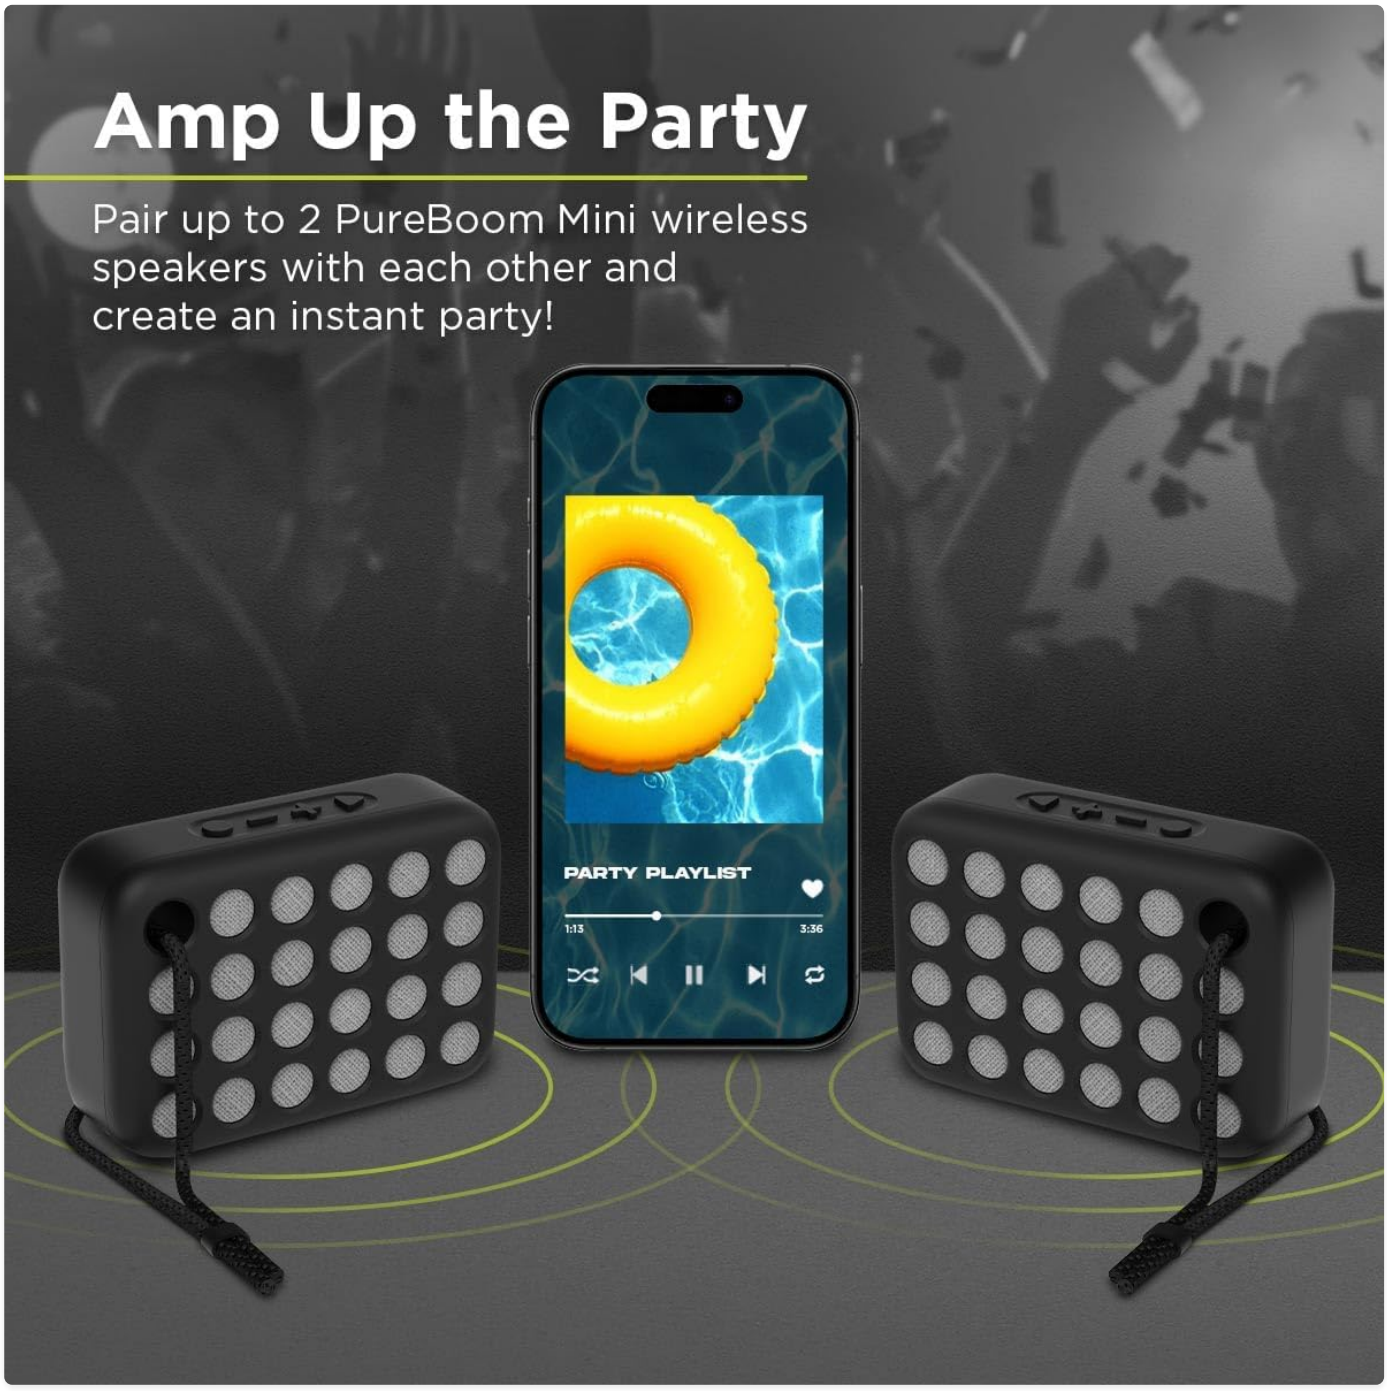

Pair two PureBoom speakers to amplify your audio and create an immersive stereo sound experience.

Maintenance

To ensure the longevity and optimal performance of your PureBoom speaker, follow these maintenance guidelines:

- **Cleaning:** Wipe the speaker with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Water Resistance:** While IPX4 water resistant, do not submerge the speaker in water. Ensure the charging port cover is securely closed when near water.
- **Storage:** Store the speaker in a cool, dry place away from extreme temperatures and direct sunlight.
- **Battery Care:** For best battery life, avoid fully discharging the speaker frequently. Charge it regularly, even if not in use for extended periods.

Troubleshooting

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
Cannot pair with Bluetooth device.	Speaker not in pairing mode; Device Bluetooth off; Too far from speaker.	Ensure speaker is in pairing mode (flashing light). Turn device Bluetooth off/on. Move device closer to speaker (within 32 ft).
No sound from speaker.	Volume too low; Speaker not connected; Incorrect audio source.	Increase speaker and device volume. Re-pair the speaker. Ensure correct audio output is selected on your device.
Sound distortion.	Volume too high; Device too far; Interference.	Lower volume. Move device closer. Avoid strong electromagnetic interference.
Cannot connect two speakers (TWS).	Speakers already paired to a device; Incorrect pairing procedure.	Ensure both speakers are disconnected from other devices. Follow TWS pairing instructions carefully.

Specifications

Model Name	PureBoom Rugged Wireless Mini Speaker
Speaker Type	Outdoor
Special Feature	IPX4 Water Resistant
Connectivity Technology	Bluetooth
Bluetooth Range	32 Feet (approx. 10 meters)
Battery Life	6 Hours
Charging Time	2 Hours
Product Dimensions	4"D x 3.6"W x 2.3"H
Item Weight	11.2 ounces
Control Method	Touch
Audio Output Mode	Stereo

Color	Black Gray

Warranty and Support

PureGear stands behind the quality of its products. The PureBoom Rugged Wireless Mini Speaker comes with a **Lifetime Warranty**. Additionally, a **30-day money back guarantee** is offered for your peace of mind.

For technical support, warranty claims, or any questions regarding your PureBoom speaker, please visit the official PureGear website or contact their customer service directly. Refer to the packaging for specific contact details.

© 2025 PureGear. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question