joliker UK-M4S-64GB

joliker UK-M4S-64GB MP3 Player User Manual

Model: UK-M4S-64GB

Introduction Package Contents Product Overview Setup Operating Instructions Maintenance Troubleshooting Specifications Warranty & Support

1. Introduction

Thank you for choosing the joliker UK-M4S-64GB MP3 Player. This portable digital music player is designed to provide a high-quality audio experience with its 64GB internal storage, Bluetooth 5.3 connectivity, and a 2.4-inch full touchscreen interface. It also features a built-in speaker, FM radio, and voice recording capabilities, making it a versatile device for your audio needs.

This manual provides detailed instructions on how to set up, operate, and maintain your MP3 player. Please read it thoroughly before use to ensure optimal performance and longevity of your device.



Image 1.1: joliker UK-M4S-64GB MP3 Player Main Interface

2. Package Contents

Please check the package for the following items:

- 1 x joliker UK-M4S-64GB MP3 Player
- 1 x User Manual
- 1 x Type-C Charging Cable
- 1 x Wired Headphones
- 1 x AUX Cable

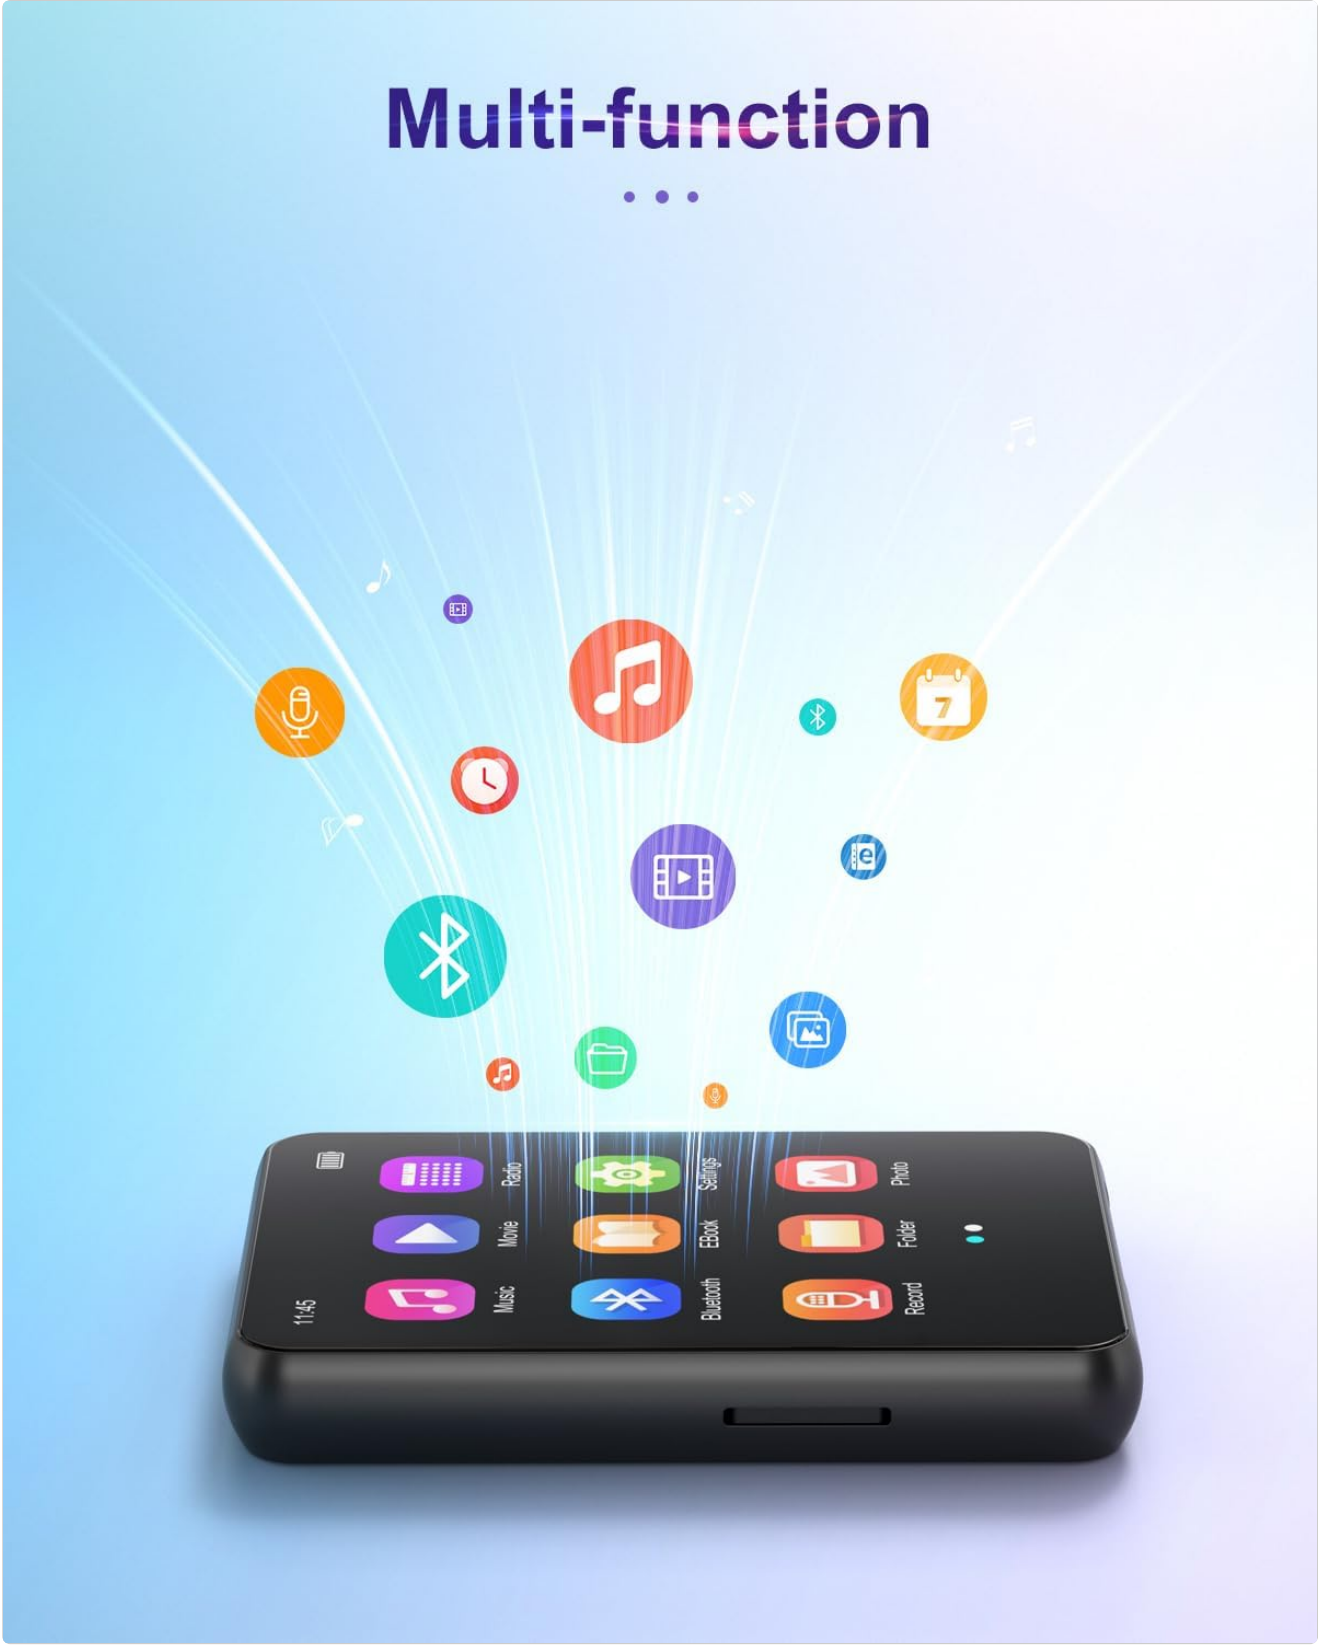


Image 2.1: Product Diagram and Included Accessories

3. Product Overview

3.1 Device Layout

Refer to Image 2.1 for a visual representation of the device's components and ports.

- **2.4-inch TFT Full Touch Screen:** Main display for navigation and interaction.
- **Volume + / - Buttons:** Adjust audio output level.

- **Speaker:** Integrated speaker for audio playback without headphones.
- **TF Card Slot:** For expanding storage with a microSD card (up to 128GB, not included).
- **USB Port (Type-C):** For charging and data transfer.
- **Headphone Jack (3.5mm):** For connecting wired headphones.

3.2 Touch Screen Interface

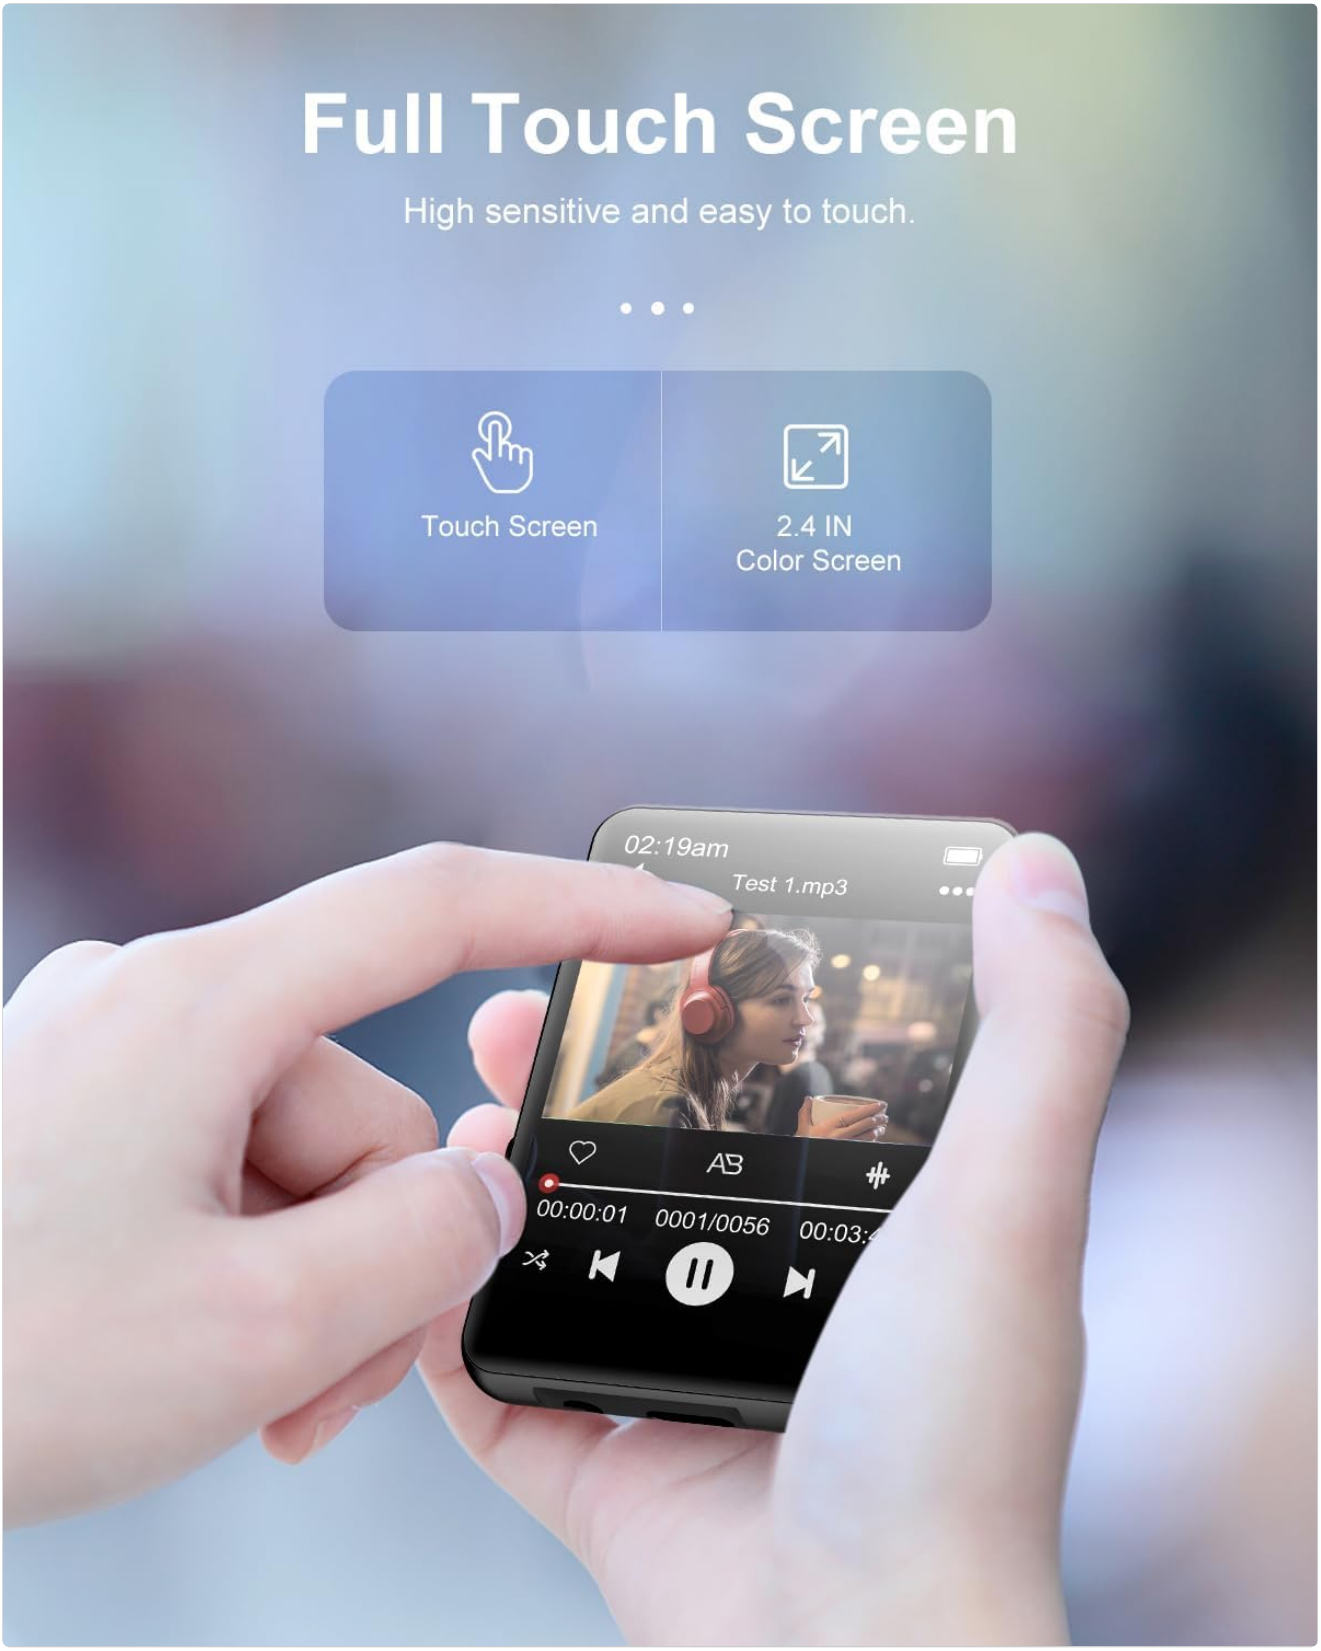


Image 3.1: Full Touch Screen Interaction

The device features a highly sensitive 2.4-inch full touch screen for intuitive navigation through menus and functions.

4. Setup

4.1 Charging the Device

Before first use, fully charge the MP3 player. Connect the included Type-C charging cable to the device's USB port and the other end to a USB power adapter (not included) or a computer's USB port.

- The battery icon on the screen will indicate charging status.
- A full charge typically takes approximately 2-3 hours.

4.2 Power On/Off

- **To Power On:** Press and hold the power button (usually on the side) for a few seconds until the screen lights up.
- **To Power Off:** Press and hold the power button for a few seconds until a power-off option appears on the screen, then confirm.

4.3 Initial Setup

Upon first power-on, you may be prompted to select your preferred language and set the date and time. Follow the on-screen instructions.

5. Operating Instructions

5.1 Transferring Music and Files

Connect the MP3 player to your computer using the Type-C cable. The device will appear as a removable disk. You can then drag and drop music files, videos, photos, and e-books into the respective folders on the player.



Image 5.1: 64GB Internal Storage with TF Card Expansion

The player supports various audio formats including MP3, AAC, FLAC, WAV, WMA, OGG, APE, ALAC, CUE, DFF, DSD, MP2, MP1, AIFF, LRC, LPCM, PCM, RAW, M4A, AMR.

5.2 Music Playback

- From the main menu, tap the 'Music' icon.
- Browse your music library by artist, album, genre, or folder.
- Tap a song to begin playback.
- Use the on-screen controls for play/pause, skip tracks, and adjust volume.

5.3 Bluetooth 5.3 Connectivity

The device features Bluetooth 5.3 for wireless audio streaming to compatible headphones or speakers.

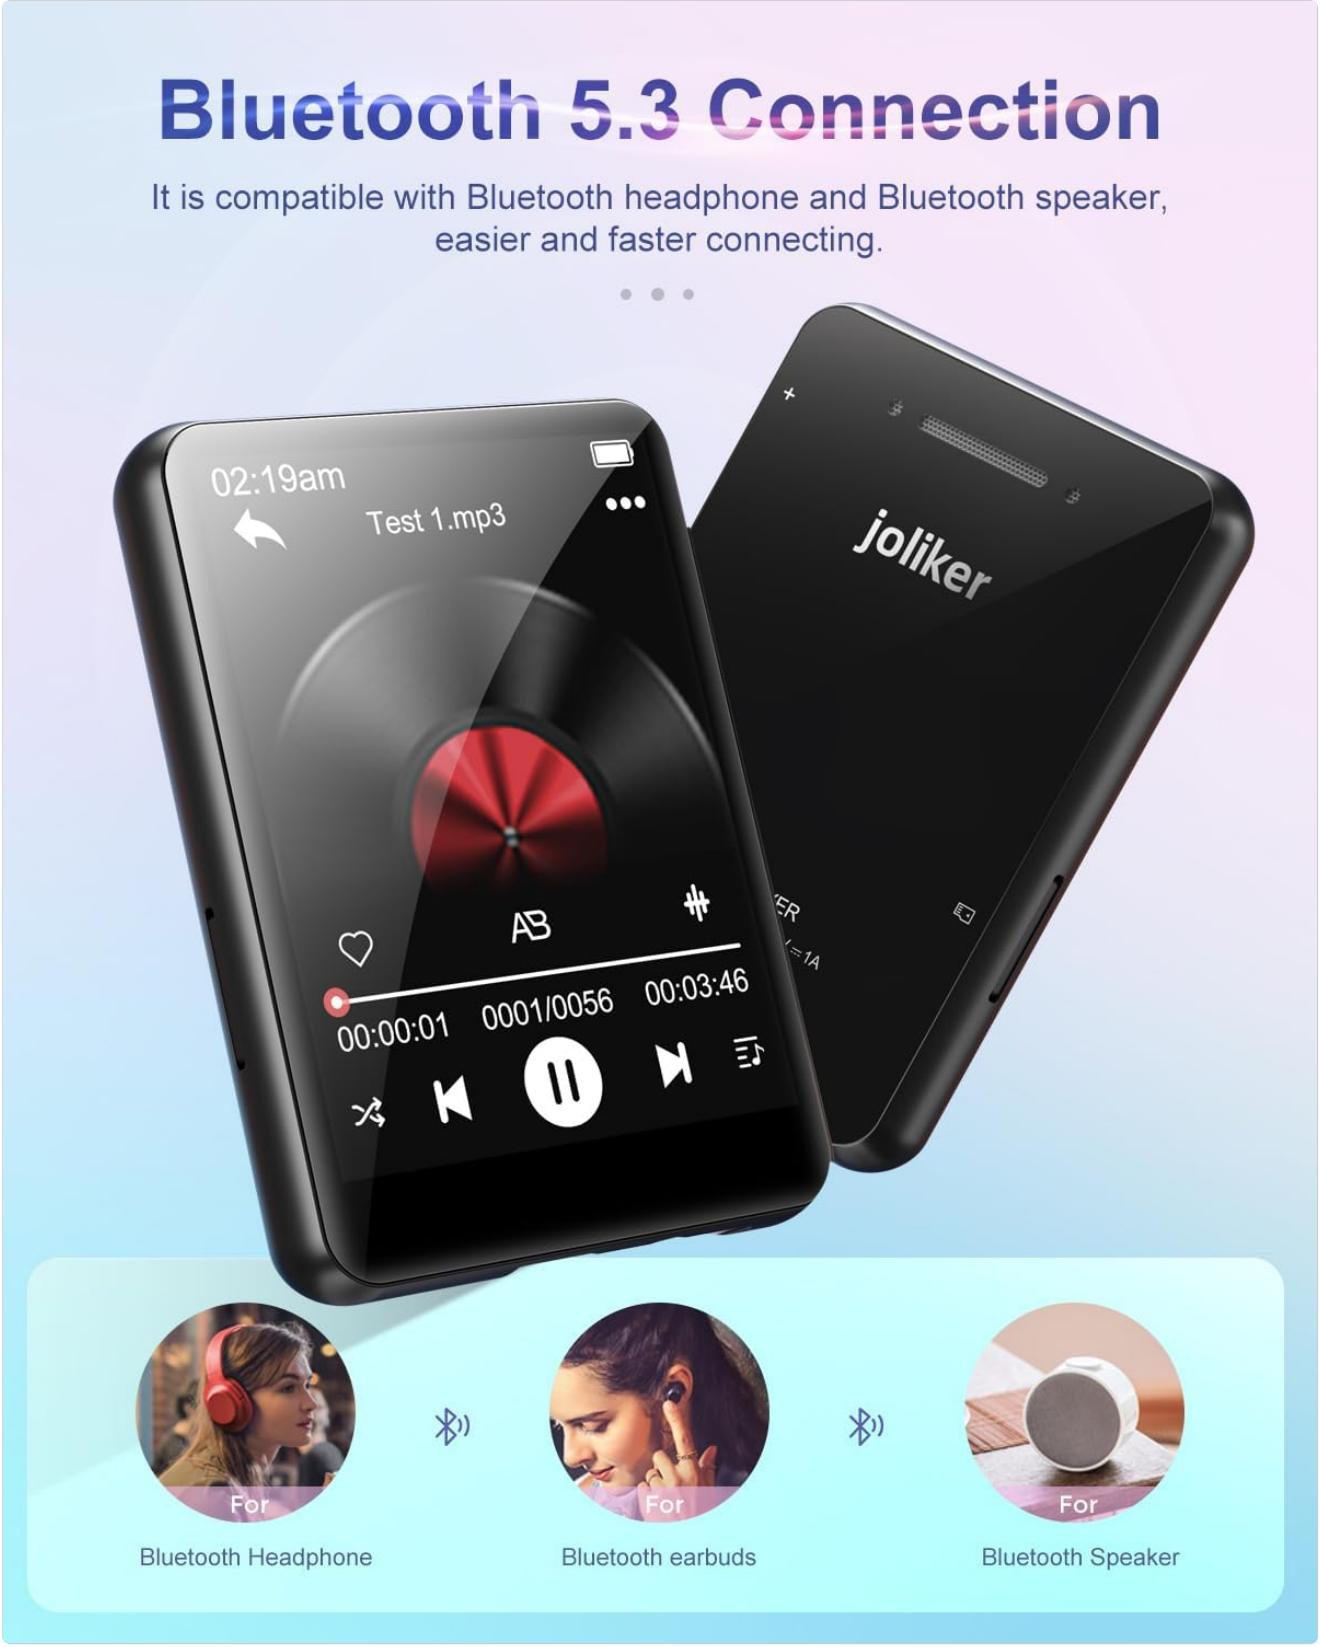


Image 5.2: Bluetooth 5.3 Connection Options

1. From the main menu, tap the 'Bluetooth' icon or navigate to 'Settings' > 'Bluetooth'.
2. Turn Bluetooth 'On'.
3. Ensure your Bluetooth headphones or speaker are in pairing mode.
4. The player will scan for available devices. Select your device from the list to pair.

5.4 FM Radio

To use the FM radio function, you must connect wired headphones to the 3.5mm jack, as they act as the antenna.

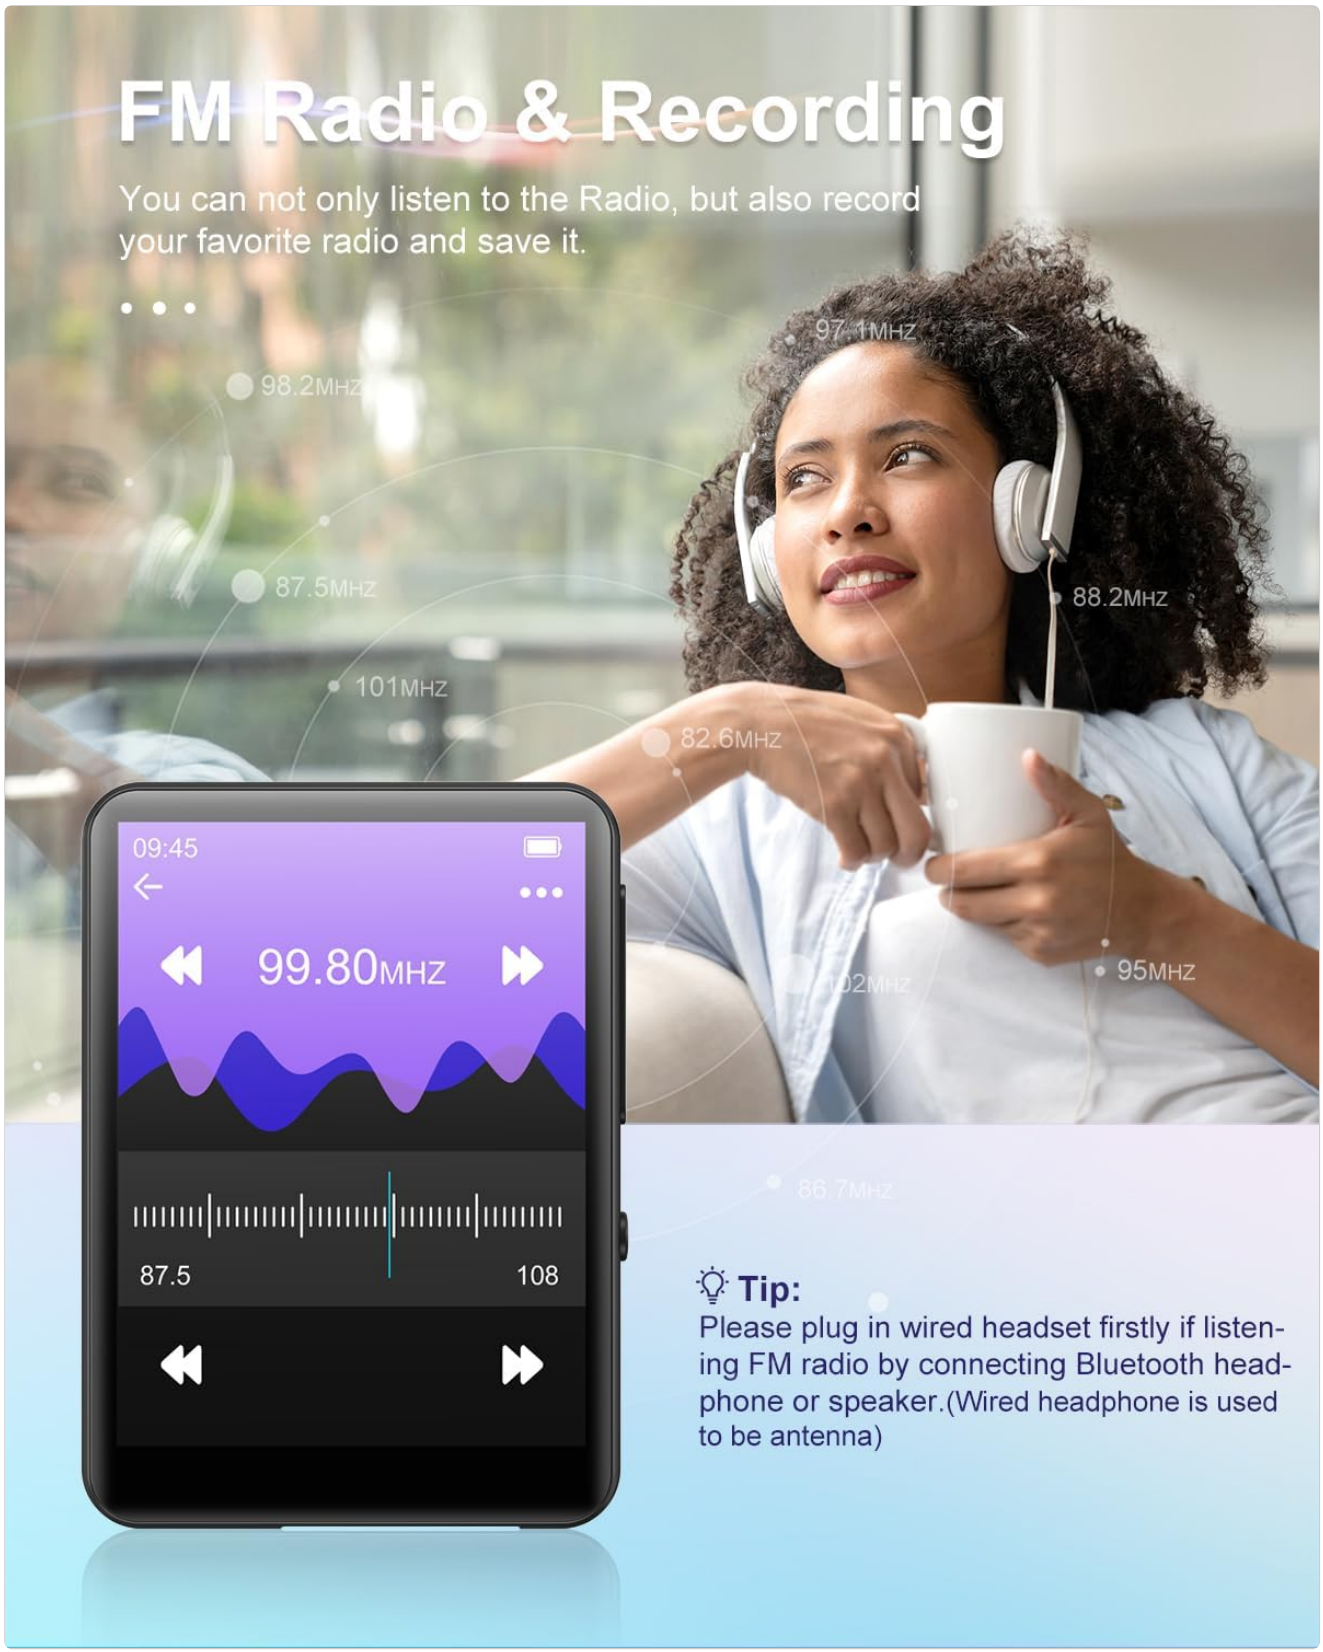


Image 5.3: FM Radio Interface

1. Connect wired headphones.
2. From the main menu, tap the 'Radio' icon.
3. Use the on-screen controls to scan for stations or manually tune to a frequency.

5.5 Voice Recorder

The built-in voice recorder allows you to capture audio notes and lectures.

1. From the main menu, tap the 'Record' icon.
2. Tap the record button to start and stop recording.
3. Recordings are saved and can be accessed from the 'Record' menu.

5.6 Other Functions (E-books, Video, Photos)

The MP3 player supports additional functions:

- **E-books:** Read text files (e.g., TXT format) by tapping the 'EBook' icon.
- **Video:** Play compatible video files by tapping the 'Movie' icon. Note: Video format support may be limited (e.g., AVI).
- **Photos:** View image files by tapping the 'Photo' icon.

5.7 Built-in Speaker

The device includes an integrated HD speaker, allowing you to listen to audio without headphones. To use the speaker, ensure no headphones are connected to the 3.5mm jack.



Image 5.4: Built-in Speaker Functionality

5.8 Settings

Access the 'Settings' menu to customize various aspects of your player, including:

- Language
- Date and Time
- Display Brightness
- Equalizer settings
- Bluetooth On/Off

- System Information

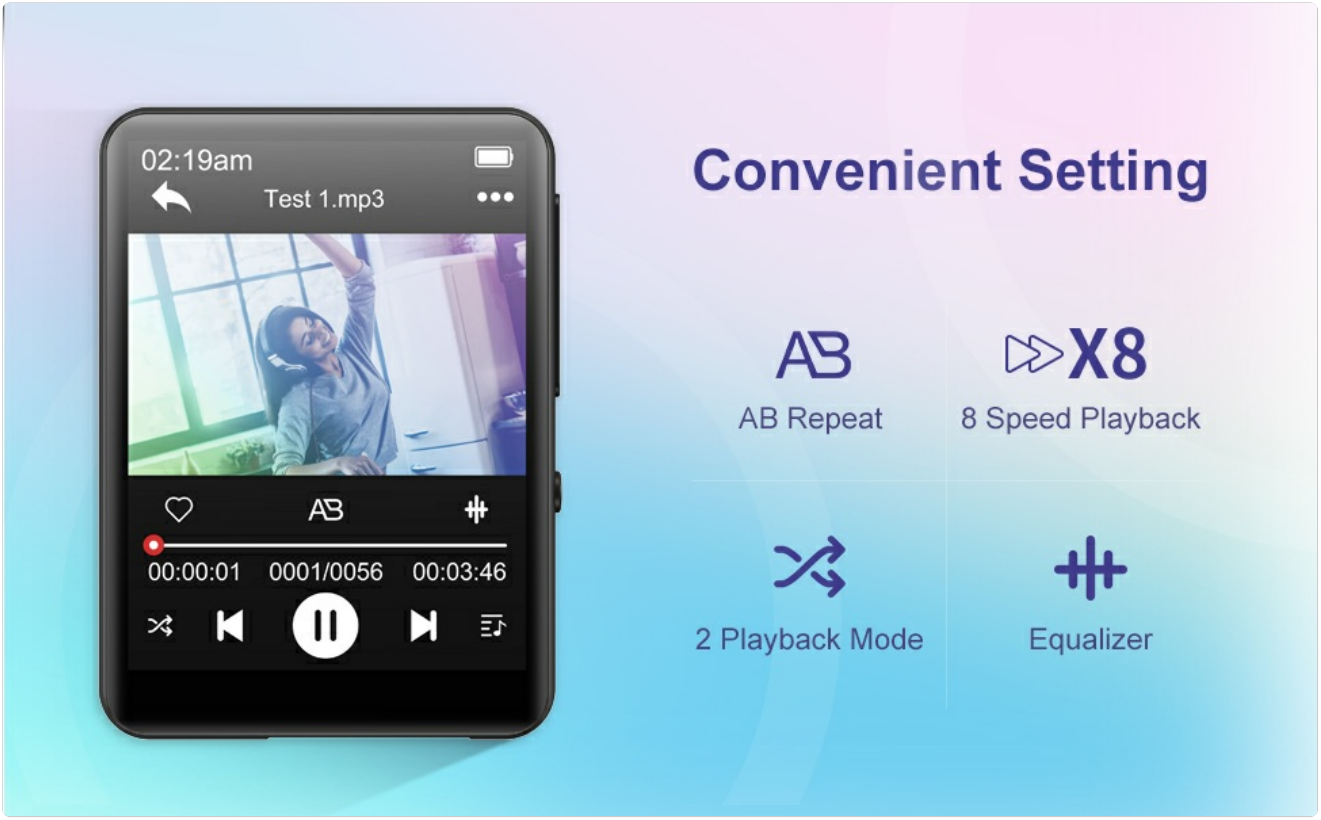


Image 5.5: Convenient Settings Options

6. Maintenance

6.1 Cleaning

Wipe the device with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the screen or casing.

6.2 Storage

Store the MP3 player in a cool, dry place away from direct sunlight, extreme temperatures, and humidity. Avoid dropping the device or exposing it to strong impacts.

6.3 Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.

7. Troubleshooting

Problem	Possible Cause	Solution
Device does not power on.	Low battery.	Charge the device for at least 30 minutes.

Problem	Possible Cause	Solution
No sound from headphones/speaker.	Volume too low; Headphones not properly connected; Bluetooth not paired.	Increase volume; Reconnect headphones; Re-pair Bluetooth device.
Bluetooth device not connecting.	Device not in pairing mode; Out of range.	Ensure Bluetooth device is in pairing mode; Move devices closer; Restart Bluetooth on both devices.
Screen is unresponsive.	Temporary software glitch.	Perform a soft reset (press and hold power button for 10-15 seconds).
Cannot transfer files to device.	Incorrect USB connection mode; Driver issue.	Ensure device is connected as a media device (MTP); Try a different USB port or cable; Update computer's USB drivers.

8. Specifications

Feature	Detail
Brand	joliker
Model	UK-M4S-Noir-64GB
Memory Storage Capacity	64 GB (expandable via TF card up to 128 GB)
Display	2.4 Inch TFT Full Touch Screen (LCD)
Wireless Type	Bluetooth 5.3
Connector Type	Aux, Bluetooth, USB (Type-C)
Supported Audio Formats	MP3, AAC, FLAC, WAV, WMA, OGG, APE, ALAC, CUE, DFF, DSD, MP2, MP1, AIFF, LRC, LPCM, PCM, RAW, M4A, AMR
Special Features	Equalizer, FM Radio, Voice Recorder, Built-in Speaker, Touch Screen
Battery Type	Lithium-Polymer (included)
Dimensions (approx.)	4.9 x 6.8 x 0.8 cm
Color	Black

9. Warranty and Support

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

If you encounter any issues not covered in this manual, please reach out to joliker customer service for assistance.

© 2024 joliker. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question