oneisall Cordless Horse Clippers

oneisall Cordless Horse Clippers with Metal Blades User Manual

Model: Cordless Horse Clippers

Introduction

Thank you for choosing the oneisall Cordless Horse Clippers. This manual provides essential information for the safe and effective use of your new grooming tool. Please read it thoroughly before first use and keep it for future reference.

Important Safeguards

- **Avoid use on infants.**
- **Keep the trimmer away from water sources.**
- **Follow recommended cleaning or maintenance procedures to prevent injury from the blades.**

Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

Package Contents

The oneisall Cordless Horse Clippers kit includes:

- 1 x Cordless Horse Clipper
- 5 x Guide Guards (1.5mm, 3mm, 6mm, 9mm, 12mm)
- 1 x Charging Cable
- 1 x Cleaning Brush
- 1 x Comb
- 1 x Scissors



Image: The oneisall Cordless Horse Clippers kit, including the clipper, guide guards, charging cable, cleaning brush, comb, and scissors.

Setup

1. Charging the Clippers

Before first use, fully charge the clippers. Connect the charging cable to the clipper and a suitable power adapter. The battery has a 2000mA capacity and requires approximately 3 hours for a full charge, providing nearly 180 minutes of use.



Image: The oneisall Cordless Horse Clipper shown next to a horse, illustrating the product's intended use.

2. Attaching Guide Guards

Select the desired guide guard (1.5mm, 3mm, 6mm, 9mm, or 12mm) for your preferred hair length. Align the guard with the clipper blade and snap it into place securely. Ensure it is firmly attached before operation.

Operating Instructions

1. Powering On/Off and Speed Settings

Press the power button to turn the clippers on. The clippers feature 2 speeds. Press the power button again to cycle through the speed settings. Select a suitable power level for the horse's coat thickness. Press and hold the power button to turn the clippers off.

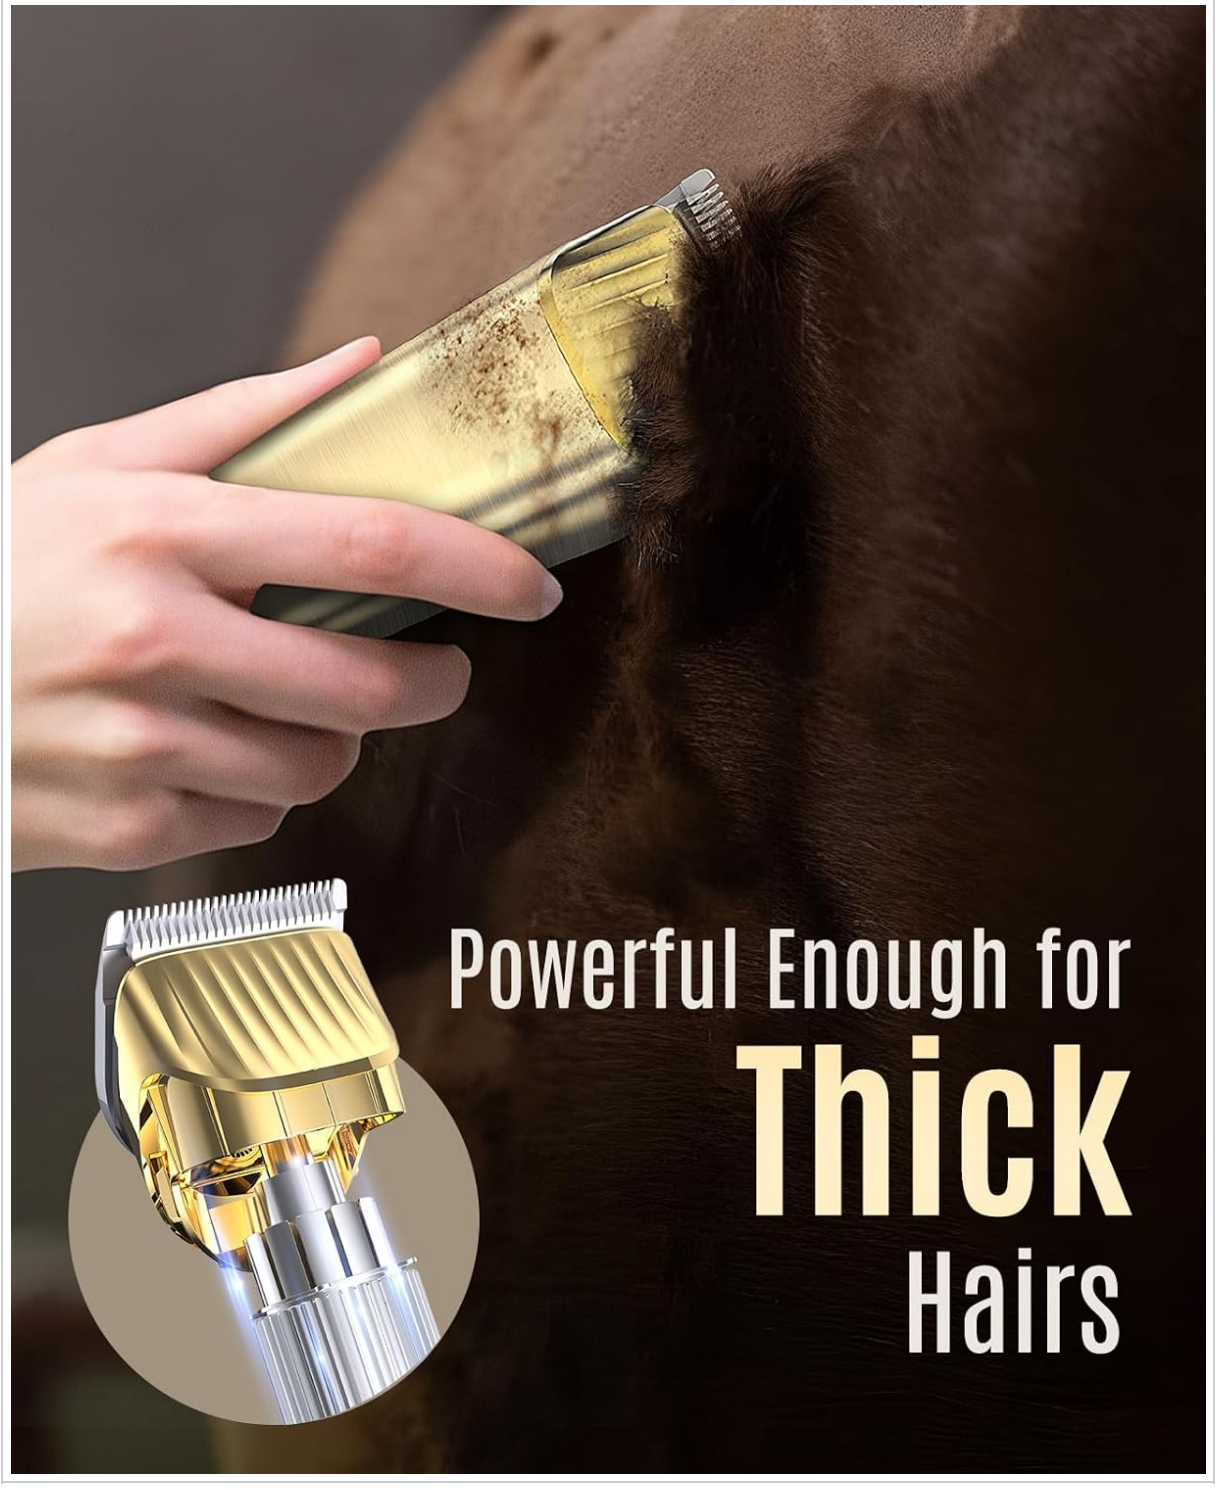


Image: A close-up view of the oneisall clipper effectively cutting through thick horse hair, demonstrating its power.

2. Grooming Tips

- Ensure the horse is clean and dry before grooming.
- Start with a longer guide guard if you are unsure of the desired length.
- Move the clippers smoothly against the direction of hair growth for an even cut.
- The clippers operate at a noise level lower than 55 dB, designed to not startle the horse during grooming.

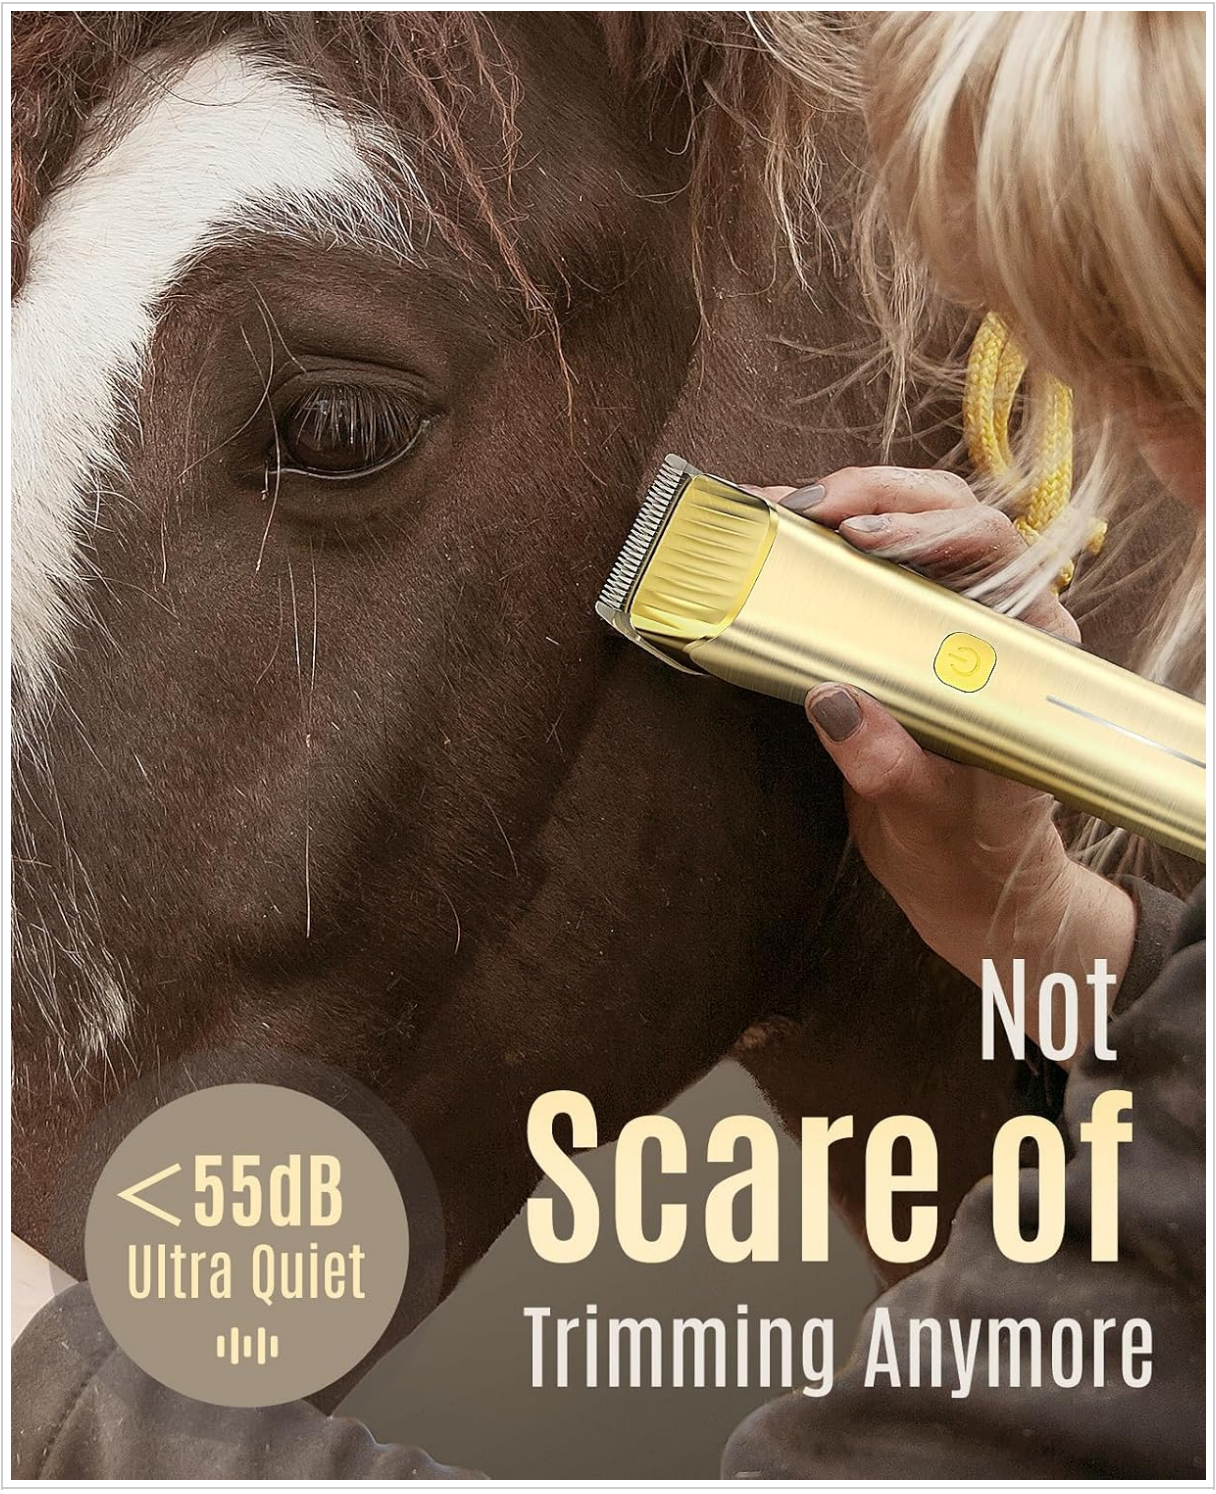


Image: The oneisall clipper being used to trim a horse's mane, highlighting its quiet operation and ease of use.

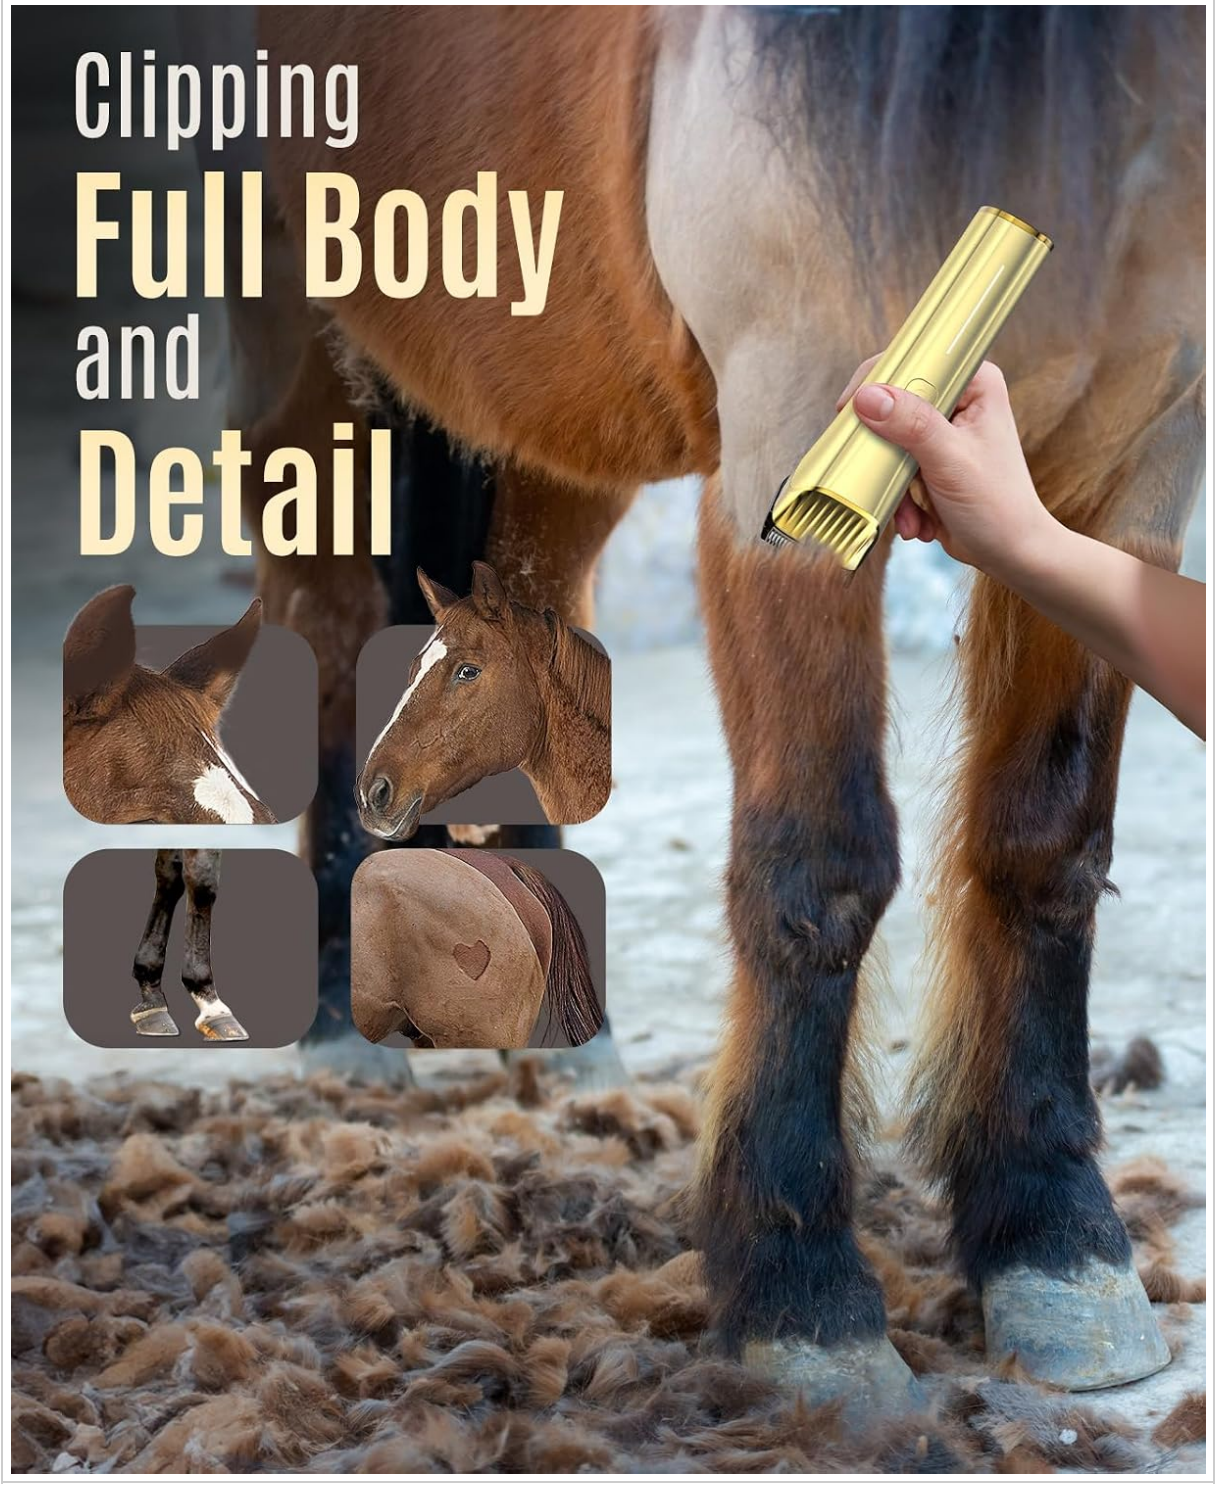


Image: The oneisall clipper demonstrating its versatility for both full body clipping and detailed work on a horse's coat.

Maintenance

1. Cleaning the Blades

The metal blade is detachable for easy cleaning. After each use, remove the guide guard and detach the blade. Use the provided cleaning brush to remove any trapped hair. You may rinse the blade under running water, ensuring it is completely dry before reattaching.



Image: A diagram illustrating the detachable metal blade of the oneisall clippers, emphasizing its easy cleaning feature to prevent hair clogging.

2. Blade Lubrication

Regularly apply a few drops of clipper oil (not included) to the blades to maintain their sharpness and ensure smooth operation. Do this before and after each grooming session.

3. Storage

Store the clippers and all accessories in a clean, dry place, away from direct sunlight and extreme temperatures.

Troubleshooting

- **Clippers not turning on:** Ensure the battery is fully charged.
- **Poor cutting performance:** Clean the blades thoroughly, lubricate them, and check if they are properly attached. Ensure the guide guard is correctly seated.
- **Excessive noise or vibration:** Clean and lubricate the blades. If the issue persists, contact customer support.
- **Battery not holding charge:** Ensure the charging cable is securely connected and the power source is functional. If the battery life significantly decreases, it may need replacement (contact customer support).

Product Specifications

Feature	Detail
Brand Name	oneisall
Model	Cordless Horse Clippers
Power Source	Battery Powered
Battery Capacity	2000mA
Charging Time	Approx. 3 hours
Operating Time	Approx. 180 minutes
Blade Material	Metal
Noise Level	Below 55 dB
Special Features	Detachable Blade, 2 Speeds
Recommended Uses	Horse Grooming, Clipping Thick Hair
ASIN	B0CR9WS1XR



Image: The oneisall lightweight horse clipper (1.3 lbs) shown in comparison to heavier clippers (6.5 lbs), highlighting its ergonomic advantage.

Warranty and Support

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official oneisall website. Keep your purchase receipt as proof of purchase.