Bennett Read HFN113

Bennett Read High-Velocity Floor Fan

MODEL: HFN113

1. INTRODUCTION

Thank you for choosing the Bennett Read High-Velocity Floor Fan. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new fan. Please read these instructions thoroughly before first use and retain them for future reference.

Important Safety Instructions

- Read all instructions before using this appliance.
- Ensure the voltage indicated on the rating label corresponds to your mains voltage.
- Do not operate any fan with a damaged cord or plug. If the cord or plug is damaged, contact qualified service personnel for repair or replacement.
- Avoid placing the fan in areas where it may be exposed to water or excessive humidity.
- Do not insert fingers or any objects through the guard when the fan is operating.
- Unplug the fan from the power outlet before cleaning, moving, or performing any maintenance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep children under supervision to ensure they do not play with the appliance.
- Do not use the fan outdoors or in wet conditions.

2. PRODUCT FEATURES

The Bennett Read High-Velocity Floor Fan is designed for powerful and efficient air circulation. Key features include:

- High-quality 65W copper motor for reliable performance.
- 5 high-performance metal veloci-tech blades for strong airflow.
- 3 speed settings with easy-push buttons for customized airflow.
- Ultra-stable U-shaped base design for secure placement.
- Stylish, portable design suitable for various living spaces.
- 120° vertically adjustable fan head to direct airflow precisely.



Figure 1: Key features of the Bennett Read High-Velocity Floor Fan. This image highlights the 65W motor, 5 metal blades, 3 speed settings, 120-degree adjustable head, copper motor, and safety guard.

3. Setup and Placement

Your Bennett Read High-Velocity Floor Fan comes pre-assembled and ready for use. Follow these guidelines for optimal setup:

1. **Unpacking:** Carefully remove the fan from its packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the fan on a firm, level surface to ensure stability. Ensure there is adequate space around the fan for proper air circulation and to prevent obstruction of the air intake or exhaust.
3. **Power Connection:** Ensure the fan is switched off before plugging it into a standard electrical outlet.

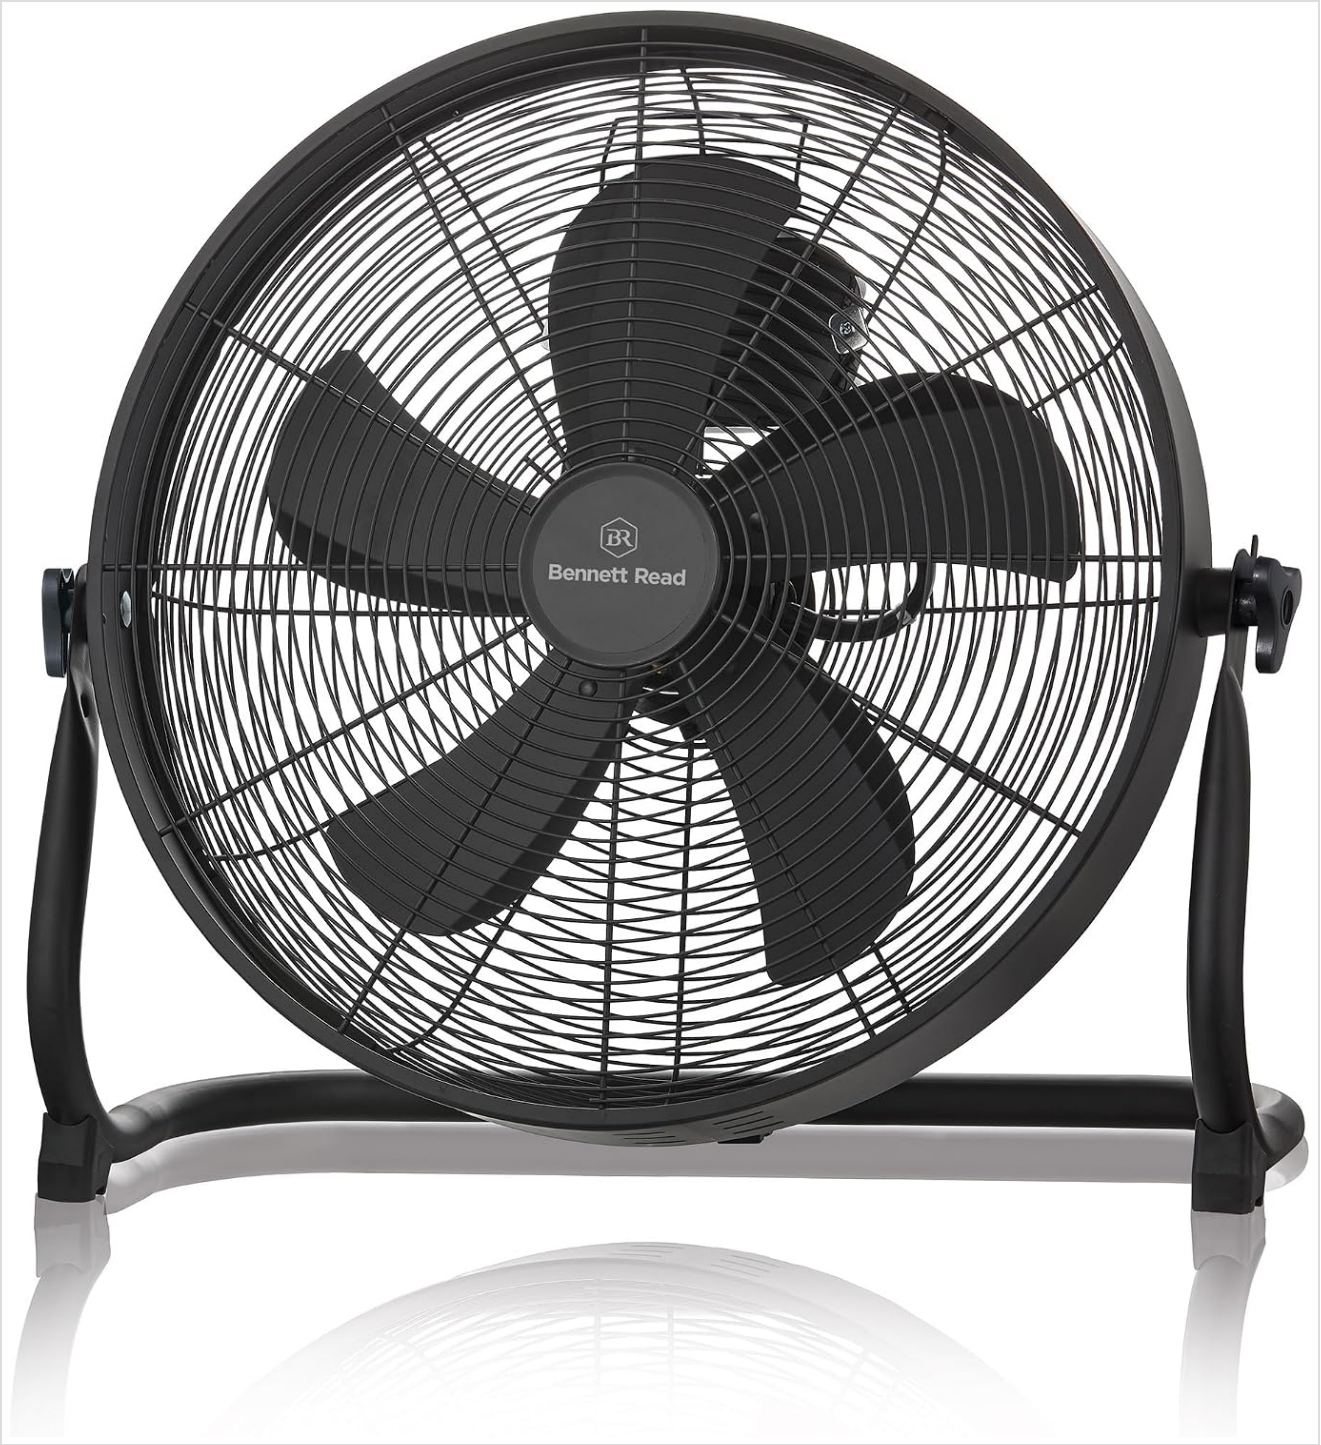


Figure 2: The Bennett Read High-Velocity Floor Fan. This image displays the fan's overall design, including its protective spiral guard and sturdy base, ready for placement.

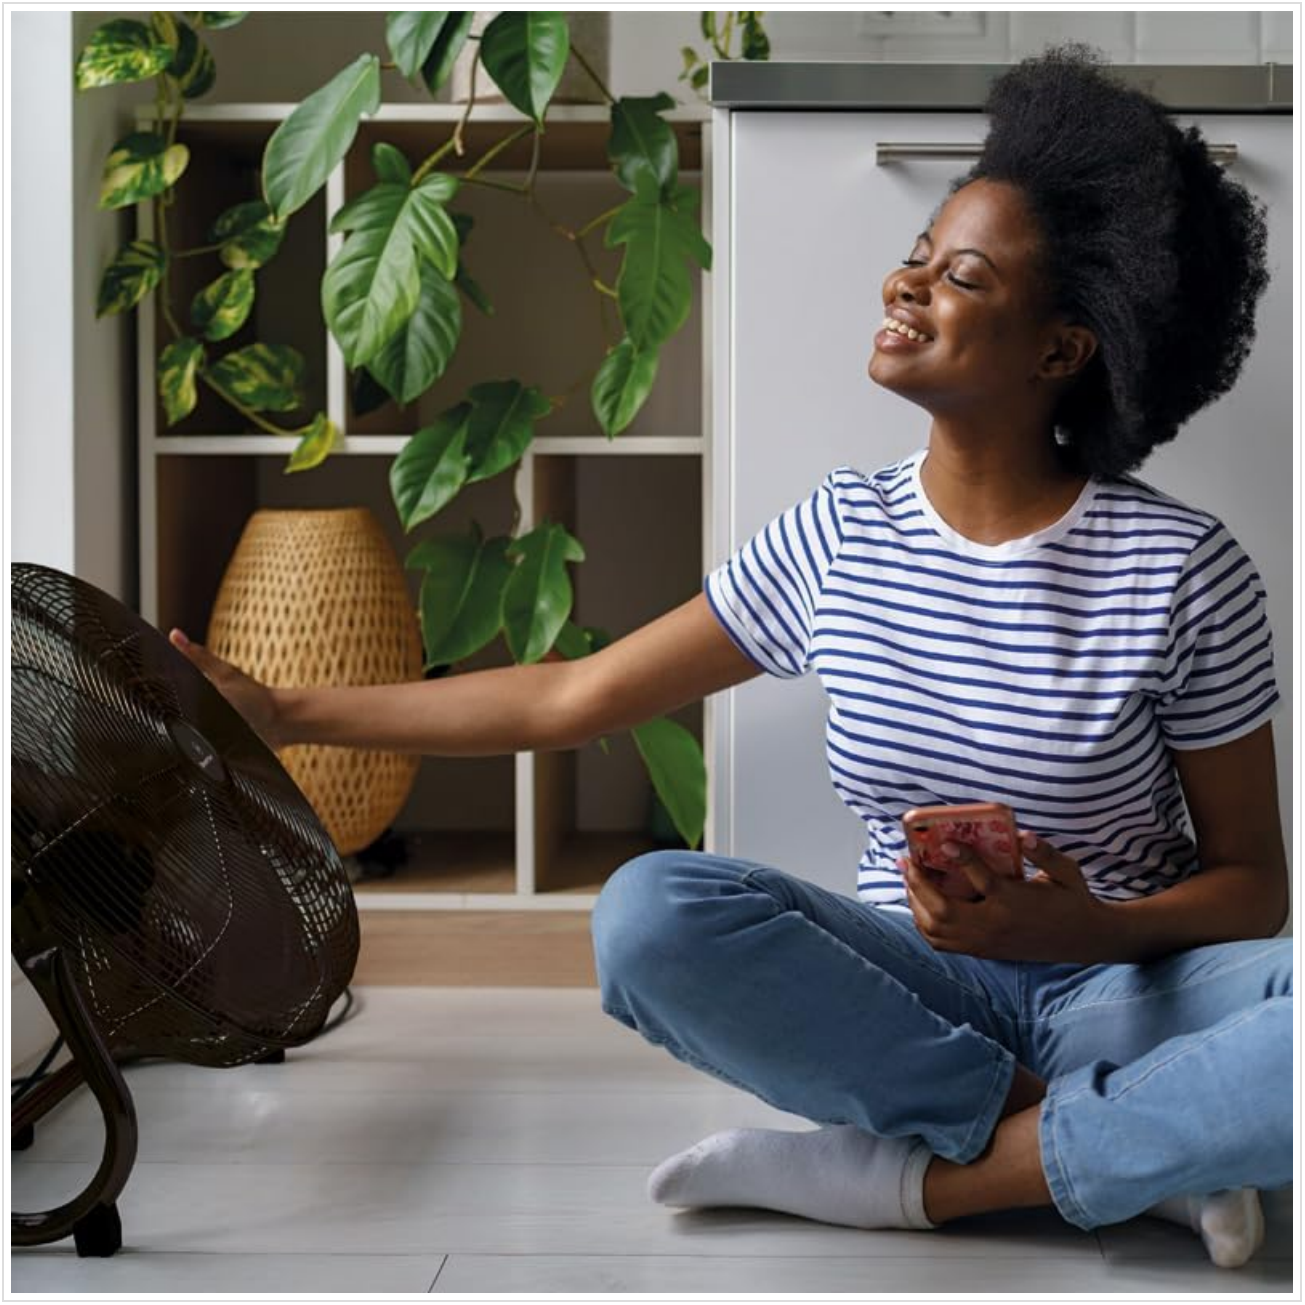


Figure 3: Example of fan placement. This image shows the fan positioned on the floor, illustrating its compact and stable design for effective air circulation in a living space.

4. Operating Instructions

Operating your fan is straightforward:

4.1 Powering On/Off

- Plug the power cord into a suitable electrical outlet.
- Locate the speed control buttons, typically found on the fan's control panel.
- Press the desired speed button (1, 2, or 3) to turn the fan on.
- To turn the fan off, press the '0' or 'OFF' button, or unplug the unit from the power outlet.

4.2 Adjusting Speed

The fan offers three speed settings:

- **Speed 1:** Low airflow for gentle circulation.
- **Speed 2:** Medium airflow for moderate cooling.

- **Speed 3:** High airflow for maximum cooling and air movement.

Select the speed by pressing the corresponding button on the control panel.

4.3 Adjusting Airflow Direction

The fan head can be adjusted vertically up to 120 degrees to direct the airflow precisely where needed.

- Gently tilt the fan head upwards or downwards to achieve the desired angle.
- Ensure the fan is stable after adjustment.



Figure 4: Vertical adjustment of the fan head. This diagram illustrates the fan's ability to tilt up to 120 degrees, allowing users to customize the direction of airflow.

5. Maintenance

Regular maintenance ensures the longevity and optimal performance of your fan.

5.1 Cleaning

- **Always unplug the fan** from the power outlet before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners or solvents.
- To clean the fan blades, carefully wipe them with a soft, dry cloth. For stubborn dust, a slightly damp cloth can be used, ensuring the blades are completely dry before operating the fan again.
- Do not immerse the fan in water or allow water to drip into the motor housing.

5.2 Storage

- If the fan will not be used for an extended period, unplug it and clean it thoroughly.
- Store the fan in its original packaging or cover it to protect it from dust.
- Store in a cool, dry place, away from direct sunlight and extreme temperatures.

6. Troubleshooting

If you encounter any issues with your fan, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	Not plugged in; power outlet not working; fan switch off.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. Press a speed button to turn on.
Weak airflow.	Fan set to low speed; obstructions around the fan; dirty blades.	Increase the speed setting. Remove any objects blocking the air intake or exhaust. Clean the fan blades as per maintenance instructions.
Unusual noise or rattling.	Fan not on a level surface; loose parts; foreign object in guard.	Place the fan on a stable, level surface. Unplug the fan and inspect for any loose components or foreign objects. Do not operate if damage is suspected.

If the problem persists after attempting these solutions, please contact customer support.

7. Technical Specifications

Specification	Detail
Brand	Bennett Read
Model Number	HFN113
Electric Fan Design	Floor Fan
Power Source	Corded Electric
Motor Power	65W Copper Motor
Number of Blades	5 Metal Veloci-Tech Blades
Speed Settings	3
Adjustable Head	120° Vertical Adjustment
Product Dimensions	20D x 58W x 54H centimetres
Item Weight	5.1 kg
Special Feature	Portable
Mounting Type	Floor Mount

8. Warranty and Support

Your Bennett Read High-Velocity Floor Fan is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical support, service, or spare parts, please contact Bennett Read customer service. Contact information can typically be found on the product packaging, the official Bennett Read website, or your purchase receipt.

© 2023 Bennett Read. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question