Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

HomeSpot JY508-BUN128DV8

HomeSpot Wireless Neckband Speaker and Bluetooth Transmitter Set User Manual

Model: JY508-BUN128DV8

Introduction

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your HomeSpot Wireless Neckband Speaker and Bluetooth Transmitter Set. This system is designed to enhance your home entertainment experience by providing personal, immersive audio for television viewing and low-latency gaming.
The neckband speaker and Bluetooth transmitter are pre-paired for immediate use, offering seamless connectivity and high-quality sound without disturbing others.

Package Contents

Please verify that all items listed below are included in your package:

- HomeSpot HS-JY508 Wireless Neckband Speaker (x1)
- HomeSpot HD Audio Bluetooth Transmitter (x1)
- Charging cable (USB-C for neckband, Micro USB for transmitter) (x2)
- 3.5mm to 3.5mm Audio Cable (x1)
- 3.5mm to RCA Audio Cable (x1)
- Digital TOSLINK Optical Cable (x1)
- User Manual (this document)



Figure 1: All components included in the HomeSpot Wireless Neckband Speaker and Bluetooth Transmitter Set.

Product Overview

Neckband Speaker Controls



Figure 2: Neckband Speaker Control Layout.

- **Play/Pause Button:** Press once to play or pause audio.
- **Volume Up / Next Song Button:** Press once to increase volume. Press and hold to skip to the next song.
- **Volume Down / Previous Song Button:** Press once to decrease volume. Press and hold to go to the previous song.
- **Power Button:** Press and hold to power on or off.
- **Type-C Charging Port:** For charging the neckband speaker.

Bluetooth Transmitter Overview

The HomeSpot HD Audio Bluetooth Transmitter features multiple audio input ports (Optical, RCA, 3.5mm AUX) and a Micro USB power input. It has a Bluetooth pairing button and indicator lights for connection status.

Setup Guide

1. Charging the Devices

- **Neckband Speaker:** Connect the USB-C charging cable to the neckband speaker's Type-C port and the other end to a USB power adapter (not included). A full charge takes approximately 2 hours and provides up to 12 hours of playback.
- **Bluetooth Transmitter:** Connect the Micro USB charging cable to the transmitter's 5V DC IN port and the other end to a USB power adapter or a USB port on your TV. The transmitter requires continuous power to operate.

2. Connecting the Bluetooth Transmitter to Your TV

The transmitter supports multiple audio input options. Choose the one compatible with your television:

1. **Optical (TOSLINK) Connection:**

   Use the included Digital TOSLINK Optical Cable. Connect one end to the "OPTICAL OUT" port on your TV and the other end to the "OPTICAL IN" port on the Bluetooth transmitter. This connection typically offers the highest audio quality.

   Note: Some TVs require you to change the audio output setting to "PCM" or "Stereo" when using the optical output. Refer to your TV's manual for specific instructions.

2. **RCA (Red/White) Connection:**

   Use the included 3.5mm to RCA Audio Cable. Connect the red and white RCA plugs to the corresponding "AUDIO OUT" ports on your TV. Connect the 3.5mm jack to the "AUX IN" port on the Bluetooth transmitter.

3. **3.5mm AUX Connection:**

   Use the included 3.5mm to 3.5mm Audio Cable. Connect one end to the "HEADPHONE OUT" or "AUDIO OUT" 3.5mm jack on your TV and the other end to the "AUX IN" port on the Bluetooth transmitter.

3. Initial Connection (Pre-Paired)

The HomeSpot Neckband Speaker and Bluetooth Transmitter are pre-paired at the factory for your convenience. Follow these steps for the first-time use:

1. Ensure the Bluetooth Transmitter is powered on and connected to your TV's audio output.
2. Press and hold the Power button on the Neckband Speaker until you hear a power-on tone or see an indicator light.
3. The neckband speaker will automatically connect to the transmitter. You should hear an audible confirmation "Connected" from the speaker.

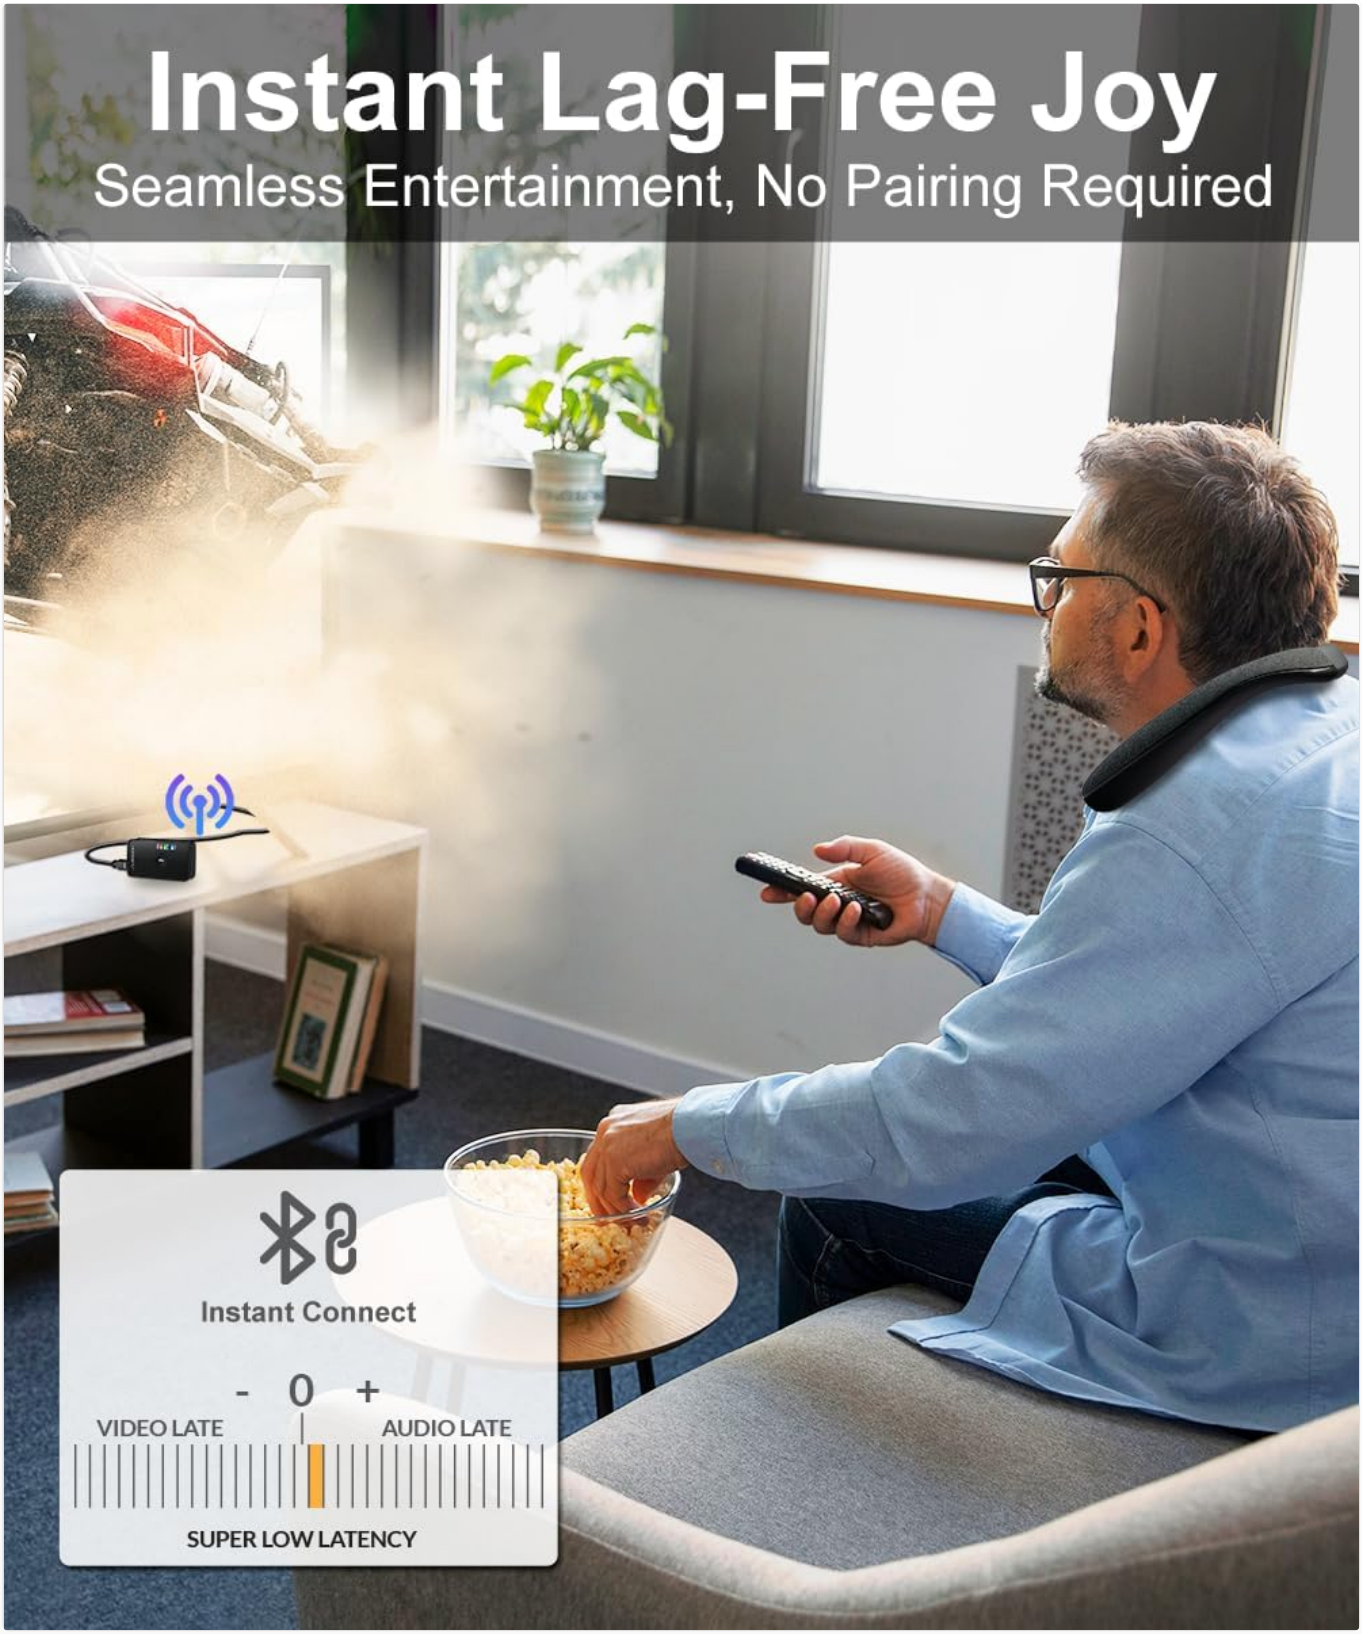


Figure 3: Instant and lag-free audio experience with the pre-paired system.

Operating Instructions

Power On/Off

- **To Power On:** Press and hold the Power button on the neckband speaker for approximately 3 seconds until the indicator light illuminates and you hear a power-on tone.
- **To Power Off:** Press and hold the Power button on the neckband speaker for approximately 3 seconds until the indicator light turns off and you hear a power-off tone.

Volume Adjustment

- **Increase Volume:** Press the "Vol Up / Next Song" button.
- **Decrease Volume:** Press the "Vol Down / Previous Song" button.

The volume can be adjusted independently on the neckband speaker, allowing you to set your preferred listening level without affecting the TV's main speaker volume (if your TV supports simultaneous output).

Enhanced TV Viewing Experience

The HomeSpot Neckband Speaker provides a personal 360-degree surround sound experience with low latency, ensuring audio and video synchronization. This allows for immersive viewing without disturbing others in the room.



Figure 4: Enjoying immersive TV audio with the neckband speaker.



Figure 5: Illustration of the 3D surround sound capability.

Maintenance

- **Cleaning:** Wipe the neckband speaker and transmitter with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the devices in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the neckband speaker frequently. Charge it regularly, even if not in use for extended periods.
- **Water Resistance:** The devices are not water-resistant. Avoid exposure to liquids.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
No sound from neckband speaker.	Speaker is off or uncharged. Transmitter is off or not connected to TV. TV audio output settings are incorrect. Speaker and transmitter are not connected.	Ensure speaker is charged and powered on. Ensure transmitter is powered on and correctly connected to TV audio output. Check TV audio settings (e.g., set to PCM for optical). Power cycle both devices to re-establish connection.
Audio delay/lag.	Interference or distance. TV processing delay.	Ensure transmitter is close to the neckband speaker. Check if your TV has an audio delay adjustment setting.
Cannot connect to transmitter.	Devices are too far apart. Interference. Transmitter not in pairing mode (if re-pairing is needed).	Bring devices closer. Turn off other Bluetooth devices nearby. Power cycle both devices. If necessary, consult the transmitter's specific instructions for manual pairing.

SPECIFICATIONS

Brand	HomeSpot
Model Name	HS-JY508-BUN128DV8
Connectivity Technology	Bluetooth
Wireless Communication Technology	Bluetooth
Bluetooth Range	10 Meters (approx. 33 feet)
Audio Latency	60 Milliseconds
Speaker Type	Portable Neckband Speaker
Audio Output Mode	Stereo
Surround Sound Channel Configuration	2.0
Power Source	Battery Powered (Neckband Speaker), USB Powered (Transmitter)
Neckband Speaker Battery	1 Lithium Polymer (included)
Battery Capacity	500 mAh
Charging Time	Approximately 2 Hours
Playback Time	Up to 12 Hours
Item Weight	1.06 pounds
Product Dimensions	3"D x 2"W x 2"H (Approximate)
Material	Plastic

Water Resistance Level	Not Water Resistant

Warranty Information

The HomeSpot Wireless Neckband Speaker and Bluetooth Transmitter Set comes with a limited warranty. Please refer to the warranty card included in your package or visit the official HomeSpot website for detailed terms and conditions regarding warranty coverage and claims.

Support

For further assistance, technical support, or to provide feedback, please visit the HomeSpot official store or contact their customer service. You can find more information and contact details on the HomeSpot brand page on Amazon or their dedicated support website.
HomeSpot Store Link: Visit HomeSpot Store

© 2024 HomeSpot. All rights reserved.
Product Model: JY508-BUN128DV8

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CRP981WW

More documents and user manuals: **https://manuals.plus/**