Fisher-Price GPN14

Fisher-Price Home Decor 4-in-1 Potty GPN14 Replacement Gray Potty Bowl User Manual

Introduction

This manual provides instructions for the proper installation, use, and maintenance of the Fisher-Price Home Decor 4-in-1 Potty GPN14 Replacement Gray Potty Bowl. This product is designed as a direct replacement part for the original potty bowl included with the Fisher-Price Home Decor 4-in-1 Potty, model GPN14.

Package Contents

Your package should contain:

- 1 x Fisher-Price Home Decor 4-in-1 Potty GPN14 Replacement Gray Potty Bowl

Please inspect the item upon receipt to ensure it is in perfect condition and free from damage.

Setup and Installation

The replacement potty bowl is designed for easy installation into the Fisher-Price Home Decor 4-in-1 Potty (model GPN14).

1. **Prepare the Potty Chair:** Ensure the main potty chair unit is clean and free of any debris. If an old potty bowl is present, remove it by lifting it straight up.
2. **Insert the New Potty Bowl:** Align the replacement gray potty bowl with the opening in the potty chair. Gently lower the bowl into place, ensuring it sits securely and flush with the top edge of the potty chair.
3. **Verify Fit:** Lightly press down on the bowl to confirm it is stable and does not wobble. The bowl should fit snugly within the potty chair.

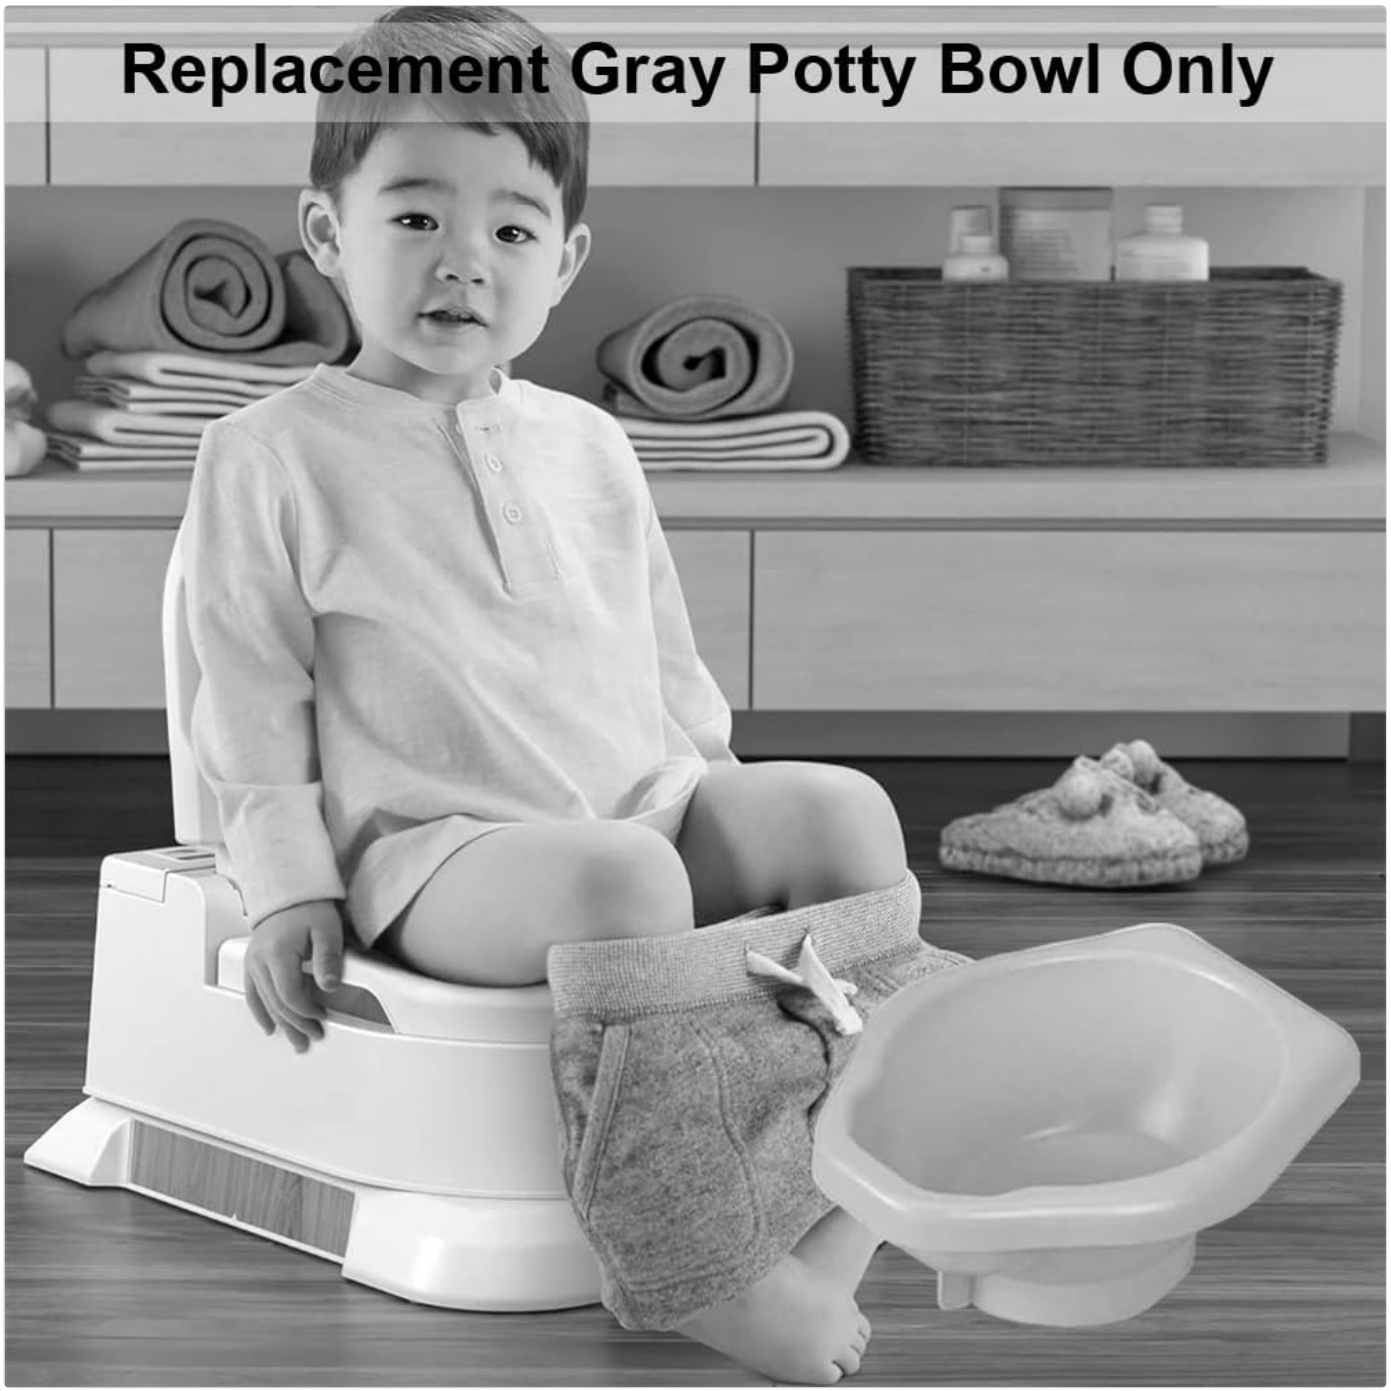


Image: A child using the Fisher-Price Home Decor 4-in-1 Potty, with the gray replacement bowl shown separately for clarity. This illustrates the intended use and how the bowl fits into the larger potty system.

Operating Instructions

Once installed, the replacement potty bowl functions identically to the original. Guide your child to use the potty as part of their potty training routine.

- Ensure the potty chair is placed on a flat, stable surface.
- Supervise your child during use.
- After each use, remove the potty bowl for cleaning.

Maintenance and Cleaning

Regular cleaning is essential for hygiene and to prolong the life of the potty bowl.

1. **Empty Contents:** After each use, carefully remove the potty bowl from the potty chair and empty its contents into a toilet.
2. **Rinse:** Rinse the bowl thoroughly with warm water.
3. **Clean:** Wash the bowl with mild soap and water. A soft brush or sponge can be used to remove any residue. Avoid abrasive cleaners or scouring pads, as these can scratch the plastic surface.
4. **Disinfect (Optional):** For deeper cleaning, a mild disinfectant solution can be used. Follow the disinfectant manufacturer's instructions for dilution and contact time, then rinse thoroughly.
5. **Dry:** Wipe the bowl dry with a clean cloth or allow it to air dry completely before placing it back into the potty chair.



Image: Top view of the gray replacement potty bowl, highlighting its smooth, easy-to-clean surface.

Troubleshooting

- **Bowl does not fit:** Ensure you have the correct model (Fisher-Price Home Decor 4-in-1 Potty, model GPN14). This replacement bowl is specifically designed for this model. Double-check that the bowl is oriented correctly before attempting to insert it.
- **Stains or odors persist:** Ensure thorough cleaning as per the "Maintenance and Cleaning" section. For stubborn stains, a baking soda paste can be applied and left for a short period before rinsing. For odors, ensure complete drying after cleaning.

Specifications

Model Number	GPN14 (Potty Chair Compatibility)
Part Number	3900-7880
Color	Gray
Material	Plastic
Product Dimensions	6"D x 4"W x 5"H (Approximate)
Item Weight	4 ounces (Approximate)
UPC	887961676471



Image: Angled view of the gray replacement potty bowl, illustrating its design and dimensions.

Warranty and Support

This product is a genuine replacement part from Fisher-Price. For any questions regarding product defects, compatibility, or further assistance, please contact Fisher-Price customer support directly or refer to the original Fisher-Price Home Decor 4-in-1 Potty (GPN14) manual for warranty information.

You can visit the official Fisher-Price website for support information:www.fisher-price.com

© 2024 Fisher-Price. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question