Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

LuxeBath Sahara 300x800 mm

LuxeBath Sahara Bathroom Radiator 300x800 mm, Anthracite, Straight with Middle Connection User Manual

Introduction

Thank you for choosing the LuxeBath Sahara Bathroom Radiator. This manual provides essential information for the safe and efficient installation, operation, and maintenance of your new radiator. Please read these instructions carefully before installation and retain them for future reference.
This stylish, modern, and efficient heating solution is designed to provide comfortable warmth and enhance the aesthetics of your bathroom or other living spaces. Its high-quality construction ensures excellent thermal conductivity and durability.

Safety Information

Important: Installation and connection must be carried out by a qualified professional in accordance with local regulations and standards. Failure to do so may result in property damage, injury, or void the warranty.

- Always ensure the main water supply is turned off before beginning installation.
- Wear appropriate personal protective equipment (PPE) during installation.
- Do not operate the radiator if it is damaged or leaking.
- Keep children and pets away from the radiator when it is hot.
- Do not cover the radiator with flammable materials.
- Refer to the Safety Information (PDF) for detailed safety guidelines.

Package Contents

Please check that all components are present and undamaged before proceeding with installation:

- 1 x LuxeBath Bathroom Radiator
- 1 x 1/2 inch Bleeding Valve
- 1 x 1/2 inch Blanking Plug
- 4 x Wall Brackets
- 4 x Screws and Wall Plugs
- 4 x Fixing Screws
- 4 x Washers

- 4 x Covers
- Installation Instructions (PDF)



Image: Complete set of mounting hardware and accessories included with the radiator.

Specifications

Detailed technical specifications for the LuxeBath Sahara Bathroom Radiator (Model: 300x800 mm, Anthracite):

Connection Type	Middle Connection
Design	Straight
Color	Anthracite
Material	Steel
Width	300 mm

Height	800 mm
Connection Distance	25 mm
Tube Diameter (Horizontal)	Ø 22 mm
Profile (Vertical D-tubes)	30 x 40 x 1.5 mm
Heat Output	200 W
Heat Capacity	671 BTU
Water Volume	2.53 liters
Weight	3.91 kg
Max. Operating Pressure	10 bar (1 MPa)
Test Pressure	12 bar (1.2 MPa)
Distance to Wall	Approx. 5 cm



Image: Technical drawing with key dimensions for the radiator.

Setup and Installation

The LuxeBath Sahara radiator is designed for straightforward installation. However, for safety and optimal performance, it is highly recommended that installation be performed by a qualified heating engineer or plumber.

1. **Preparation:** Ensure the installation area is suitable and that the wall can support the weight of the radiator when filled with water. Turn off the central heating system and drain it if necessary.
2. **Marking:** Use the provided wall brackets as a template to mark the drilling points on the wall. Ensure the marks are level and correctly spaced according to the radiator's dimensions.
3. **Drilling:** Drill holes at the marked points and insert the wall plugs.
4. **Mounting Brackets:** Secure the wall brackets to the wall using the screws.
5. **Radiator Placement:** Carefully lift the radiator and place it onto the mounted wall brackets. Ensure it is securely seated.
6. **Connection:** Connect the radiator to your central heating system using appropriate valves (not included). The radiator features a middle connection for convenience.
7. **Bleeding and Blanking:** Install the 1/2 inch bleeding valve at the top and the 1/2 inch blanking plug at the bottom of the radiator.
8. **Filling and Testing:** Slowly refill the central heating system. Bleed the radiator using the bleeding valve until water flows out steadily, indicating all air has been removed. Check all connections for leaks.

For detailed, step-by-step instructions and diagrams, please refer to the officialInstallation Manual (PDF).

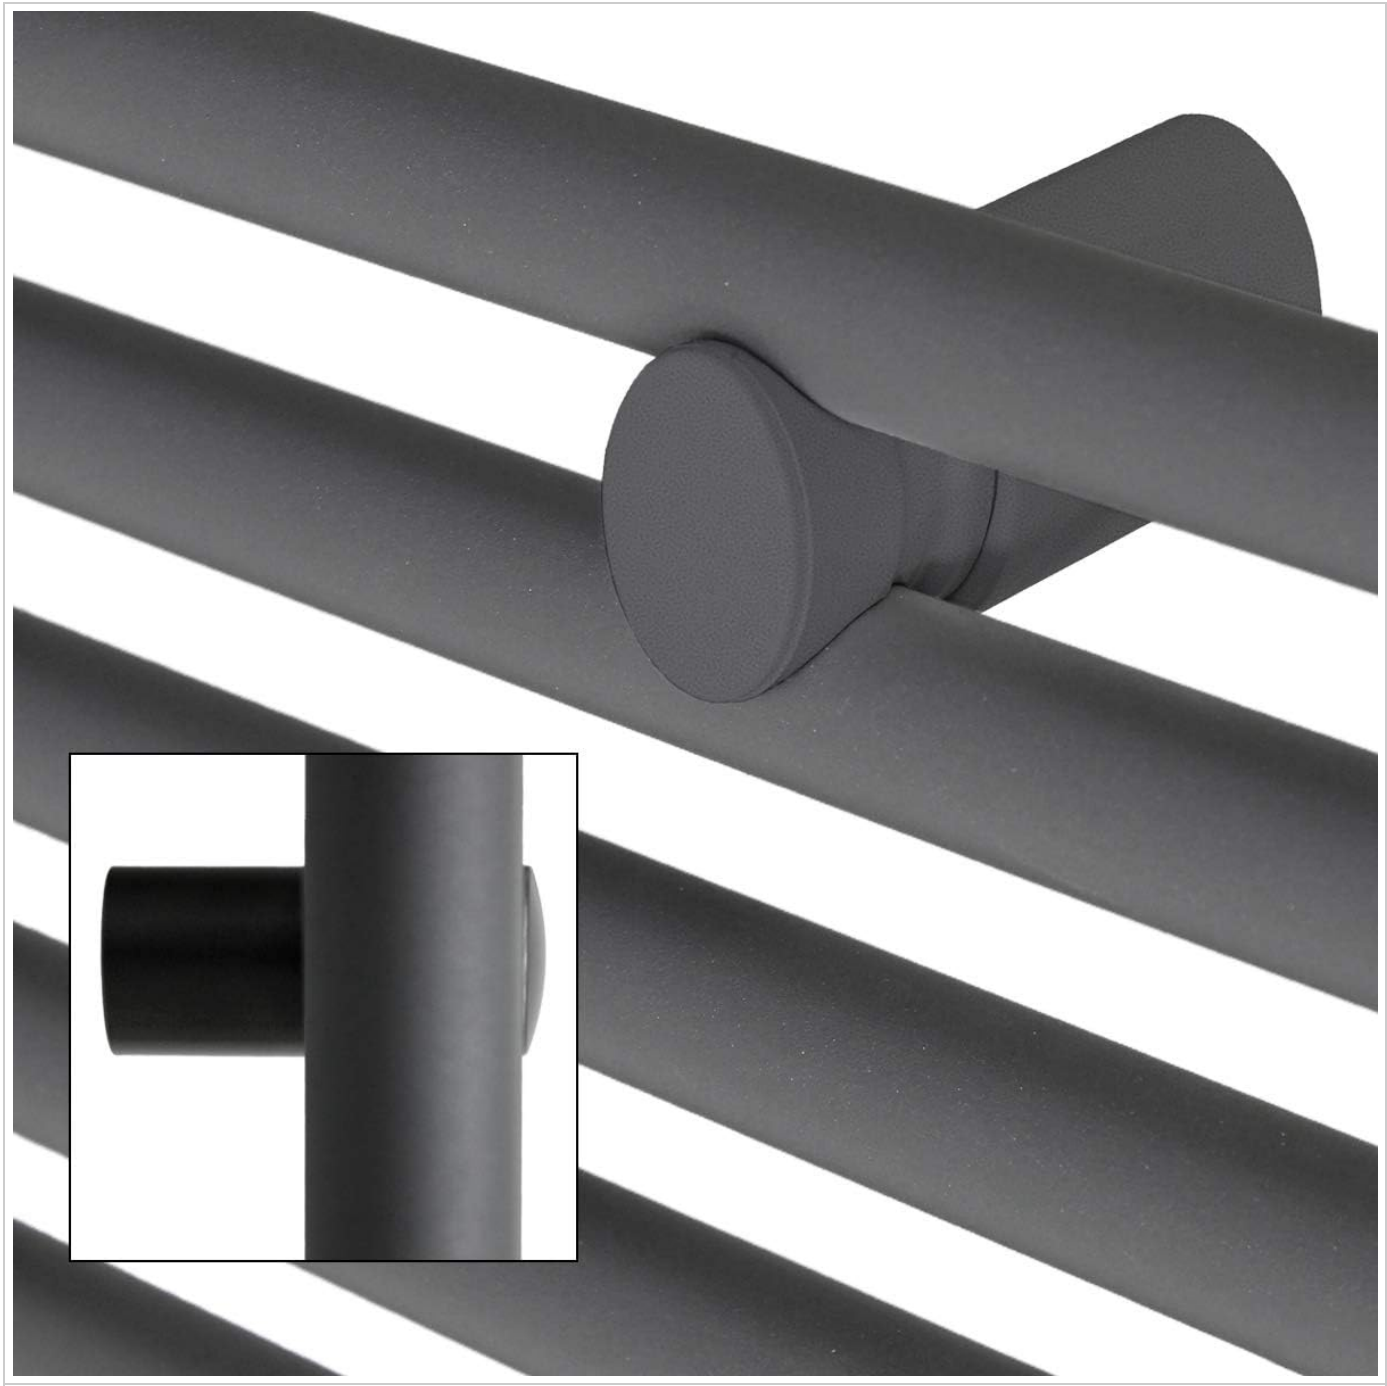


Image: Detail of the wall bracket installation.



Image: Top and bottom connections with bleeding valve and blanking plug.

Operating Instructions

Once installed and connected to your central heating system, operating the LuxeBath Sahara radiator is straightforward:

- **Turning On/Off:** The radiator's heat output is controlled by the valves connected to your central heating system. Open the valves to allow hot water to circulate and close them to stop the flow.
- **Temperature Control:** If you have thermostatic radiator valves (TRVs) installed (not included), you can adjust the heat output for individual rooms.
- **Initial Heating:** During the first few hours of operation, the radiator may emit a slight odor. This is normal and will dissipate quickly. Ensure adequate ventilation.

Maintenance

Regular maintenance ensures the longevity and efficient operation of your radiator. The LuxeBath Sahara radiator is designed for easy maintenance.

- **Cleaning:** Clean the radiator regularly with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the anthracite finish.
- **Bleeding:** If the radiator feels cold at the top but warm at the bottom, it likely contains trapped air. Use a radiator key (not included) to open the bleeding valve slightly until air escapes and water starts to flow. Close the valve immediately. This should be done periodically or when the heating system is refilled.
- **Inspection:** Periodically check all connections for any signs of leaks or corrosion. Address any issues promptly.

Troubleshooting

If you encounter issues with your radiator, consult the following common troubleshooting steps:

Problem	Possible Cause	Solution
Radiator is cold at the top, warm at the bottom.	Trapped air inside the radiator.	Bleed the radiator using the bleeding valve until water flows out.
Radiator is completely cold.	Valves are closed, central heating system is off, or system pressure is too low.	Ensure radiator valves are open. Check if the central heating system is on and functioning. Verify system pressure and repressurize if necessary.
Radiator is leaking.	Loose connection or damaged component.	Immediately turn off the water supply to the radiator. Tighten connections if safe to do so. If damage is apparent, contact a qualified professional.

If these steps do not resolve the issue, please contact a qualified heating engineer or LuxeBath customer support.

Warranty and Support

For information regarding the warranty period and terms for your LuxeBath Sahara Bathroom Radiator, please refer to your purchase documentation or contact your retailer.
For technical support or further assistance, please contact LuxeBath customer service through their official website or your point of purchase. Always provide your product model and purchase date when seeking support.

© 2026 LuxeBath. All rights reserved. Information in this manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CRS72PV2

More documents and user manuals: **https://manuals.plus/**