Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

bonsaii L418-C


bonsaii A4 Laminator L418-C User Manual

Model: L418-C

1. Product Overview

The bonsaii A4 Laminator L418-C is a compact and efficient laminating machine designed for home and office use. It features two laminating modes for different paper thicknesses and a jam prevention mechanism for smooth operation. This laminator is suitable for documents up to A4 size, including photos, business cards, and certificates.

This package includes the laminator unit and a starter set of 50 laminating films (30 x A4, 10 x A5, 10 x A6), allowing you to begin laminating immediately.

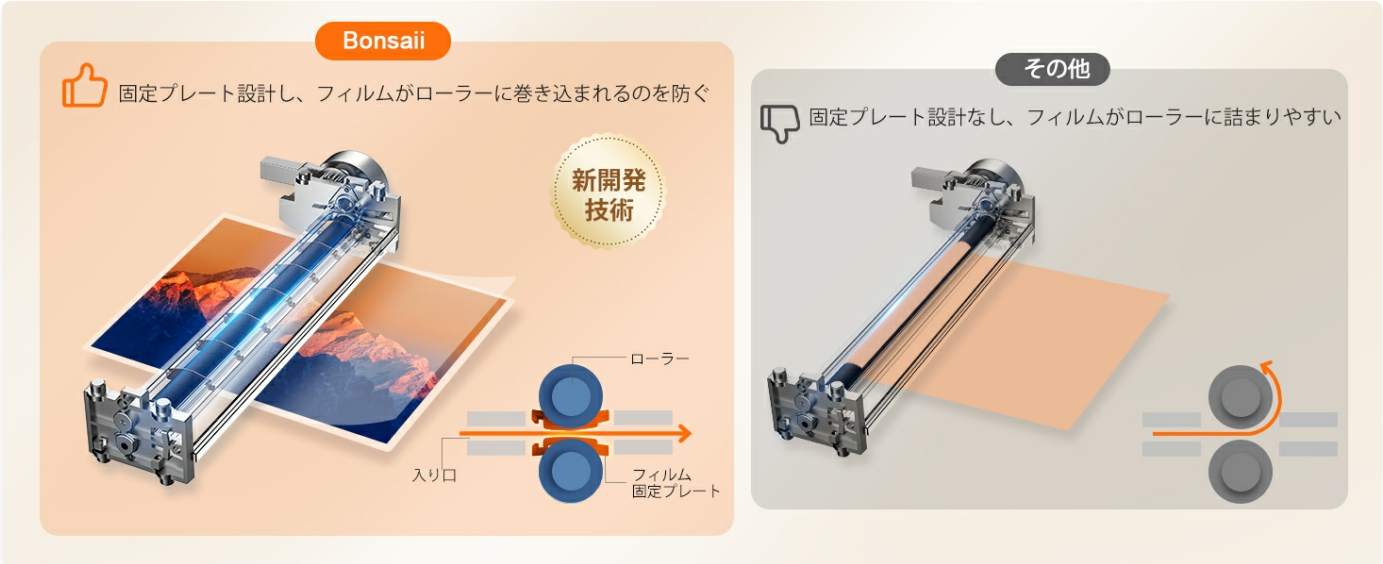

The bonsaii A4 Laminator L418-C comes with a starter set of 50 laminating films (A4, A5, A6).



The laminator supports various document types up to A4 size.

2. Setup Instructions

1. **Unpack the Laminator:** Carefully remove the laminator and all accessories from the packaging.
2. **Place on a Stable Surface:** Position the laminator on a flat, stable, and heat-resistant surface. Ensure there is enough space behind the machine for laminated documents to exit freely.
3. **Connect Power:** Plug the power cord into a suitable electrical outlet.
4. **Prepare Documents:** Place your document inside a laminating film. Ensure the document is centered and aligned within the film, leaving a small margin on all sides.

3. Operating Instructions

3.1 Power On and Warm-up

1. Turn on the laminator using the power switch.
2. Select the appropriate mode based on the film thickness:
   - **100mic (Thin Paper)** for standard documents and photos.
   - **160mic (Thick Paper)** for thicker documents or cardstock.
3. Allow approximately 3 minutes for the laminator to warm up. The indicator lamp will illuminate when ready for use.




Step-by-step guide for easy lamination.

3.2 Laminating Documents

1. Once the ready indicator light is on, carefully insert the sealed edge of the laminating film into the laminator's entry slot.
2. The laminator will automatically feed the film through. Do not pull or push the film during the process.
3. Once the laminated document exits the machine, place it on a flat surface to cool and harden.



Simple operation for a perfect finish.

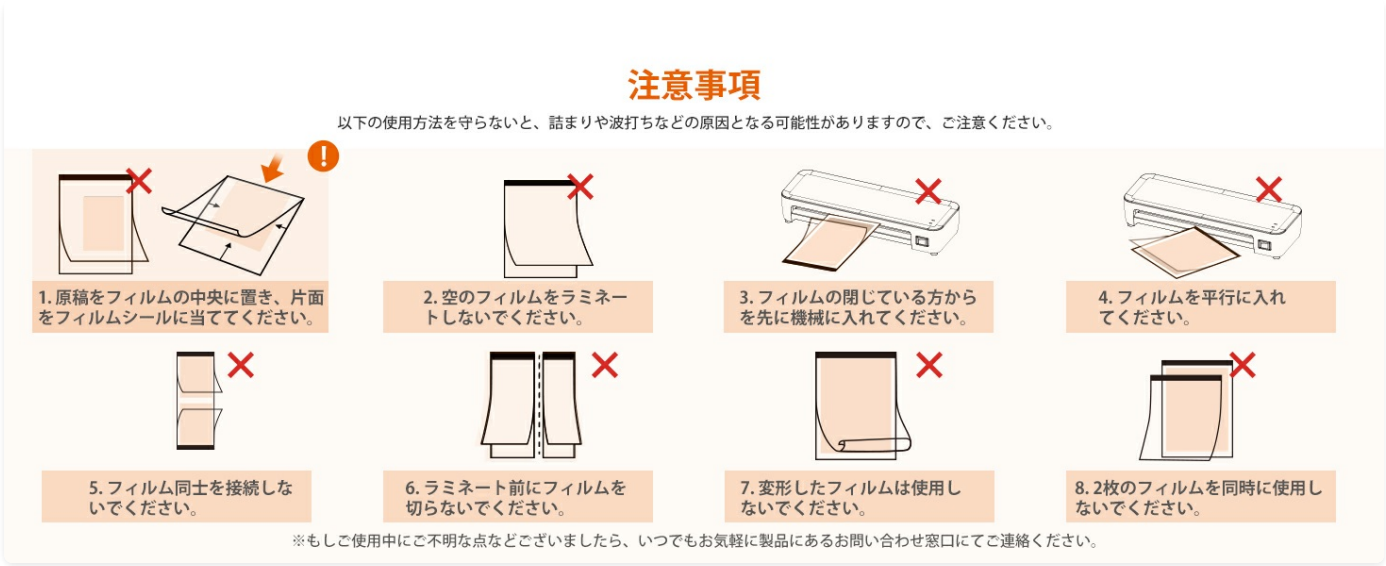

Always insert the sealed edge of the film first and ensure it is straight.

4. Maintenance

- **Cleaning:** Ensure the laminator is unplugged and completely cool before cleaning. Wipe the exterior with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Roller Cleaning:** Periodically run a cleaning sheet (not included) through the laminator to remove any adhesive residue from the rollers.
- **Storage:** When not in use, store the laminator in a dry, dust-free environment.

5. Troubleshooting

5.1 Common Issues and Solutions

Problem	Possible Cause	Solution
Film Jam: Document gets stuck or wrinkled.	Incorrect film insertion, film too thick, or foreign object.	Press the jam release button (if available) to eject the film. Ensure film is inserted straight and sealed edge first. Use correct film thickness for the selected mode.
Poor Lamination Quality: Bubbles, waves, or cloudy finish.	Incorrect temperature setting (mode), insufficient warm-up time, or old/low-quality film.	Ensure the correct mode (thin/thick paper) is selected. Wait for the ready indicator light. Use high-quality laminating films.

Problem	Possible Cause	Solution
Laminator Not Heating: Power light is off.	Not plugged in, power switch off, or power outage.	Check power connection and wall outlet. Ensure the power switch is in the 'ON' position.

5.2 Important Precautions to Avoid Issues



Avoid these common mistakes to prevent jams and damage.

- Do not laminate empty films.
- Do not cut films before laminating.
- Do not use deformed or damaged films.
- Do not attempt to laminate two films simultaneously.
- Ensure the document is centered within the film and the film is inserted straight.

6. Specifications

Brand	bonsaii
Model Number	L418-C
Color	White
Product Dimensions (L x W x H)	33.2 x 11.2 x 6.2 cm
Product Weight	1.45 kg
Number of Rollers	2
Warm-up Time	Approx. 3 minutes

Laminating Speed	270 mm/minute
Max Film Thickness	0.5 mm (film + paper)
Max Document Size	A4
Country of Origin	China



Compact design for easy storage and portability.

7. Warranty Information

This bonsaii A4 Laminator L418-C comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims.

The warranty does not cover damage caused by misuse, accident, unauthorized modification, or failure to follow the instructions in this manual.

8. Customer Support

If you encounter any issues or have questions regarding your bonsaii A4 Laminator L418-C that are not addressed in this manual, please contact bonsaii customer support. Refer to the product packaging or the official bonsaii website for the most current contact information.

When contacting support, please have your product model number (L418-C) and purchase details ready.

© 2023 bonsaii. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CRTXHBK4

More documents and user manuals: **https://manuals.plus/**