RYOBI PCL756K

RYOBI ONE+ 18V Cordless SWIFTClean Spot Cleaner Kit (Model PCL756K) User Manual

Model: PCL756K | Brand: RYOBI

1. Introduction

This manual provides instructions for the safe operation, assembly, maintenance, and troubleshooting of your RYOBI ONE+ 18V Cordless SWIFTClean Spot Cleaner Kit. Please read this manual thoroughly before using the product and retain it for future reference.

The RYOBI SWIFTClean Spot Cleaner is designed for cleaning fresh spills and immediate messes on various surfaces such as upholstery, car seats, stairs, and carpets. It features a powered scrub brush and powerful suction for effective spot cleaning. This tool is part of the RYOBI 18V ONE+ System, utilizing the same battery platform as other RYOBI 18V tools.

2. Safety Information

WARNING: Read all safety warnings, instructions, illustrations, and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious injury.

General Safety Precautions:

- Always wear appropriate personal protective equipment, such as safety glasses, when operating the spot cleaner.
- Do not operate the spot cleaner in wet conditions or immerse it in water.
- Keep children and bystanders away while operating the appliance.
- Use only RYOBI recommended cleaning solutions.
- Ensure all components are properly assembled before use.
- Do not use the appliance for purposes other than its intended use.

Battery Safety:

- Use only RYOBI 18V ONE+ batteries and chargers with this product.
- Do not charge batteries in damp or wet locations.
- Do not incinerate the battery, even if it is severely damaged or completely dead. The battery can explode in a

fire.

- Refer to your battery and charger manuals for complete safety instructions.

3. Package Contents

Verify that all items listed below are included in your package:

- RYOBI ONE+ SWIFTClean Spot Cleaner
- RYOBI 18V ONE+ 2.0 Ah Lithium-Ion Battery
- RYOBI 18V ONE+ Charger
- 6oz RYOBI OXY Cleaning Solution
- Operator's Manual (this document)



Figure 3.1: Included components of the RYOBI ONE+ SWIFTClean Spot Cleaner Kit, showing the main unit, 2.0Ah battery, and charger.

4. Assembly and Setup

4.1 Charging the Battery

1. Connect the charger to a standard electrical outlet.
2. Slide the 2.0 Ah Lithium-Ion battery onto the charger until it clicks into place.
3. Allow the battery to charge fully. Refer to the charger's instruction manual for charging indicators and times.
4. Once charged, remove the battery from the charger.

4.2 Installing the Battery

1. Align the charged battery with the battery port on the rear of the SWIFTClean Spot Cleaner.
2. Slide the battery into the port until it locks securely into place. Ensure it is fully seated to prevent accidental dislodgement during operation.

4.3 Filling the Solution Tank

1. Locate the clean solution tank on the front of the unit.
2. Open the tank cap.
3. Pour the 6oz RYOBI OXY Cleaning Solution directly into the tank. Do not dilute the ready-to-use formula.
4. Securely close the tank cap.

5. Operation

The RYOBI SWIFTClean Spot Cleaner is designed for quick clean-ups of fresh spills. It is not intended for deep cleaning or removing set-in stains.

5.1 Preparing the Area

- Remove any loose debris or solids from the spill area before operating the cleaner.
- Test the cleaning solution on an inconspicuous area of the surface to be cleaned to ensure colorfastness.

5.2 Cleaning Procedure

1. Ensure the battery is installed and the solution tank is filled.
2. Press the power button located on the handle to turn on the unit.
3. Position the cleaning head directly over the spill.
4. Press the spray trigger to dispense the cleaning solution onto the stain.
5. Move the cleaning head back and forth over the stain, allowing the powered scrub brush to agitate the area.
6. Release the spray trigger and continue moving the cleaning head over the wet area to suction up the dirty solution.
7. Repeat steps 4-6 as necessary until the stain is removed or significantly reduced.
8. Turn off the unit by pressing the power button.

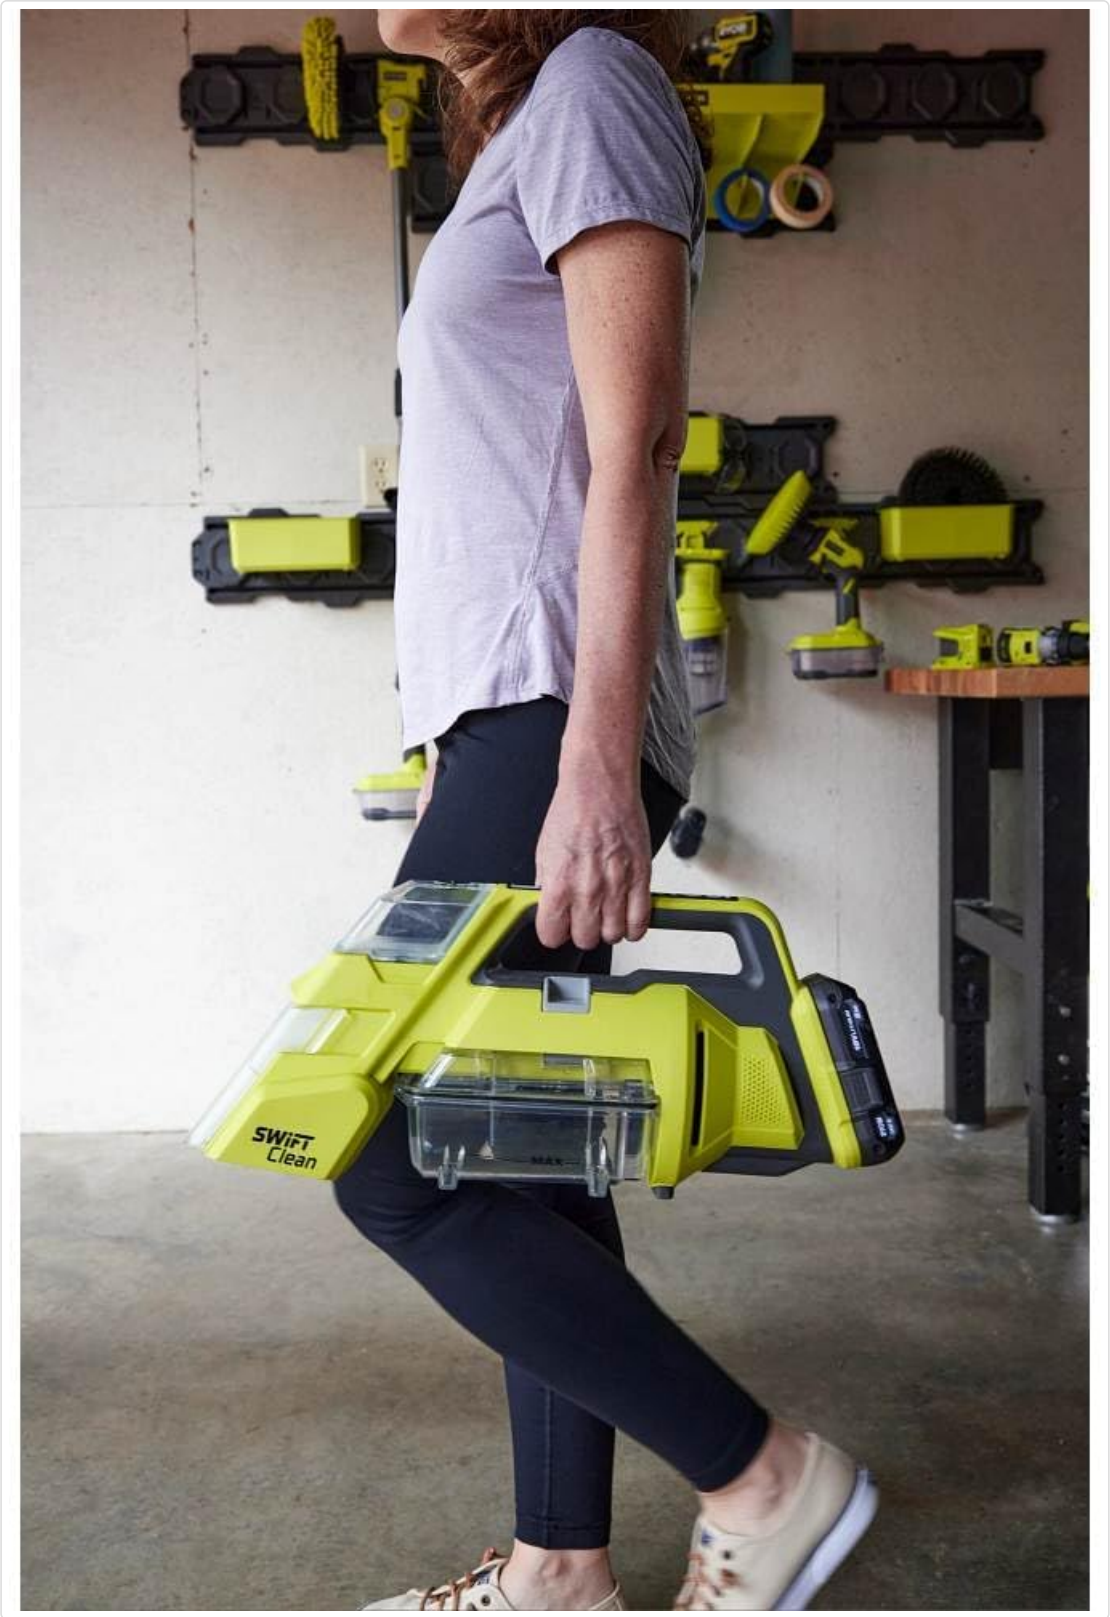


Figure 5.1: Demonstrating the use of the RYOBI SWIFTClean Spot Cleaner for cleaning a carpeted surface.

6. Maintenance and Cleaning

Regular maintenance ensures optimal performance and extends the life of your spot cleaner.

6.1 Emptying and Cleaning the Dirty Water Tank

1. After each use, or when the dirty water tank reaches its maximum fill line, turn off the unit and remove the battery.
2. Detach the dirty water tank from the unit.

3. Carefully empty the dirty water into a sink or drain.
4. Rinse the dirty water tank thoroughly with clean water.
5. All clear components of your SWIFTClean, including the dirty water tank and solution tank, are top rack dishwasher safe for easy cleaning.
6. Allow all components to air dry completely before reassembling.

6.2 Cleaning the Brush Roll

- Inspect the powered scrub brush for any tangled hair or debris.
- Remove any obstructions manually.
- The brush roll can also be rinsed under running water. Ensure it is completely dry before reinstallation.

6.3 Storage

- Store the spot cleaner in a dry, indoor location, away from direct sunlight and extreme temperatures.
- Ensure the battery is removed from the unit before storage.

7. Troubleshooting

If you encounter issues with your RYOBI SWIFTClean Spot Cleaner, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Unit does not turn on.	Battery not charged or not properly installed.	Ensure battery is fully charged and securely inserted.
Poor suction.	Dirty water tank is full or improperly seated. Suction nozzle is clogged.	Empty and properly re-seat the dirty water tank. Clear any obstructions from the suction nozzle.
No spray from nozzle.	Clean solution tank is empty. Spray nozzle is clogged.	Refill the clean solution tank. Clean the spray nozzle.
Brush roll not rotating.	Debris tangled in brush roll. Unit not powered on.	Remove debris from brush roll. Ensure unit is powered on.

8. Specifications

- **Brand:** RYOBI
- **Model:** PCL756K
- **Power Source:** 18V ONE+ Lithium-Ion Battery
- **Special Feature:** Lightweight, Cordless
- **Maximum Suction:** 17 Inches
- **Battery Life:** Approximately 75 minutes (with 2.0 Ah battery, actual runtime may vary)
- **Indoor/Outdoor Usage:** Indoor
- **Item Weight:** 9.38 pounds
- **Package Dimensions:** 22 x 9.1 x 6.7 inches
- **UPC:** 659821683420

9. Warranty and Support

For warranty information, product registration, or technical support, please visit the official RYOBI website or contact RYOBI customer service. Keep your purchase receipt as proof of purchase for warranty claims.
As part of the RYOBI 18V ONE+ System, this product is designed for compatibility with other RYOBI 18V ONE+ tools and accessories.
RYOBI Official Website: www.ryobitools.com

© 2024 RYOBI. All rights reserved.
This manual is for informational purposes only. RYOBI reserves the right to make changes to product specifications at any time without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question