GODOX X3-O

Godox X3-O Touchscreen TTL Wireless Flash Trigger User Manual

Model: X3-O | Brand: GODOX

1. Important Safety Instructions

Please read and understand the following safety instructions before using the Godox X3-O Flash Trigger to ensure safe and proper operation.

- Always keep this product dry. Avoid exposure to rain or damp environments, as this product does not have waterproof functionality.
- Do not disassemble the unit. If repairs are necessary, send the product to an authorized maintenance center.
- Keep the product out of reach of children.
- Discontinue use immediately if the product breaks, opens due to extrusion, falling, or strong impact. Touching internal electronic parts could result in electric shock.
- Do not use or store the flash unit in ambient temperatures exceeding 50°C (122°F), as this can damage electronic components.
- Turn off the flash unit immediately in the event of any malfunction.

2. What's in the Box

Verify that all components are present upon unpacking:

- Godox X3-O Flash Trigger x1
- USB-C Charging Cable x1
- Storage Bag x1
- Cleaning Cloth x1



The Godox X3-O Flash Trigger, USB-C charging cable, storage bag, and cleaning cloth are included in the package.

3. Setup

3.1 Charging the Battery

The X3-O is equipped with a built-in rechargeable lithium battery. To charge the device, connect the included USB-C charging cable to the USB-C port on the trigger and a suitable USB power source. A full charge from 0% to 100% typically takes approximately 2 hours. A fully charged battery provides over 5 days of operating time, totaling around 6000 flashes per charge.



The X3-O charging via its USB-C port, illustrating its quick charge time and extended operating duration.

3.2 Mounting the Flash Trigger

To mount the Godox X3-O onto your camera, slide the trigger's hotshoe onto the camera's hotshoe mount until it clicks securely into place. The robust design ensures a stable connection and protects the camera's hotshoe.



The X3-O mounted on a camera, demonstrating its secure and easy-mounting hotshoe design.

3.3 Firmware Updates

Firmware updates can be performed via the USB-C connection. Visit the official Godox website for the latest firmware versions and instructions.


4. Operating Instructions

4.1 Powering On/Off


Press and hold the power button located on the side of the unit to turn the X3-O on or off. The OLED screen will illuminate upon power-on.

4.2 Touchscreen Interface and Controls

The X3-O features a vivid OLED touchscreen for intuitive control. You can navigate menus, adjust settings, and switch modes by swiping and tapping the screen. For tactile control, physical buttons are also available on the side of the unit, useful in situations like cold weather when wearing gloves.

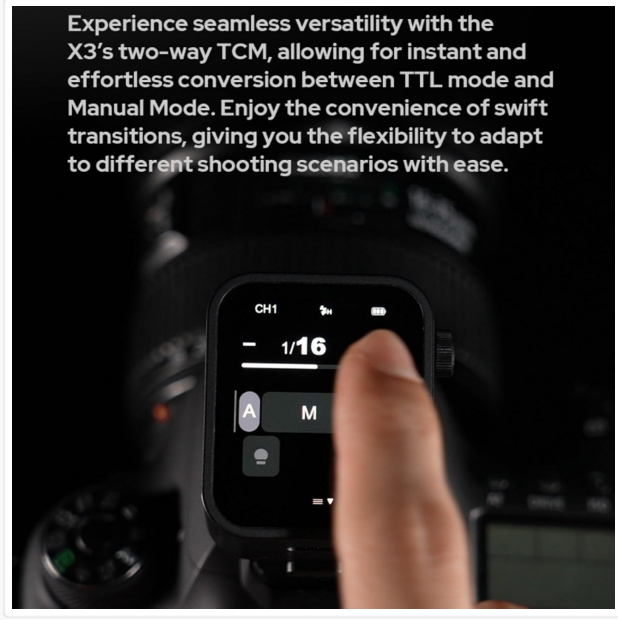

The touchscreen interface allows for easy adjustment of flash settings and modes.

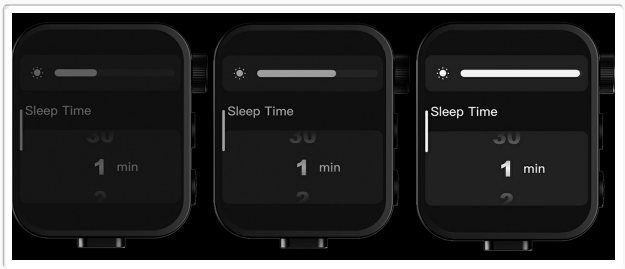

Swiping and tapping on the X3-O's touchscreen for intuitive control.

4.3 Adjusting Screen Brightness

The OLED screen brightness can be adjusted by sliding your finger left or right on the screen. This allows for optimal visibility in various lighting conditions, from bright sunlight to low-light environments.



Adjusting the screen brightness by sliding on the touchscreen.

4.4 TTL and Manual Mode Conversion (TCM)

The X3-O features two-way TCM (TTL Convert Manual) functionality, allowing for instant and effortless conversion between TTL (Through-The-Lens) mode and Manual mode. This provides flexibility to adapt to different shooting scenarios quickly.

The TCM feature allows for quick switching between TTL and Manual modes.

4.5 Godox Wireless X System

The X3-O utilizes the advanced 2.4GHz Godox Wireless X system for reliable management of your Godox lighting setup. The spare channel scanning function helps prevent interference by identifying clear channels. A Wireless Sync feature allows for quick connection to compatible Godox flashes with a single tap.



The Wireless Sync screen on the X3-O, showing channel and ID settings for seamless connection.

5. Maintenance

Proper maintenance ensures the longevity and optimal performance of your Godox X3-O Flash Trigger.

- **Cleaning:** Use the provided cleaning cloth or a soft, dry cloth to gently wipe the touchscreen and body of the trigger. Avoid using harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the X3-O in the included storage bag to protect it from dust, scratches, and minor impacts. Keep it in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** For extended storage, ensure the battery is partially charged (around 50%) to maintain battery health. Avoid fully discharging the battery for long periods.

6. Troubleshooting

If you encounter issues with your Godox X3-O, refer to the following common troubleshooting steps:

- **Trigger Not Firing:**
  - Ensure the X3-O is securely mounted on the camera's hotshoe.
  - Check that the battery is sufficiently charged.
  - Verify that the flash unit(s) are powered on and set to the correct channel and ID as the X3-O.
  - Confirm that the camera's flash settings are correctly configured.
- **Screen Unresponsive:**
  - Restart the device by powering it off and then on again.
  - Ensure the screen is clean and free from moisture or debris.
  - If the issue persists, consider performing a firmware update.
- **Interference Issues:**
  - Use the spare channel scanning function to find a clear channel with less interference.
  - Ensure no other 2.4GHz devices are operating on the same frequency nearby.

- **Device Not Powering On:**
  - Charge the battery for at least 30 minutes.
  - If the device still does not power on after charging, contact customer support.

If these steps do not resolve the issue, please contact Godox customer support for further assistance.

7. Specifications

Feature	Specification
Product Dimensions	3.94 x 1.97 x 3.94 inches
Item Weight	8.1 ounces
Item Model Number	X3-O
Batteries	1 Lithium Ion battery required (built-in)
Compatible Mountings	OM System (Olympus), Panasonic
Flash Sync Speed	1/8000 sec
Wireless System	2.4GHz Godox Wireless X System
Display	High-Definition OLED Touchscreen

8. Warranty and Support

8.1 Warranty Information

Specific warranty details for the Godox X3-O Flash Trigger are typically provided with the product packaging or can be found on the official Godox website. Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For technical support, service, or inquiries regarding your Godox X3-O, please visit the official Godox website or contact their customer service department. Contact information is usually available in the product's packaging or on the manufacturer's website.

© 2025 GODOX. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question