Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

HEX BOTS 6071523

HEX BOTS Remote Control Dragon Instruction Manual

Model: 6071523

Introduction

Thank you for choosing the HEX BOTS Remote Control Dragon. This robotic creature is designed to provide an engaging play experience with its realistic movements, adjustable features, and interactive elements. This manual provides essential information for the safe and optimal use of your new toy.



Image: The HEX BOTS Remote Control Dragon, highlighting its adjustable wings, flexible tail, and rotating paws.

Package Contents

Ensure all items are present before beginning setup:

- 1 x HEX BOTS Remote Control Dragon
- 1 x Remote Control
- 2 x Rechargeable Lithium Batteries (for Dragon)
- 1 x USB Charging Cable
- 2 x LR44 Button Cell Batteries (pre-installed in remote)

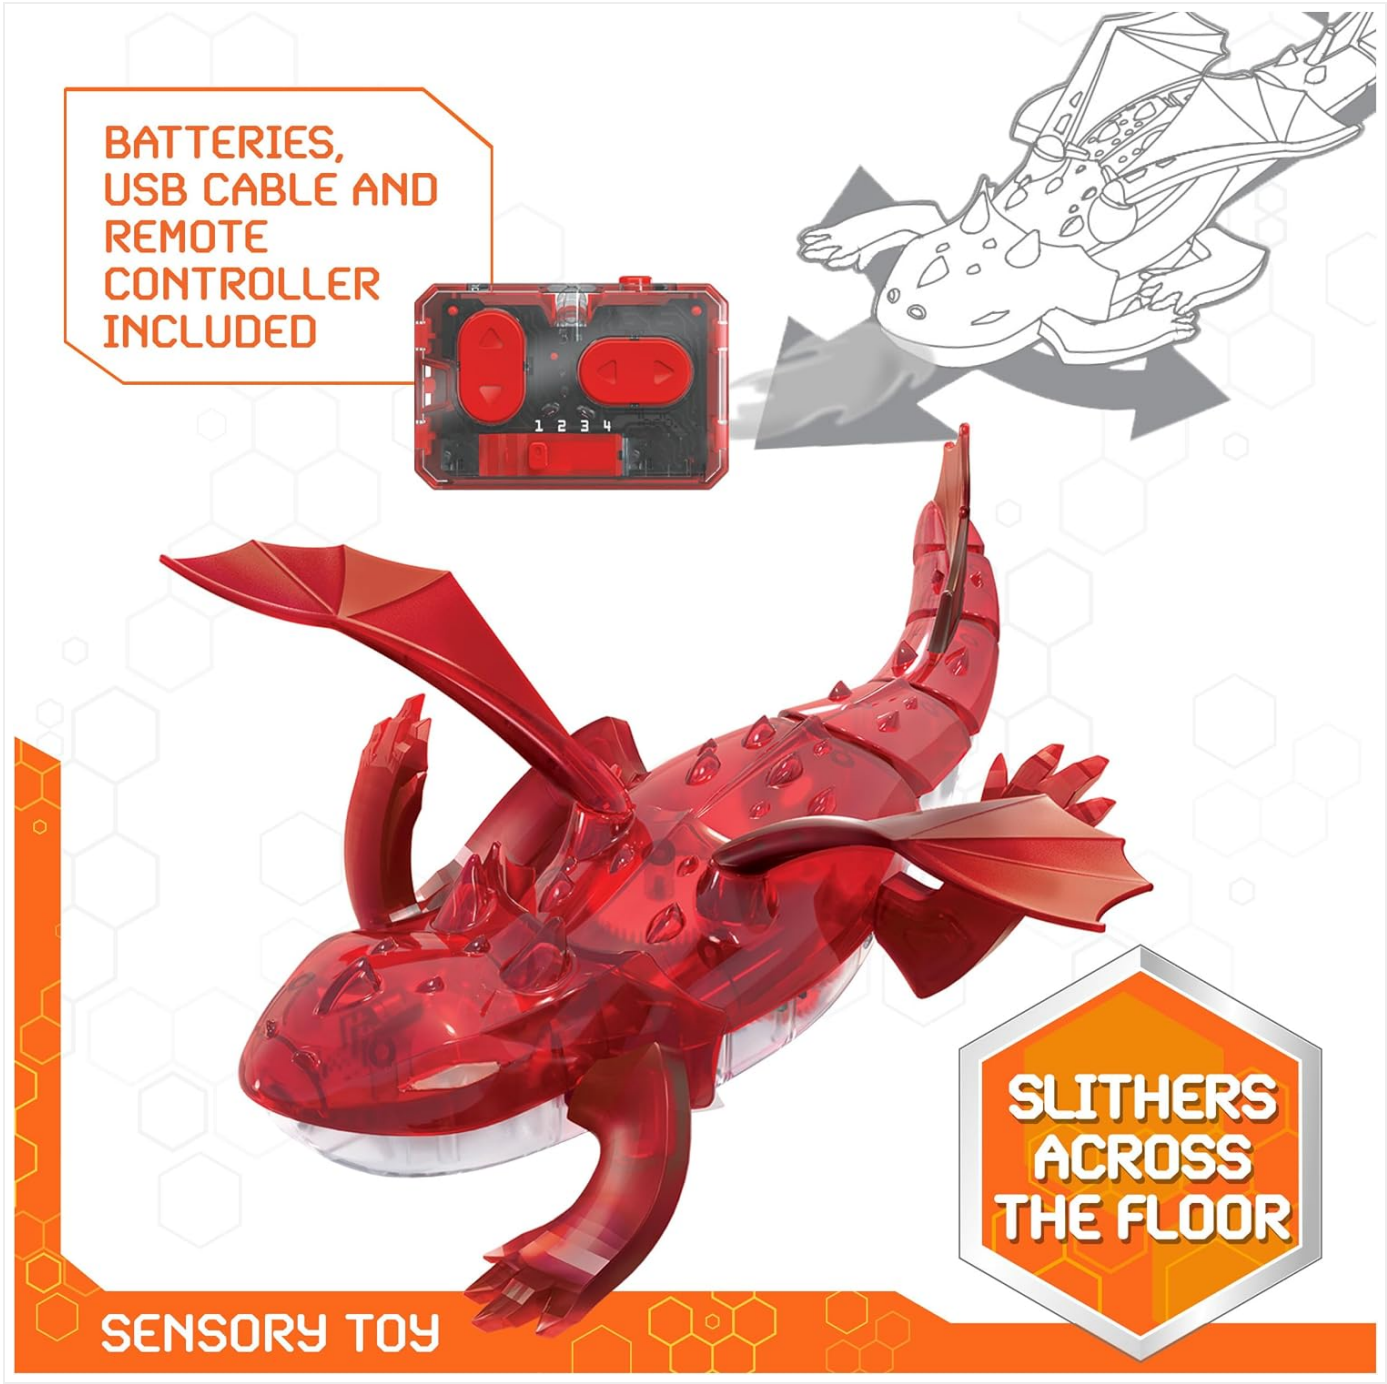


Image: All components included in the HEX BOTS Remote Control Dragon package: the dragon, its remote, and the USB charging cable.

Setup

Follow these steps to prepare your HEX BOTS Remote Control Dragon for play:

1. **Install Dragon Batteries:** Locate the battery compartment on the underside of the dragon. Insert the two rechargeable Lithium batteries, ensuring correct polarity. Secure the battery compartment cover.
2. **Charge Dragon Batteries:** Connect the provided USB charging cable to the dragon's charging port and to a standard USB power source (e.g., computer, wall adapter). The charging indicator will illuminate. Allow sufficient time for a full charge (refer to packaging for specific charging times).
3. **Remote Control Batteries:** The remote control comes with two LR44 button cell batteries pre-installed. If the remote does not respond, check or replace these batteries.
4. **Power On:** Once the dragon's batteries are charged, turn on the power switch located on the dragon. Turn on the remote control using its power switch.
5. **Pairing:** The dragon and remote should automatically pair. If not, ensure both are powered on and within close proximity.

Operating Instructions

Control your HEX BOTS Dragon with the remote control:

- **Movement:** Use the directional controls on the remote to make the dragon move forward, backward, and turn. The rotating paws provide traction for movement across various flat surfaces.
- **Fire Breath:** Press the designated button on the remote to activate the LED-lit fire breath effect and roaring sound.
- **Adjustable Wings:** The dragon's wings can be manually adjusted to different positions, enhancing its appearance.
- **Flexible Tail:** The dragon features a flexible tail that moves from side to side as it walks, adding to its realistic motion.
- **Multi-Channel Play:** The remote control supports four channels, allowing multiple HEX BOTS dragons to be operated simultaneously without interference. Select a different channel on each remote if playing with multiple dragons.

Maintenance

Proper care will extend the life of your HEX BOTS Dragon:

- **Cleaning:** Wipe the dragon and remote with a clean, damp cloth. Do not submerge in water or use harsh chemicals.
- **Battery Care:** Always turn off the dragon and remote when not in use. Recharge the Lithium batteries as needed. Remove all batteries if the toy will be stored for an extended period.
- **Storage:** Store the toy in a cool, dry place away from direct sunlight and extreme temperatures.

Troubleshooting

If you encounter issues with your HEX BOTS Dragon, refer to the following common solutions:

Problem	Possible Cause	Solution
Dragon does not turn on or respond.	Low or uncharged batteries in dragon or remote. Power switches are off.	Ensure dragon batteries are fully charged and correctly installed. Check remote control batteries. Verify both power switches are in the 'ON' position.
Dragon moves erratically or not at all.	Interference. Low battery. Obstruction.	Move to an open area away from other electronic devices. Recharge dragon batteries. Check for debris in the rotating paws.
Fire breath or roar function does not work.	Low battery. Remote control issue.	Ensure dragon batteries are sufficiently charged. Check remote control batteries.
Remote control not pairing with dragon.	Dragon or remote not powered on. Too far apart.	Ensure both devices are powered on. Bring them closer together. If using multiple dragons, ensure each is on a different channel.

Specifications

- **Brand:** HEX BOTS
- **Model Number:** 6071523
- **Item Dimensions (L x W x H):** 8.66" x 3.54" x 1.58"
- **Item Weight:** 7.84 ounces

- **Material:** Plastic
- **Power Source:** Battery Powered
- **Dragon Batteries:** 2 x Rechargeable Lithium (included)
- **Remote Control Batteries:** 2 x LR44 Button Cell (included)
- **Operation Mode:** Remote-Controlled
- **Recommended Age:** 4 years and up

Safety Information

Please read and adhere to the following safety guidelines:

- **Age Recommendation:** This product is recommended for children ages 4 and up.
- **Choking Hazard:** Contains small parts. Not suitable for children under 3 years.
- **Battery Safety:** Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Dispose of batteries properly.
- **Supervision:** Adult supervision is recommended during play.
- **Usage Environment:** Use on flat, clear surfaces. Avoid water, sand, or rough terrain.

Warranty and Support

Warranty: This product is sold without a manufacturer's warranty. Please refer to the retailer's return policy for any issues upon purchase.
Customer Support: For further assistance or inquiries, please contact your retailer or visit the official HEX BOTS website for support resources.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CSFN15Z8

More documents and user manuals: **https://manuals.plus/**