Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ZdalaMit WH-5674

User Manual for ZdalaMit WH-5674 Bluetooth Replacement Remote Control

Model: WH-5674

Introduction

This manual provides detailed instructions for the setup, operation, and maintenance of your new ZdalaMit WH-5674 Bluetooth Replacement Remote Control. This remote is designed to be a direct replacement for specific Epson Projector models, offering seamless control through Bluetooth connectivity.

Please read this manual thoroughly before using the remote control to ensure proper functionality and to maximize your user experience.

Setup and Pairing

1. Battery Installation

The WH-5674 remote control requires two (2) 1.5V AAA Alkaline batteries for operation. Batteries are not included in the package.

- Locate the battery compartment cover on the back of the remote control.
- Slide the cover downwards or press the latch to open it.
- Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
- Close the battery compartment cover securely.

2. Bluetooth Pairing

Pairing the remote control with your Epson Projector is required before first use. Follow these steps:

1. Ensure your Epson Projector is turned on.
2. On your projector, navigate to the pairing screen. This is typically found in the projector's settings menu under "Bluetooth" or "Remote Control Pairing."
3. While the pairing screen is displayed on the projector, press and hold the **Volume Down** button and the **Enter** button (center of the directional pad) simultaneously on the WH-5674 remote control.
4. Continue holding both buttons until the indicator light on the remote control begins to blink.
5. A message will appear on the projector screen confirming that the remote control is paired. The indicator light

on the remote will stop blinking once pairing is successful.



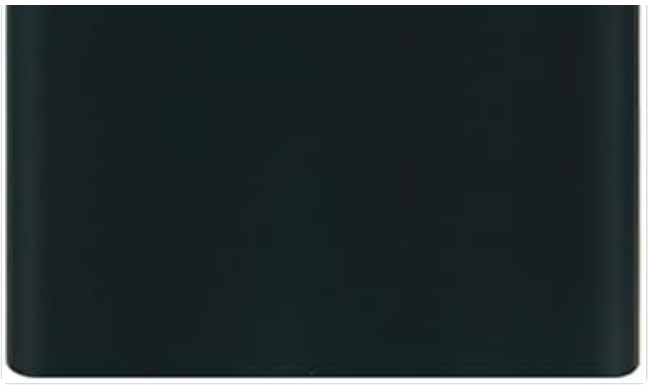


Image: Front view of the WH-5674 remote control, highlighting its button layout including power, navigation, volume, and dedicated buttons for YouTube, Netflix, and Google Play.

Operating Instructions

Once paired, your WH-5674 remote control can be used to operate your Epson Projector. The remote features standard navigation and control buttons, along with dedicated quick-access buttons for popular streaming services.

- **Power Button:** Located at the top left, use to turn the projector on or off.
- **Voice Assistant Button:** Located at the top right, typically represented by a microphone icon or colored dots, activates the projector's voice assistant feature.
- **Navigation Pad (Directional Pad):** The large circular pad in the center allows for menu navigation (Up, Down, Left, Right).
- **Enter Button:** The button in the center of the navigation pad, used to confirm selections.
- **Back Button:** (Arrow pointing left) Returns to the previous screen or menu.
- **Home Button:** (House icon) Returns to the projector's main home screen.
- **Menu/Apps Button:** (Grid icon) Opens the projector's application or settings menu.
- **Volume Buttons (VOL +/-):** Adjusts the audio volume of the projector.
- **Dedicated App Buttons:** Includes direct access buttons for YouTube, Netflix, and Google Play, allowing quick launch of these applications (functionality depends on projector's installed apps).







Image: The WH-5674 remote control shown alongside a microphone icon, emphasizing its voice control feature.

Compatible Projector Models

This WH-5674 Bluetooth Replacement Remote Control is compatible with the following Epson Projector models:

- CO-FH02
- EH-TW6250
- EH-TW2350
- EH-TW2250
- EH-TW2200
- WH-152
- WII191009D

Maintenance

To ensure the longevity and optimal performance of your remote control, please observe the following maintenance guidelines:

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or if the indicator light does not illuminate during pairing attempts. Always use new 1.5V AAA Alkaline batteries.
- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries to prevent leakage.

Troubleshooting

If you encounter issues with your WH-5674 remote control, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Remote does not respond.	Check if batteries are inserted correctly with correct polarity. Replace old or depleted batteries with new AAA alkaline batteries. Ensure the remote is paired with the projector. If not, follow the "Bluetooth Pairing" steps.
Pairing fails or indicator light does not blink.	Ensure the projector is on and on the pairing screen. Confirm you are pressing and holding the **Volume Down** and **Enter** buttons simultaneously. Move closer to the projector to ensure a strong Bluetooth signal. Try restarting the projector and then attempting the pairing process again.
Dedicated app buttons (YouTube, Netflix, Google Play) do not work.	Ensure the respective applications are installed and updated on your Epson Projector. Verify your projector has an active internet connection.

Technical Specifications

Feature	Detail
Model Number	WH-5674
Brand	ZdalaMit
Connectivity	Bluetooth
Power Supply	2 x 1.5V AAA Alkaline Batteries (Not Included)
Product Dimensions	5.9 x 1.57 x 0.55 inches (15 x 4 x 1.4 cm)

Feature	Detail
Item Weight	1.41 ounces (40 grams)
Color	Black
Special Feature	Ergonomic design
Compatible Devices	Epson Projectors (specific models listed in "Compatible Projector Models" section)

© 2024 ZdalaMit. All rights reserved.
For further assistance, please refer to your projector's user manual or contact ZdalaMit customer support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CSMZZ5WH

More documents and user manuals: **https://manuals.plus/**