Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

GOLDEN HOUR GH-1317

GOLDEN HOUR GH-1317 Waterproof Digital Sport Watch User Manual

Model: GH-1317

1. Introduction

Thank you for choosing the GOLDEN HOUR GH-1317 Waterproof Digital Sport Watch. This manual provides detailed instructions for the proper setup, operation, and maintenance of your watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.

2. Product Overview

The GOLDEN HOUR GH-1317 is a versatile digital sport watch designed for active lifestyles. It features a clear digital display, backlight, stopwatch, alarm, and calendar functions, all housed in a durable, waterproof casing with a comfortable silicone strap.



Figure 1: Front view of the GOLDEN HOUR GH-1317 Digital Sport Watch, showing the digital display and control buttons.

Watch Components:

- **Display:** Digital time, date, and function indicators.
- **Light Button:** Activates the backlight for visibility in low light.
- **Mode Button:** Cycles through different modes (Time, Alarm, Stopwatch).
- **ST/STP Button:** Starts/stops stopwatch, adjusts settings.
- **Reset Button:** Resets stopwatch, selects settings.
- **Silicone Strap:** Durable and comfortable for daily wear and sports.
- **Metal Case Back:** Engraved with model and water resistance information.



Figure 2: Rear view of the watch, highlighting the stainless steel case back with model and water resistance details.

3. Setup Instructions

Setting Time and Date:

1. From the normal time display, press the **MODE** button repeatedly until the seconds begin to flash. This indicates you are in time setting mode.
2. Press the **RESET** button to cycle through the settings: seconds, hour, minute, month, date, day of the week.
3. Use the **ST/STP** button to adjust the flashing value. Hold the button to change values quickly.
4. Once all settings are correct, press the **MODE** button to return to the normal time display.

12/24 Hour Format:

While in time setting mode (seconds flashing), press the **LIGHT** button to toggle between 12-hour (with AM/PM indicator) and 24-hour formats.

4. Operating Instructions

Using the Backlight:

Press the **LIGHT** button at any time to illuminate the display. The backlight will remain active for a few seconds, providing clear visibility in dark conditions.



Figure 3: The watch display with its luminous backlight activated, showing clear visibility in low light.

Using the Stopwatch:

1. From the normal time display, press the**MODE** button once to enter stopwatch mode. The display will show "00:00:00".
2. Press the **ST/STP** button to start the stopwatch.
3. Press the **ST/STP** button again to pause the stopwatch.
4. Press the **RESET** button to reset the stopwatch to "00:00:00".
5. Press the **MODE** button to exit stopwatch mode and return to the normal time display.

Setting the Alarm:

1. From the normal time display, press the**MODE** button twice to enter alarm setting mode. The alarm time will flash.
2. Press the **RESET** button to select between hour and minute settings.
3. Use the **ST/STP** button to adjust the flashing value (hour or minute).
4. Press the **MODE** button to confirm the alarm time and exit alarm setting mode.

5. To turn the alarm ON/OFF, press the **ST/STP** button while in alarm setting mode. An alarm icon will appear/disappear on the display.

Water Resistance:

This watch is water resistant up to 50 meters (5 ATM), making it suitable for swimming and showering. However, it is important to:

- **DO NOT** press any buttons underwater.
- Avoid using the watch in extreme hot or cold temperatures, as this can affect the seals.
- Avoid prolonged exposure to steam or hot water (e.g., hot tubs, saunas).



Figure 4: The watch is designed to withstand water exposure during activities like handwashing or swimming.

5. Maintenance

Cleaning:

Regularly clean your watch with a soft, dry cloth. For the silicone strap, a mild soap and water solution can be used, followed by thorough rinsing and drying. Avoid harsh chemicals or abrasive materials.

Battery Replacement:

The watch uses one Nonstandard Battery (CR2025). When the display becomes dim or functions become erratic, it may be time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure water resistance is maintained.

6. Troubleshooting

Problem	Possible Cause	Solution
Display is blank or dim.	Low or dead battery.	Replace the battery.
Time is incorrect.	Time not set correctly or accidental button press.	Refer to "Setting Time and Date" section to reset the time.
Water inside the watch.	Buttons pressed underwater or seals compromised by extreme temperatures.	Immediately take the watch to a qualified technician for inspection and repair. Do not attempt to dry it yourself.

Problem	Possible Cause	Solution
Buttons are unresponsive.	Internal malfunction or debris.	Contact customer support for assistance.

7. Specifications

Model Number	GH-1317
Display Type	Digital
Movement Type	Japanese Quartz
Case Material	Metal
Band Material	Silicone
Case Diameter	38 mm
Case Thickness	12 mm
Band Width	16 mm
Band Length	139mm - 208mm (5.47in - 8.18in)
Water Resistance Depth	50 Meters (5 ATM)
Power Source	Battery Powered (1 Nonstandard Battery required)
Item Weight	37 Grams

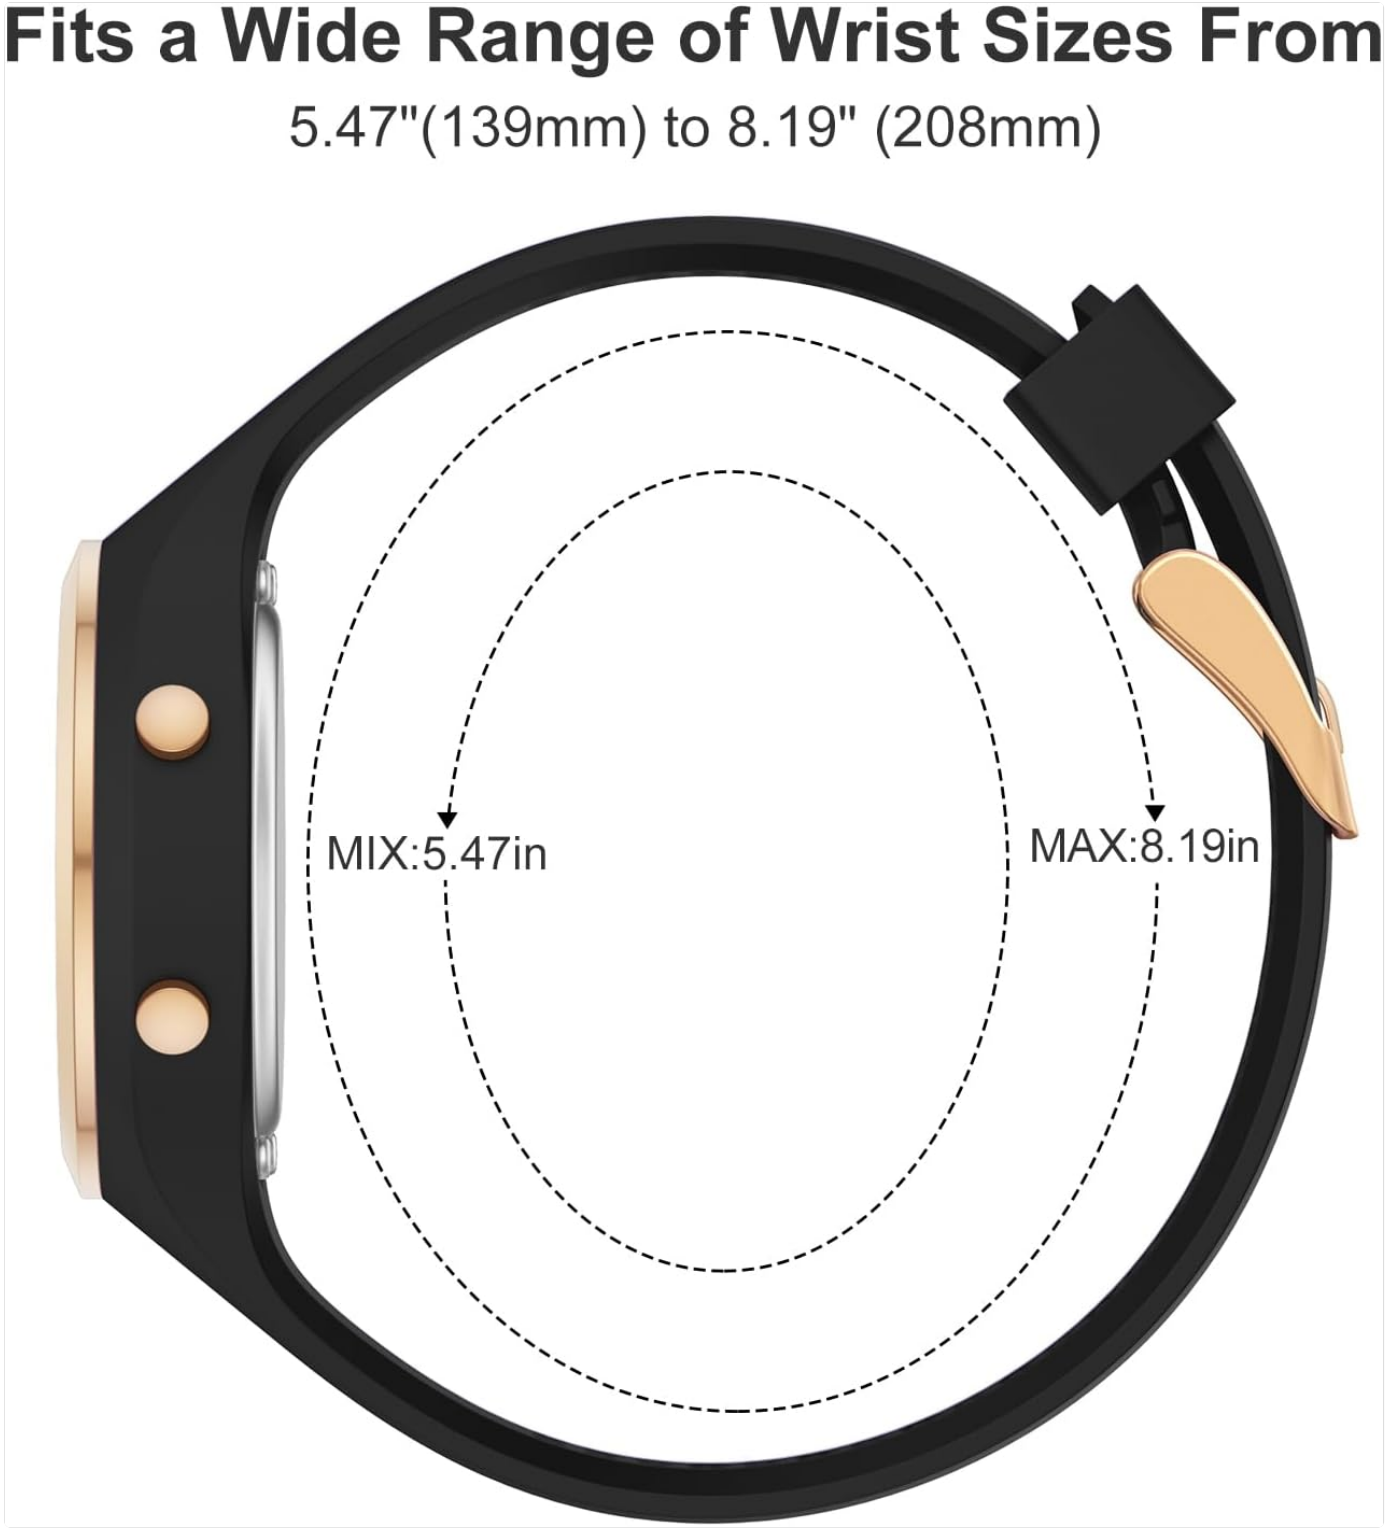


Figure 5: Wrist size compatibility diagram, indicating the strap fits wrists from 5.47 inches (139mm) to 8.19 inches (208mm).



Figure 6: Watch dimensions illustration, showing a case diameter of 1.5 inches (38mm) and band width of 0.63 inches (16mm).

8. Warranty and Support

Your GOLDEN HOUR GH-1317 watch comes with a 1-year after-sales service and a 30-day replacement policy. For any issues or inquiries, please contact GOLDEN HOUR customer support.

Contact Information: Please refer to the contact details provided with your purchase or visit the official GOLDEN HOUR website for support.

Return Policy: 15 days charge back, 30 days replacement policy.

Warranty Type: Limited

9. Product Video

Your browser does not support the video tag.

Video: An overview of the GOLDEN HOUR Digital Sport Watch, demonstrating its features and design.

© 2026 GOLDEN HOUR. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CT3B2L2Y

More documents and user manuals: **https://manuals.plus/**