Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

onerbl 21V AC/DC Adapter

onerbl 21V AC/DC Adapter Instruction Manual

For SEYVUM CS-BM11 Cordless Chainsaw Kit and Compatible Devices

1. Introduction

Thank you for choosing the onerbl 21V AC/DC Adapter. This adapter is designed to provide reliable power for your SEYVUM CS-BM11 Cordless Chainsaw Kit and other compatible 21VDC devices. Please read this manual thoroughly before use to ensure proper operation and to maximize the lifespan of your product.

2. Safety Information

To prevent injury or damage to your device, always follow these safety precautions:

- Do not expose the adapter to water, rain, or excessive moisture.
- Do not disassemble or modify the adapter. Unauthorized modifications can lead to electric shock or fire.
- Ensure the adapter is used within its specified input voltage range (AC 100-240V).
- Avoid using the adapter in extremely hot or cold environments.
- Keep the adapter away from children.
- Unplug the adapter from the power outlet when not in use for extended periods.
- Do not use the adapter if the cable or plug is damaged.

This adapter features **Over Voltage Protection**, **Over Heat Protection**, **Short-Circuit Protection**, and **Over-Current Protection** to safeguard your devices.



Image: Smart Chip Multiple Protection Features

3. Product Overview

3.1 Components

The onerbl 21V AC/DC Adapter consists of a main adapter unit with an integrated AC plug and a DC output cable with a connector.



Image: Front and Side View of the onerbl 21V AC/DC Adapter

3.2 Specifications

Specification	Detail
Model	21V AC/DC Adapter
Input	AC 100-240V, 50/60Hz, 0.3A
Output	21V DC (Specific current output depends on the connected device's requirements, typically for charging 20V Lithium-ion batteries)
Compatibility	SEYVUM CS-BM11 Cordless Chainsaw Kit, TZ-C03AE, HC-12201, and other 21VDC devices.
Cable Length	Approximately 76 inches (6.3 feet)
Manufacturer	Shenzhen Waweis Technology Co., Ltd

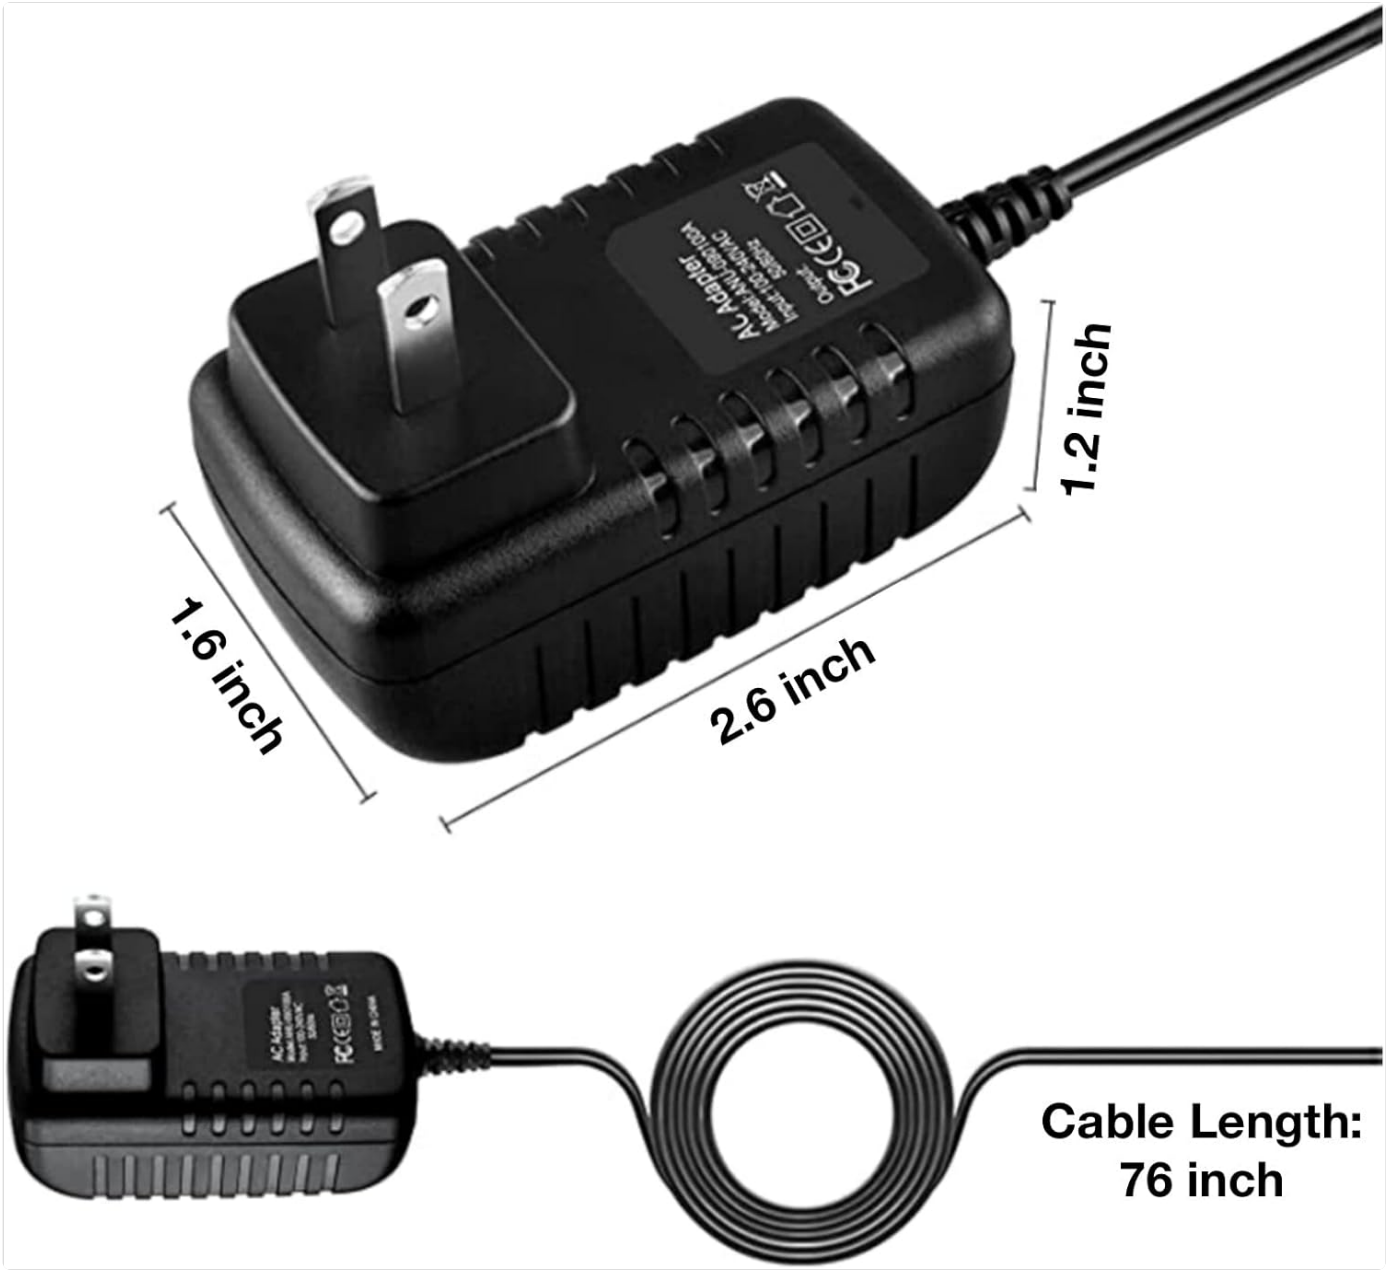


Image: Adapter Dimensions and Cable Length

3.3 Durable Design

The adapter is constructed with quality materials, including copper wire and a PVC jacket, ensuring durability and reliable performance.



Image: Durable Design with Copper Wire and PVC Jacket

4. Setup and Installation

Follow these steps to set up your onerbl 21V AC/DC Adapter:

1. **Verify Compatibility:** Ensure your device requires a 21V DC input and has a compatible charging port. This adapter is specifically designed for the SEYVUM CS-BM11 Cordless Chainsaw Kit.
2. **Connect to Device:** Plug the DC output connector of the adapter into the charging port of your device (e.g., the battery charger for your chainsaw).
3. **Connect to Power Outlet:** Insert the AC plug of the adapter into a standard AC 100-240V wall outlet or power strip.
4. **Confirm Connection:** Once connected, your device should indicate that it is receiving power or charging (e.g., an indicator light on the chainsaw battery charger).



Image: Adapter Connected to a Power Strip and Device

5. Operation

Once properly connected, the adapter will supply power to your device or charge its battery. The charging process is typically managed by the device itself (e.g., the battery management system of the chainsaw battery). Monitor your device's charging indicator to determine charging status.

- Always ensure the adapter is securely plugged into both the wall outlet and your device.
- Do not cover the adapter during operation to allow for proper ventilation.
- Disconnect the adapter from the power source and the device once charging is complete or if the device is not in use.

6. Maintenance

Proper maintenance ensures the longevity and safe operation of your adapter:

- **Cleaning:** Disconnect the adapter from all power sources before cleaning. Use a soft, dry cloth to wipe the exterior.

Do not use liquid cleaners or solvents.

- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures. Avoid tightly coiling the cable to prevent damage.
- **Inspection:** Periodically inspect the adapter, cable, and connectors for any signs of wear, cuts, or damage. If damage is found, discontinue use immediately.

7. Troubleshooting

If you encounter issues with your adapter, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
No power to device / Device not charging	Adapter not properly plugged in	Ensure both AC and DC plugs are securely connected.
	Power outlet is not active	Test the outlet with another device or try a different outlet.
	Damaged adapter or cable	Inspect for visible damage. Discontinue use if damaged.
Adapter feels excessively hot	Poor ventilation or overload	Ensure adapter is not covered. Disconnect and allow to cool. If problem persists, discontinue use.
Device not compatible	Incorrect voltage or connector type	Verify your device's power requirements match the adapter's specifications.

If the problem persists after trying these solutions, please contact customer support.

8. Warranty and Support

This onerbl product is backed by a standard manufacturer's warranty. For specific warranty details, returns, or technical support, please refer to the documentation provided with your purchase or contact the seller directly. Keep your purchase receipt as proof of purchase.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CTBZ8V5H

More documents and user manuals: **https://manuals.plus/**