**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



**onerbl AC/DC Adapter**

# onerbl AC/DC Adapter Instruction Manual

For NordicTrack RW900 Rower Models

## 1. Introduction

This manual provides essential instructions for the safe and effective use of your onerbl AC/DC Adapter. This adapter is designed as a replacement power supply for various NordicTrack RW900 Rower models, including NTEVRW15920.0, NTRW19147.0, NTRW19147.1, NTRW19147.2, NTRW19147.3, NTEVRW159200, NTRW191470, NTRW191471, and NTRW191472. Please read this manual thoroughly before use.

## 2. Product Overview

The onerbl AC/DC Adapter is a high-quality replacement power charger designed to provide reliable power to your compatible NordicTrack rowing machine. It features robust construction and integrated safety mechanisms.

- **Tested Units:** Each adapter is tested to ensure great working condition.
- **High Quality:** Manufactured as a high-quality replacement AC/DC power charger adapter.
- **Worldwide Compatibility:** Supports AC 100-240V 50/60Hz auto input for global use.
- **Safety Features:** Includes Over Voltage Protection, Over Heat Protection, Short-Circuit Protection, and Over-Current Protection.

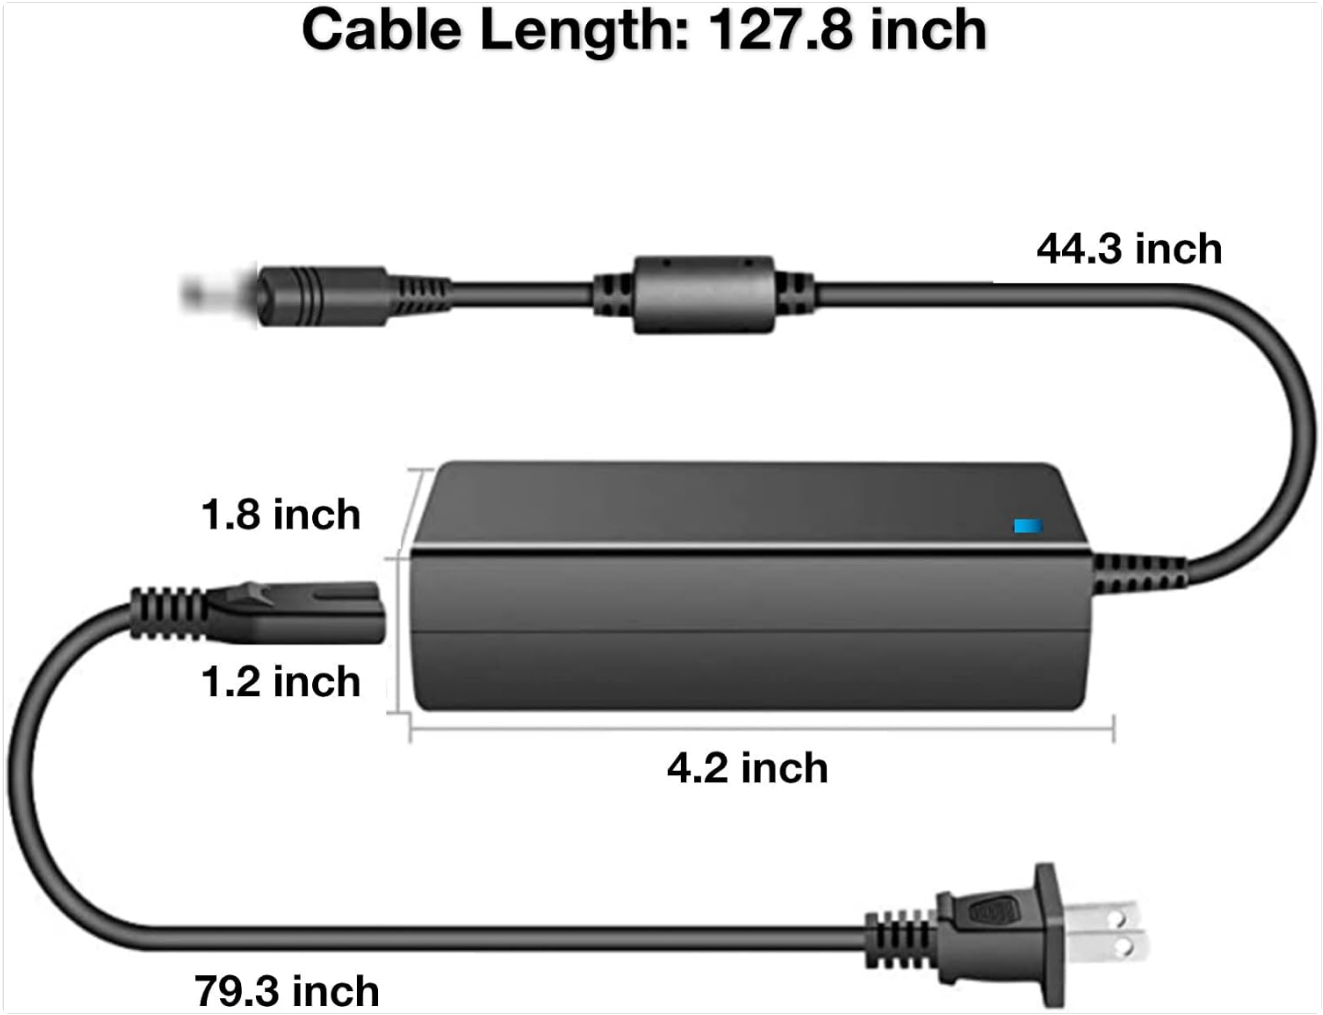



*Figure 2.1: The onerbl AC/DC Adapter with its detachable power cord.*



*Figure 2.2: The detachable power cord, which connects the adapter to the wall outlet.*




*Figure 2.3: Illustration of the adapter's smart chip providing multiple protections including short-circuit, over-voltage, and over-current protection.*

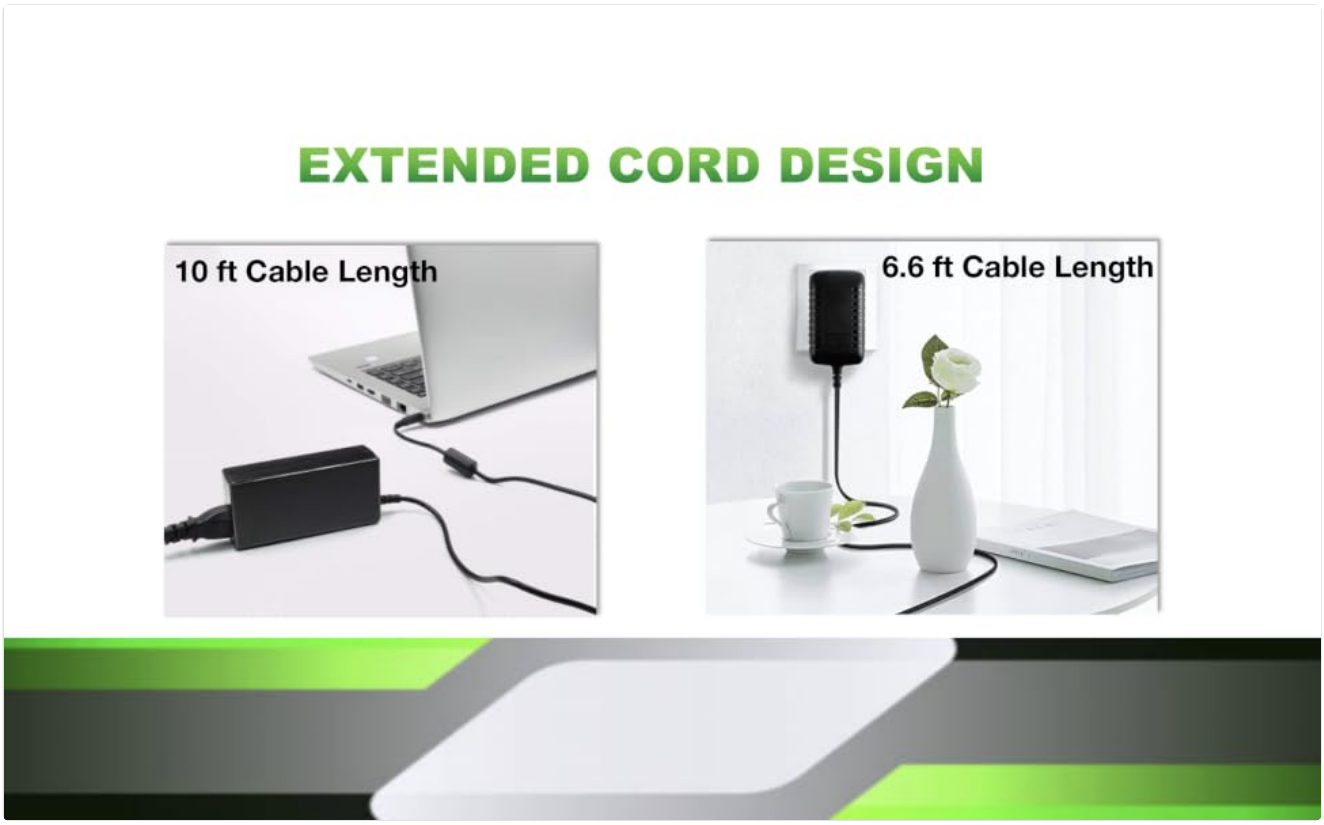



*Figure 2.4: Details on the quality control and durable design, highlighting the copper wire and PVC jacket for enhanced durability.*

## 3. Setup Instructions

1. **Unpack the Adapter:** Carefully remove the AC/DC adapter and its power cord from the packaging.
2. **Connect the Power Cord:** Insert the detachable power cord into the adapter's input port. Ensure it is firmly

seated.

3. **Connect to Rower:** Plug the adapter's output connector into the power input port of your NordicTrack RW900 Rower.
4. **Connect to Power Outlet:** Plug the other end of the power cord into a standard AC wall outlet (100-240V).
5. **Verify Connection:** A small indicator light on the adapter may illuminate, indicating it is receiving power.



*Figure 3.1: The adapter connected to a wall outlet and powering a device, demonstrating a typical setup.*

## 4. Operating Instructions

Once properly connected, the onerbl AC/DC Adapter will supply power to your NordicTrack RW900 Rower. No further action is required for operation beyond ensuring a secure connection to both the rower and the power outlet.

- Ensure the rower's power switch (if applicable) is in the "ON" position.
- The adapter is designed for continuous operation within its specified voltage range.

## 5. Maintenance

The onerbl AC/DC Adapter requires minimal maintenance to ensure longevity and optimal performance.

- **Cleaning:** Disconnect the adapter from the power outlet and the rower before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use for extended periods, store the adapter in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cable Care:** Avoid bending or crimping the power cord excessively. Do not place heavy objects on the cord.

## 6. Troubleshooting

If you encounter issues with your AC/DC adapter, refer to the following common troubleshooting steps:

- **No Power to Rower:**
  - Ensure both ends of the power cord are securely plugged into the adapter and the wall outlet.
  - Verify the adapter's output connector is fully inserted into the rower's power input.
  - Check if the wall outlet is functional by plugging in another device.
  - Inspect the power cord and adapter for any visible damage. If damaged, discontinue use and replace.
- **Adapter Overheating:**
  - Ensure the adapter is placed in a well-ventilated area and not covered.
  - If overheating persists, disconnect immediately and contact support.

## 7. Specifications

| Feature | Detail |
|---|---|
| Input Voltage | AC 100-240V, 50/60Hz (Worldwide Auto Input) |
| Compatibility | NordicTrack RW900 Rower models: NTEVRW15920.0, NTRW19147.0, NTRW19147.1, NTRW19147.2, NTRW19147.3, NTEVRW159200, NTRW191470, NTRW191471, NTRW191472 |
| Protection Features | Over Voltage Protection, Over Heat Protection, Short-Circuit Protection, Over-Current Protection |
| Manufacturer | Shenzhen Waweis Technology Co., Ltd |
| ASIN | B0CTC18V5T |




*Figure 7.1: Dimensional diagram of the AC/DC adapter, illustrating cable lengths and adapter body measurements.*




*Figure 7.2: Illustration of extended cord design, showing different cable length options.*

## 8. Warranty and Support

For warranty information or technical support, please refer to the seller's policies on the product purchase page or contact the manufacturer directly. Keep your purchase receipt for warranty claims.
**Seller:** GreatComputerParts

**ASIN:** B0CTC18V5T
**Date First Available:** January 26, 2024

## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**

---

**Open the live page**

**https://manuals.plus/asin/B0CTC18V5T**

More documents and user manuals: **https://manuals.plus/**