onerbl 54e4895f-2860-4d90-9aaf-2b62adf8f616

onerbl 31V AC/DC Power Adapter User Manual

For Honiture S14 and S14-US Cordless Stick Vacuum Cleaners

Introduction

This manual provides essential instructions for the safe and efficient use of your onerbl 31V AC/DC Power Adapter. Please read this manual thoroughly before using the product and retain it for future reference. This adapter is designed for compatibility with Honiture S14 and S14-US cordless stick vacuum cleaners.

Important Safety Instructions

- **Read all instructions:** Before using the power adapter, read all safety and operating instructions.
- **Indoor use only:** This adapter is designed for indoor use in dry locations. Do not expose to rain or moisture.
- **Proper voltage:** Ensure the power outlet voltage matches the adapter's input specifications (AC 100-240V).
- **Avoid damage:** Do not use the adapter if the cord or plug is damaged. Do not modify or disassemble the adapter.
- **Ventilation:** Ensure adequate ventilation around the adapter during use to prevent overheating.
- **Unplug when not in use:** Disconnect the adapter from the power outlet when not in use for extended periods.
- **Children and pets:** Keep the adapter out of reach of children and pets.
- **Compatibility:** Use only with compatible devices as specified. Using with incompatible devices may cause damage.



Image: The adapter features a smart chip providing multiple layers of protection against short-circuit, over-voltage, and over-current, ensuring electrical safety.

Product Overview

The onerbl 31V AC/DC Power Adapter is a high-quality replacement power supply designed to efficiently charge your Honiture S14 or S14-US cordless stick vacuum cleaner. It features robust construction and built-in safety mechanisms.



Image: Front view of the onerbl 31V AC/DC Power Adapter, showing the main unit with input/output specifications and the coiled power

cord with the DC connector.



Image: Two views of the power adapter: one showing the front with specifications and the other showing a side profile, highlighting its compact design.



Image: Illustration detailing the quality control aspects and durable design of the adapter, including a cross-section of the cable showing copper wire and PVC jacket for enhanced longevity.

Setup Instructions

1. **Unpack:** Carefully remove the power adapter from its packaging.
2. **Inspect:** Check the adapter and cable for any visible damage. Do not use if damaged.
3. **Connect to device:** Insert the DC output plug of the adapter firmly into the charging port of your Honiture S14 or S14-US vacuum cleaner.
4. **Connect to power outlet:** Plug the AC input plug of the adapter into a standard AC 100-240V wall outlet.
5. **Verify connection:** Ensure both connections are secure. The vacuum cleaner's charging indicator (if present) should activate.



Image: The power adapter is shown connected to a power strip, illustrating a typical setup for charging a compatible device in an office environment.

Operating Instructions

Once properly connected, the adapter will begin supplying power to your Honiture vacuum cleaner. The charging process is typically indicated by an LED on the vacuum cleaner itself.

- **Charging:** Allow the vacuum cleaner to charge fully before its first use or after extended periods of non-use. Refer to your vacuum cleaner's manual for specific charging times.
- **Disconnection:** To disconnect, first unplug the adapter from the wall outlet, then disconnect the DC plug from the vacuum cleaner.
- **Extended use:** The adapter is designed for continuous use during charging, but it is recommended to unplug it when the device is fully charged or not in use.



Image: This image illustrates the concept of an extended cord design, showing different cable lengths for power adapters, which can offer greater flexibility in placement.

Maintenance and Storage

- **Cleaning:** Disconnect the adapter from all power sources before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or solvents.
- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cable care:** Avoid bending or kinking the cable sharply. Do not place heavy objects on the cable.

Troubleshooting

Problem	Possible Cause	Solution
Adapter not charging device.	Loose connection, power outlet issue, incompatible device, damaged adapter.	Ensure all connections are secure. Test the power outlet with another device. Verify device compatibility (Honiture S14/S14-US). If adapter is damaged, discontinue use and replace.

Problem	Possible Cause	Solution
Adapter feels hot during use.	Normal operation, poor ventilation, overload.	Slight warmth is normal. Ensure adapter is in a well-ventilated area. Confirm device is compatible and not drawing excessive power. If excessively hot, unplug immediately and contact support.

Specifications

- **Model Number:** 54e4895f-2860-4d90-9aaf-2b62adf8f616
- **Input:** AC 100-240V, 50/60Hz
- **Output:** 31V DC, 0.5A (or compatible with device requirements)
- **Compatibility:** Honiture S14, S14-US Cordless Stick Vacuum Cleaners (25.9V 2200mAh Li-ion Battery HQ-7C-SF22 400W 450W)
- **Color:** Black
- **Plug Format:** Type C (US standard)
- **Protections:** Over Voltage Protection, Over Heat Protection, Short-circuit Protection, Over Current Protection
- **Manufacturer:** Shenzhen Waweis Technology Co., Ltd

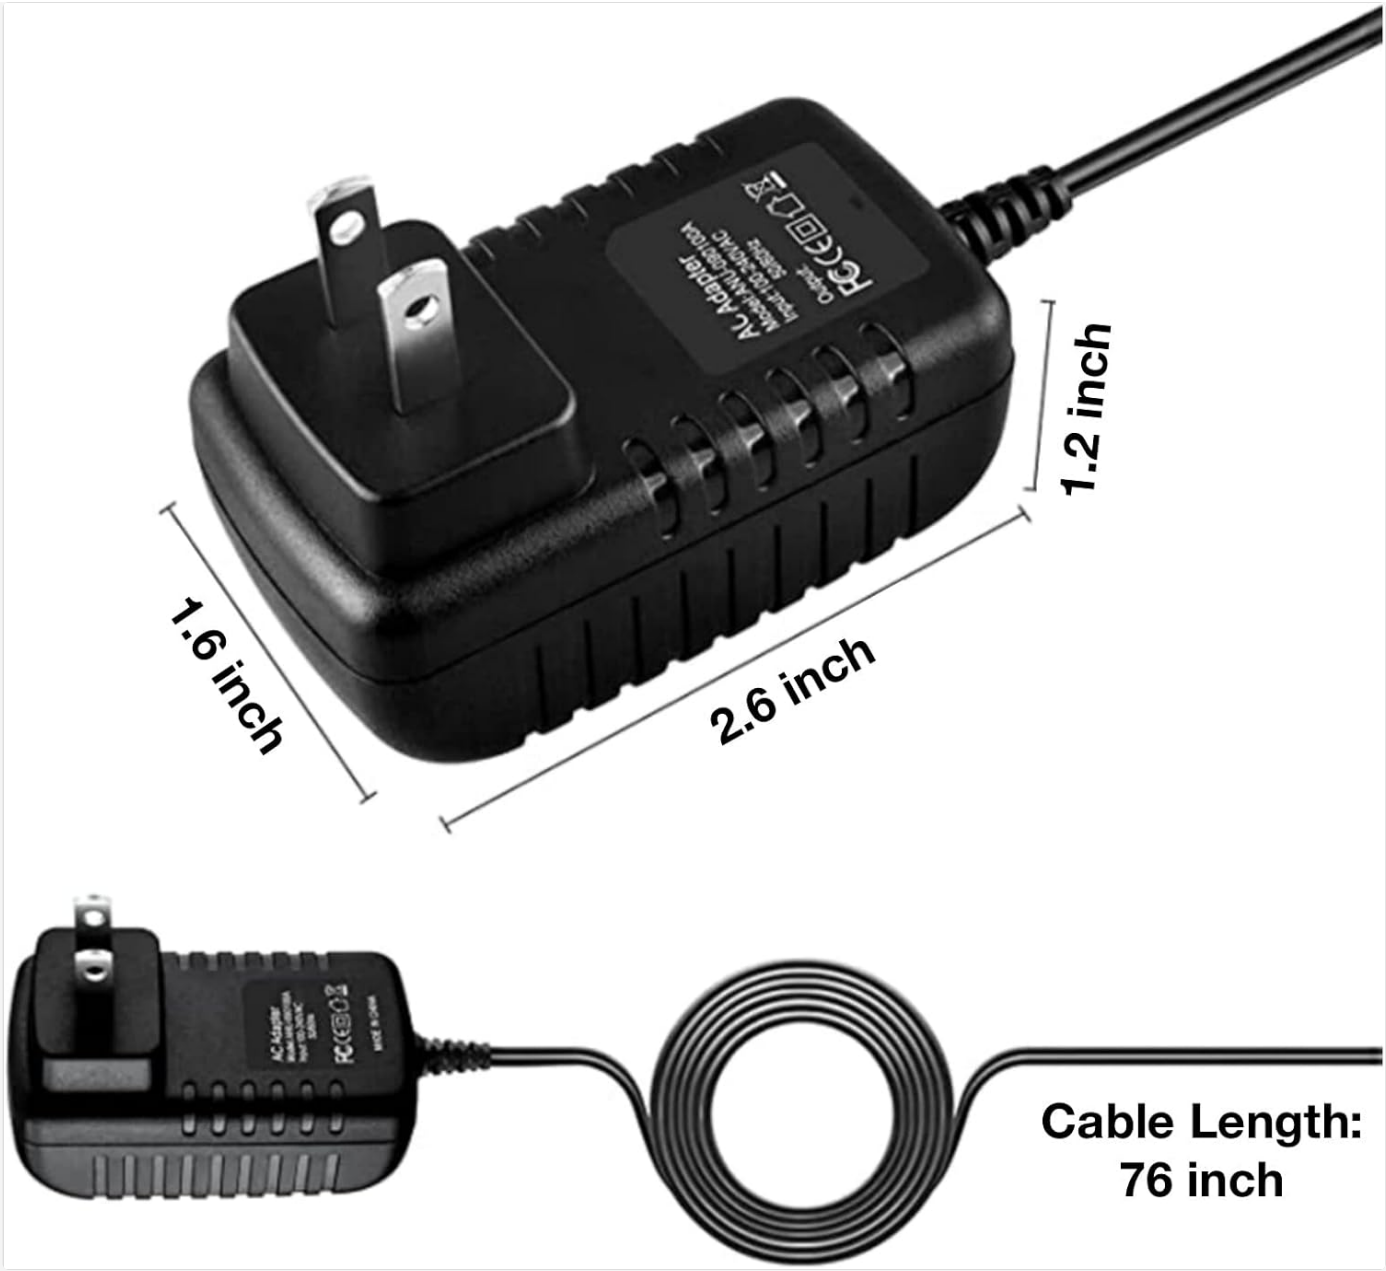


Image: Detailed dimensions of the power adapter, showing its compact size (2.6 x 1.6 x 1.2 inches) and the generous cable length of 76 inches.



Image: This diagram illustrates the wide range of applications for which this type of power adapter can be used, beyond just vacuum cleaners, including various electronic devices.

Warranty and Support

This onerbl power adapter comes with a standard manufacturer's warranty. For specific warranty details, please refer to the product packaging or contact your retailer. For technical support or inquiries, please reach out to the manufacturer or seller through the platform where the product was purchased.

Manufacturer: Shenzhen Waweis Technology Co., Ltd

© 2024 onerbl. All rights reserved.

Model: 54e4895f-2860-4d90-9aaf-2b62adf8f616

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question