JBL JBLPBWIRELESSMICAM

JBL PartyBox Wireless Mic

INSTRUCTION MANUAL

Introduction

The JBL PartyBox Wireless Mics are designed to enhance your audio experience with any JBL PartyBox speaker. These microphones deliver clear, crisp vocal sound, perfect for karaoke and live performances. Featuring a stable 2.4GHz connection and long-lasting rechargeable batteries, they ensure your fun lasts as long as the party does. This manual provides essential information for setting up, operating, and maintaining your microphones.

What's in the Box

- 2 x JBL PartyBox Wireless mic
- 1 x Dongle
- 1 x Quick-start guide
- 1 x Safety Instruction and Warranty Card
- 1 x USB-C cable



Figure 1: Contents of the JBL PartyBox Wireless Mic package.

The package includes two wireless microphones, a dongle for wireless connection, a USB-C cable for charging, and essential documentation.

Setup

1. **Charging the Microphones:** Before first use, fully charge both microphones using the supplied USB-C cable. The LED indicator on the microphone will flash red when low on power and turn solid white when fully charged.
2. **Connecting to PartyBox Speaker:**
    - For wired connection: Simply plug the microphone directly into the microphone input port on your JBL PartyBox speaker.
    - For wireless connection: Insert the supplied dongle into a compatible input port on your JBL PartyBox speaker. Turn on the microphones; they will automatically connect to the dongle. The stable 2.4GHz connection allows for up to 30 meters of range.
3. **Compatibility:** These microphones are compatible with all JBL PartyBox speakers, from the PartyBox Encore to the Ultimate models.



Figure 2: Wireless microphone connected to a JBL PartyBox speaker via dongle.

The dongle provides a seamless wireless connection to your PartyBox speaker, ensuring freedom of movement during performances.



Figure 3: The compact wireless dongle for easy plug-and-play setup.

The compact dongle ensures a stable connection for optimal audio performance.

Operating Instructions

- **Power On/Off:** Locate the power button on the microphone. Press and hold to turn the microphone on or off.
- **Sound Quality:** The microphones feature a cardioid pickup pattern, delivering warm, clear, and crisp vocal sound. A built-in foam pop filter minimizes extraneous vocal sounds, and a shock mount system reduces handling noise.
- **Battery Life:** Enjoy up to 20 hours of playtime on a full charge. When using the digital wireless dongle, playtime is up to 12 hours. A quick 10-minute charge provides an additional two hours of playtime. You can continue using the microphone while it charges when plugged into the PartyBox's built-in power bank.

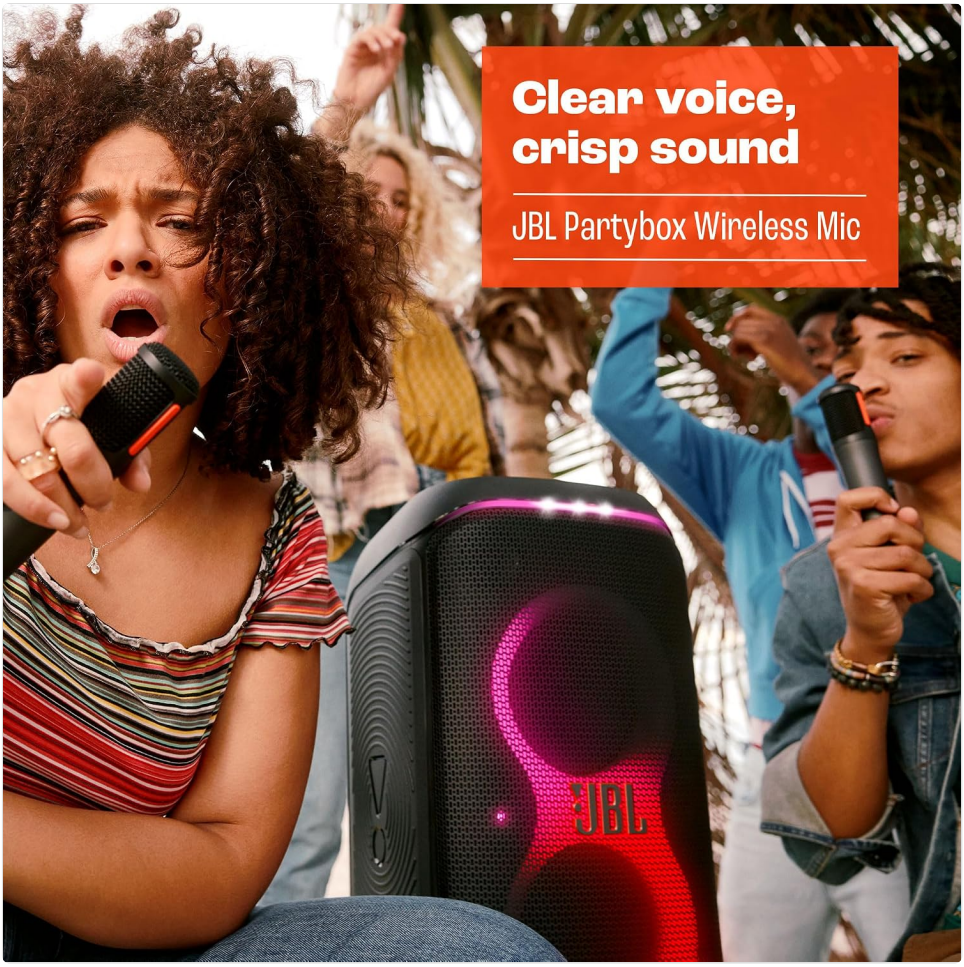


Figure 4: Users enjoying the JBL PartyBox Wireless Mics during a gathering.

The microphones are designed for ease of use, allowing you to simply plug in and start singing.

Official Product Video: JBL PARTYBOX Wireless Mic Digital Wireless Microphones

This video provides a detailed overview of the JBL PartyBox Wireless Mic, showcasing its features and ease of use. It highlights the clear sound quality and seamless integration with JBL PartyBox speakers, demonstrating how these microphones can elevate your party experience.

Maintenance

- **Battery Care:** To prolong battery life, avoid fully discharging the microphones frequently. Recharge them regularly, especially if they will be stored for an extended period.
- **Cleaning:** Use a soft, dry cloth to clean the exterior of the microphones. Do not use harsh chemicals or abrasive materials. For the microphone grille, gently wipe with a slightly damp cloth if necessary, ensuring no moisture enters the microphone.
- **Storage:** Store the microphones and dongle in a cool, dry place away from direct sunlight and extreme temperatures.

Troubleshooting

- **No Sound:** Ensure the microphones are powered on and fully charged. Verify that the dongle is correctly plugged into the PartyBox speaker and that the speaker's microphone input volume is turned up. Check the connection for any loose cables.

- **Intermittent Connection:** Ensure the microphones are within the 30-meter range of the PartyBox speaker. Avoid obstacles that may interfere with the 2.4GHz signal. Check for other devices operating on the same frequency that might cause interference.
- **Poor Sound Quality:** Ensure the microphone grille is clean and free from debris. Speak directly into the top of the microphone for optimal sound pickup. Adjust the gain settings on your PartyBox speaker if available.

Specifications

Feature	Detail
Brand	JBL
Model Name	JBLPBWIRELESSMICAM
Item Weight	1 Pounds
Product Dimensions	10 x 6 x 4 inches
Power Source	Battery Powered
Number of Batteries	2 Lithium Ion batteries required. (included)
Playtime (Mics)	Up to 20 hours
Playtime (with Dongle)	Up to 12 hours
Quick Charge	10 minutes for 2 hours playtime
Connectivity Technology	Bluetooth, USB (for charging)
Wireless Connection	Stable 2.4GHz (up to 30 meters)
Polar Pattern	Unidirectional (Cardioid)
Special Feature	Noise Reduction, Runs on Plug-In Power

Warranty & Support

JBL products come with a standard manufacturer's warranty. Please refer to the included Safety Instruction and Warranty Card for detailed information regarding your product's warranty coverage.
For further assistance, troubleshooting, or product support, please visit the official JBL support website: support.jbl.com.

© 2025 JBL. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question