EGO Power+ HPW3204-2

EGO POWER+ Electric Pressure Washer User Manual

Model: HPW3204-2

Product Overview

The EGO POWER+ 3200 PSI Pressure Washer is designed for powerful and efficient cleaning tasks around your home. Utilizing Peak Power™ technology, it combines the energy from two EGO POWER+ 56V ARC Lithium™ batteries to deliver impressive pressure and flow. Its cordless design offers unparalleled convenience, eliminating the need for power outlets or gas. The unit features intuitive controls, quick-connect points for accessories, and a telescopic handle for easy portability and storage.



Image: EGO POWER+ 3200 PSI Electric Pressure Washer with included batteries.

Important Safety Instructions

WARNING: Never use an electric pressure washer in wet conditions or near water sources due to the risk of electric shock. Always ensure your work area is dry and clear of standing water.

- Read all instructions before using the appliance.
- Wear appropriate personal protective equipment, including eye protection.
- Ensure all connections are secure before operating.
- Do not direct the spray at people, pets, or electrical devices.
- Keep children and bystanders away from the operating area.

Setup Guide

1. Unpacking and Assembly

Carefully remove all components from the packaging. Ensure all parts listed in the 'Includes' section are present.

Attach the wand mounts using a Phillips screwdriver. The telescopic handle can be extended for use and collapsed for storage.

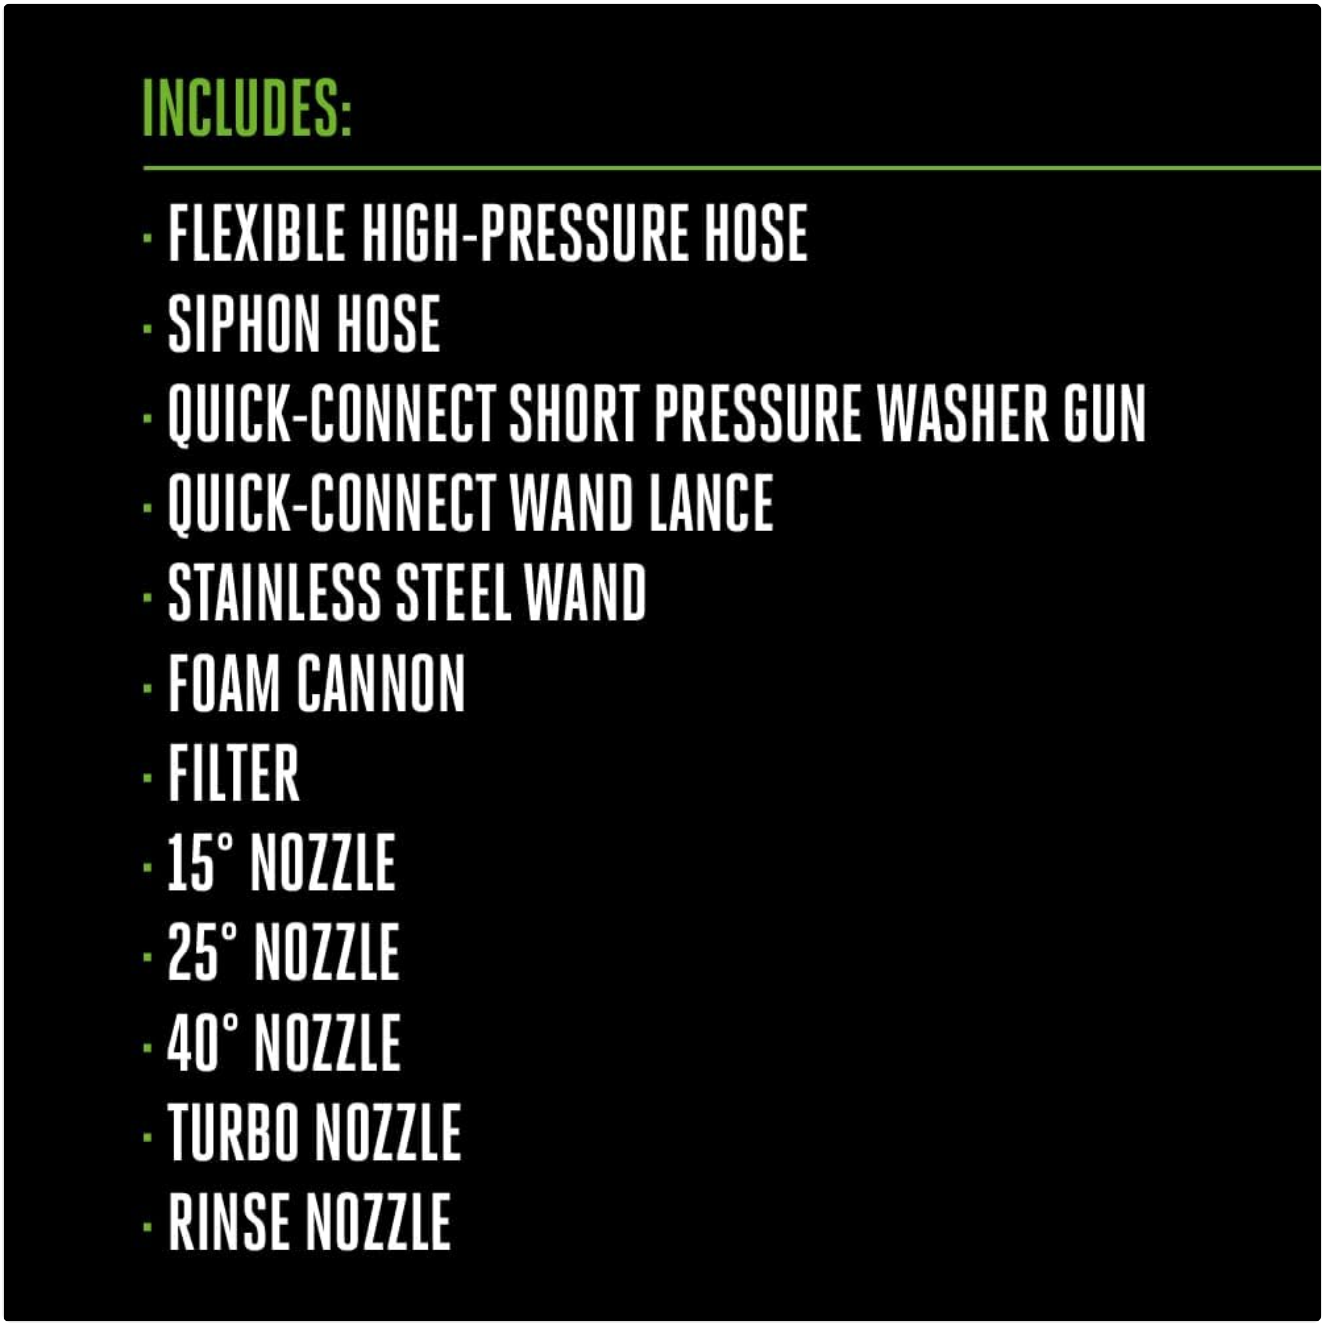


Image: Included accessories such as hoses, gun, lance, foam cannon, and various nozzles.

2. Battery Installation

The EGO POWER+ Pressure Washer requires two 56V ARC Lithium™ batteries for operation. Ensure both batteries are fully charged before use. Open the battery compartment and firmly insert both batteries until they click into place. Close the compartment cover securely.



Image: Proper installation of 56V ARC Lithium batteries into the unit.

3. Connecting Hoses and Nozzles

Connect the flexible 25-foot high-pressure hose to the pressure washer's outlet and the quick-connect short pressure washer gun. Attach the desired nozzle (15°, 25°, 40°, turbo, or rinse) to the quick-connect wand lance. The quick-connection points allow for easy and secure attachment.



Image: Quick connection points for hoses and the wand for easy setup.

Operating Instructions

1. Water Source Connection

Connect the pressure washer to a standard garden hose. Alternatively, for portable use, the included siphon hose allows the unit to draw water from any fresh water source, such as a bucket or rain barrel.

2. Powering On and Mode Selection

Press the power button on the unit. Use the handheld pressure control on the wand to select between ECO, High, and Turbo modes. The display integrated into the wand will show the selected mode and battery charge status. The pressure washer delivers up to 3200 PSI at 1.2 GPM, with a maximum flow rate of 2.0 GPM.



Image: Demonstrates the powerful output of 3200 PSI at 1.2 GPM.

3. Cleaning Operation

Direct the spray at the surface to be cleaned, maintaining a safe distance to avoid damage. Move the wand in a steady, sweeping motion. The unit provides up to 60 minutes of runtime on a single charge with the two included 6.0Ah ARC Lithium batteries, suitable for various cleaning tasks.



Image: Illustrates the extended runtime of 60 minutes for cleaning larger areas.

Maintenance

- After each use, flush the system with clean water to remove any detergent or debris.
- Clean the nozzles regularly to prevent clogging.
- Store the pressure washer in a dry, protected area, especially during freezing temperatures.
- Remove batteries when storing the unit for extended periods.
- Inspect hoses and connections for wear or damage before each use.

Troubleshooting

If the pressure washer does not operate as expected, check the following:

- **No Power:** Ensure batteries are fully charged and properly seated in the compartment.
- **Low Pressure:** Check water supply for adequate flow and pressure. Ensure hoses are not kinked and nozzles are clear of obstructions.

- **Water Leaks:** Verify all quick-connect points and hose connections are tight and sealed. Inspect O-rings for damage.
- **Unit Shuts Off:** This may indicate overheating or low battery charge. Allow the unit to cool down or recharge batteries.

For persistent issues, contact EGO Power+ customer support.

Technical Specifications

Specification	Value
Brand	EGO Power+
Model Number	HPW3204-2
Power Source	Battery Powered (56V ARC Lithium)
Maximum Pressure	3200 PSI
Maximum Flow Rate	1.2 GPM (up to 2.0 GPM max)
Hose Length	25 Feet
Item Weight	65.6 Pounds
Product Dimensions	20.87"L x 14.96"W x 25.39"H
Included Batteries	(2) 56V 6.0Ah ARC Lithium
Certifications	ETL, RoHS

Warranty and Support

The EGO POWER+ Electric Pressure Washer comes with a comprehensive warranty:

- **Tool Warranty:** 5-year limited warranty.
- **Battery Warranty:** 3-year limited warranty.

For warranty claims, technical support, or replacement parts, please visit the official EGO Power+ website or contact their customer service department. Keep your proof of purchase for warranty validation.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

I changed the batteries in my EGO Power+ HPW3204-2 spray gun, but now it is not coming on. How can I fix this problem?

If your EGO Power+ HPW3204-2 pressure washer is not turning on after changing the batteries, please check the following steps based on the user manual:Check Battery Seating: Ensure that both 56V ARC Lithium batteries...

Read full answer