VONLUCE CFN1318BK

VONLUCE 52-inch Ceiling Fan User Manual

Model: CFN1318BK
Brand: VONLUCE

Important Safety Information

Please read and understand this entire manual before attempting to assemble, operate, or install the product. Failure to follow these instructions could result in electric shock, fire, or serious personal injury.

- **Electrical Safety:** All electrical connections must be in accordance with local codes, ordinances, or national electrical codes. If you are unfamiliar with wiring, consult a qualified electrician.
- **Mounting:** The outlet box and support structure must be securely mounted and capable of reliably supporting a minimum of 35 lbs (15.9 kg). Use only UL Listed outlet boxes marked "FOR FAN SUPPORT."
- **Blade Clearance:** Ensure there is at least 7 feet (2.1 meters) clearance from the floor to the trailing edge of the fan blades.
- **Power Disconnection:** Before beginning installation, turn off power at the circuit breaker or fuse box. Do not rely on the wall switch to turn off power.
- **Moving Parts:** Avoid placing objects in the path of the fan blades.
- **Cleaning:** Always disconnect power before cleaning the fan.

Package Contents

Carefully unpack your fan and check the contents. You should have the following items:

- Ceiling Fan Motor Assembly
- Fan Blades (5 pieces, dual-finished)
- Down Rods (5-inch and 10-inch options)
- Mounting Bracket
- Remote Control with Wall Holder
- Receiver
- Hardware Pack (screws, washers, wire nuts)
- Instruction Manual



Image: The VONLUCE 52-inch ceiling fan assembly, including the motor housing, five fan blades (showing both black and wood grain sides), two down rods, the mounting bracket, and the remote control with its wall holder.

Installation Guide

This section provides step-by-step instructions for installing your VONLUCE ceiling fan. Ensure all safety precautions are followed before proceeding.

1. Prepare for Installation

1. Turn off power at the circuit breaker or fuse box.
2. Clear the area of any obstructions.
3. Ensure the ceiling outlet box is securely mounted and rated for fan support.

2. Assemble the Fan Blades

Your fan comes with dual-finished blades. Choose the finish (black or wood grain) that best suits your decor. Attach the blades to the blade arms using the provided screws.



Image: Close-up of the dual-finished fan blades, illustrating the black and wood grain options available for customization.

3. Mount the Hanging Bracket

Secure the mounting bracket to the ceiling outlet box using the screws provided with the outlet box. Ensure it is tightly fastened.

4. Install the Down Rod and Fan Motor

1. Select either the 5-inch or 10-inch down rod based on your ceiling height and desired fan position.
2. Feed the electrical wires from the fan motor through the down rod.
3. Insert the down rod into the fan motor housing and secure it with the pin and clip.
4. Carefully lift the fan assembly and place the down rod ball into the hanging bracket.

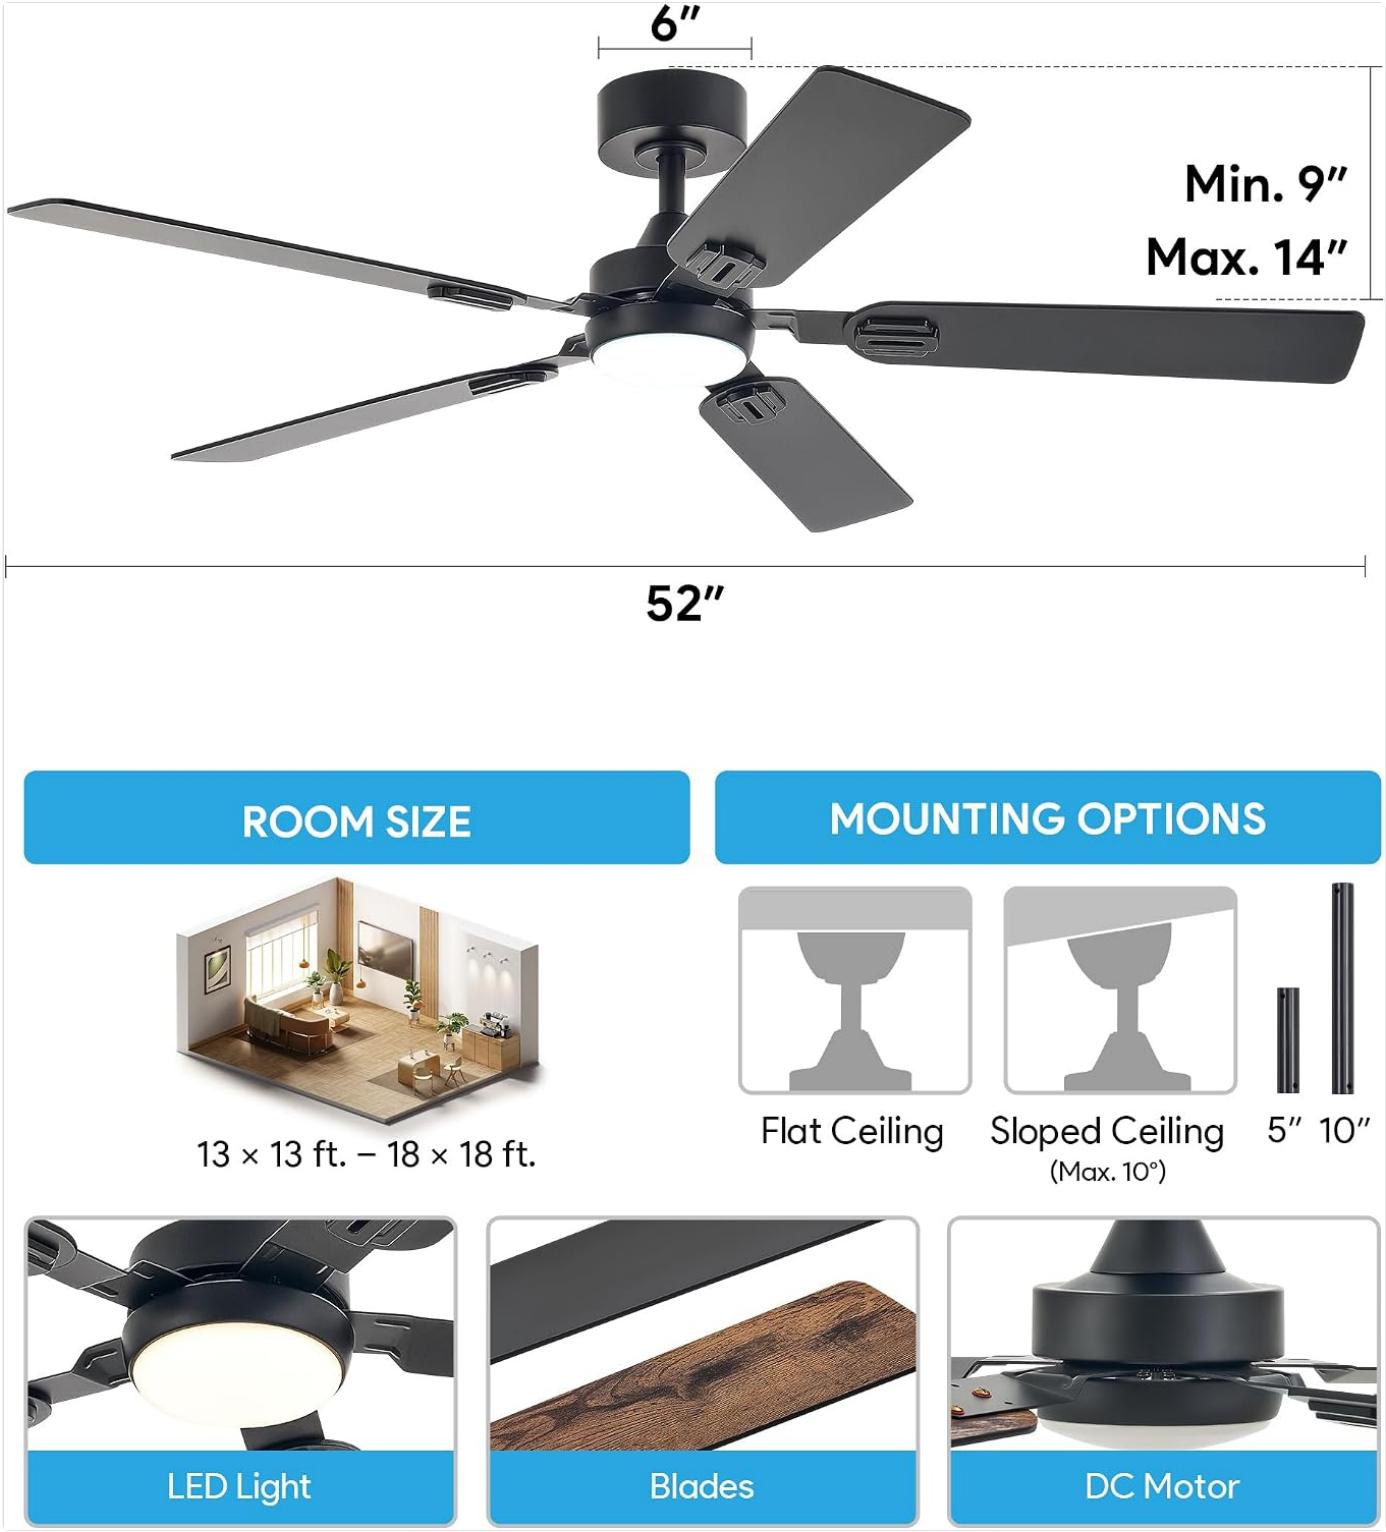


Image: A comprehensive diagram detailing the 52-inch fan's dimensions, recommended room sizes (13x13 ft. to 18x18 ft.), and various mounting options including flat ceilings, sloped ceilings (max 10 degrees), and the use of 5-inch or 10-inch down rods.



Image: A visual guide demonstrating different downrod lengths (5 inches, 10 inches) and their suitability for various ceiling heights, including flush mount for 8-foot ceilings and longer downrods for higher ceilings, up to 36 inches for 12-foot ceilings.

5. Wiring Connections

Connect the fan's electrical wires to the household wiring according to the wiring diagram in your separate installation manual. Ensure all connections are secure with wire nuts. Install the receiver for the remote control within the canopy.

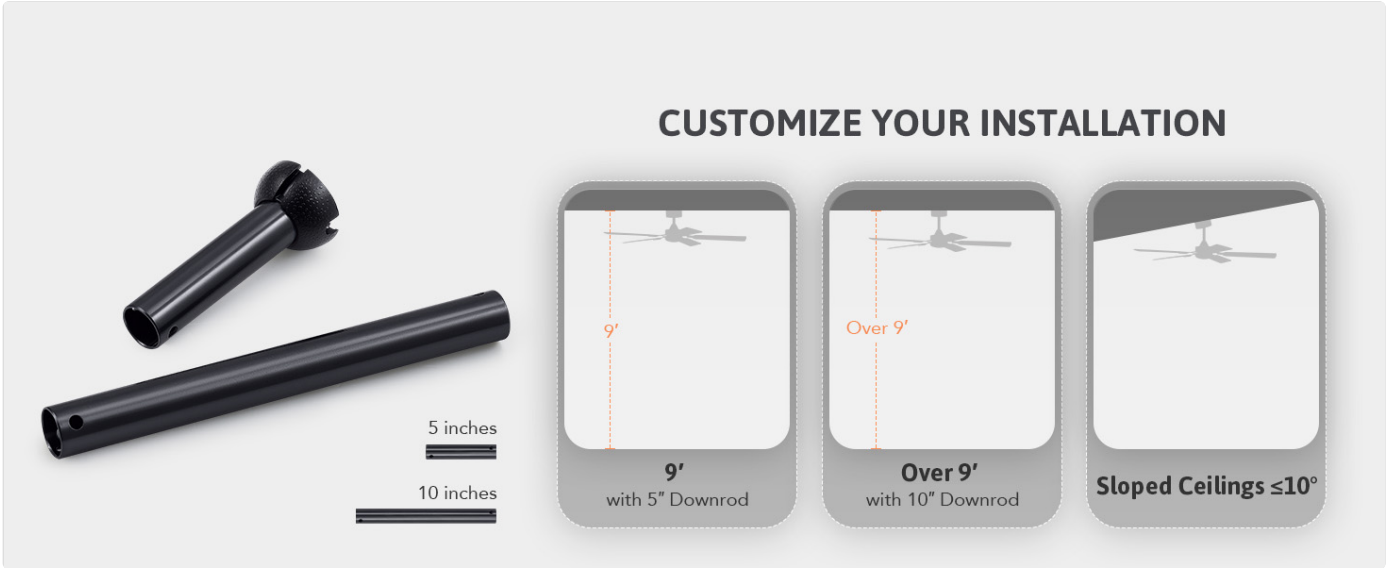


Image: An illustration highlighting the safety cable, which ensures the fan is securely attached to the ceiling during installation and operation, providing an additional layer of safety.

6. Secure the Canopy and Attach Blades

Slide the canopy up to the ceiling and secure it with the provided screws. Finally, attach the assembled fan blades to the motor housing.

Operating Instructions

Your VONLUCE ceiling fan is operated by a remote control, offering convenience and customizable comfort.

Remote Control Functions



Image: A detailed illustration of the remote control, highlighting buttons for fan On/Off, Reverse Fan Direction, 6-Level Fan Speeds (1-6), Timer settings (1H, 2H, 4H, 8H), Light On/Off, and 3 CCT Color Temperatures (3000K/4500K/6500K). It also shows the "Nature Mode" button, which can be held for 5 seconds to mute the fan.

- **Fan On/Off:** Press to turn the fan on or off.
- **Fan Speed (1-6):** Adjusts the fan speed from gentle breeze (1-2) to strong cooling air (5-6).



Image: A visual representation of the 6 adjustable fan speeds, categorizing levels 1-2 as "Gentle Breeze" for restful sleep, levels 3-4 as "Natural Wind" for everyday comfort, and levels 5-6 as "Cooling Air" for summer days.

- **Light On/Off & Color Temperature (3CCT):** Press to turn the light on or off. Cycle through 3000K (Warm White), 4500K (Neutral White), and 6500K (Cool White) by pressing the light button repeatedly.

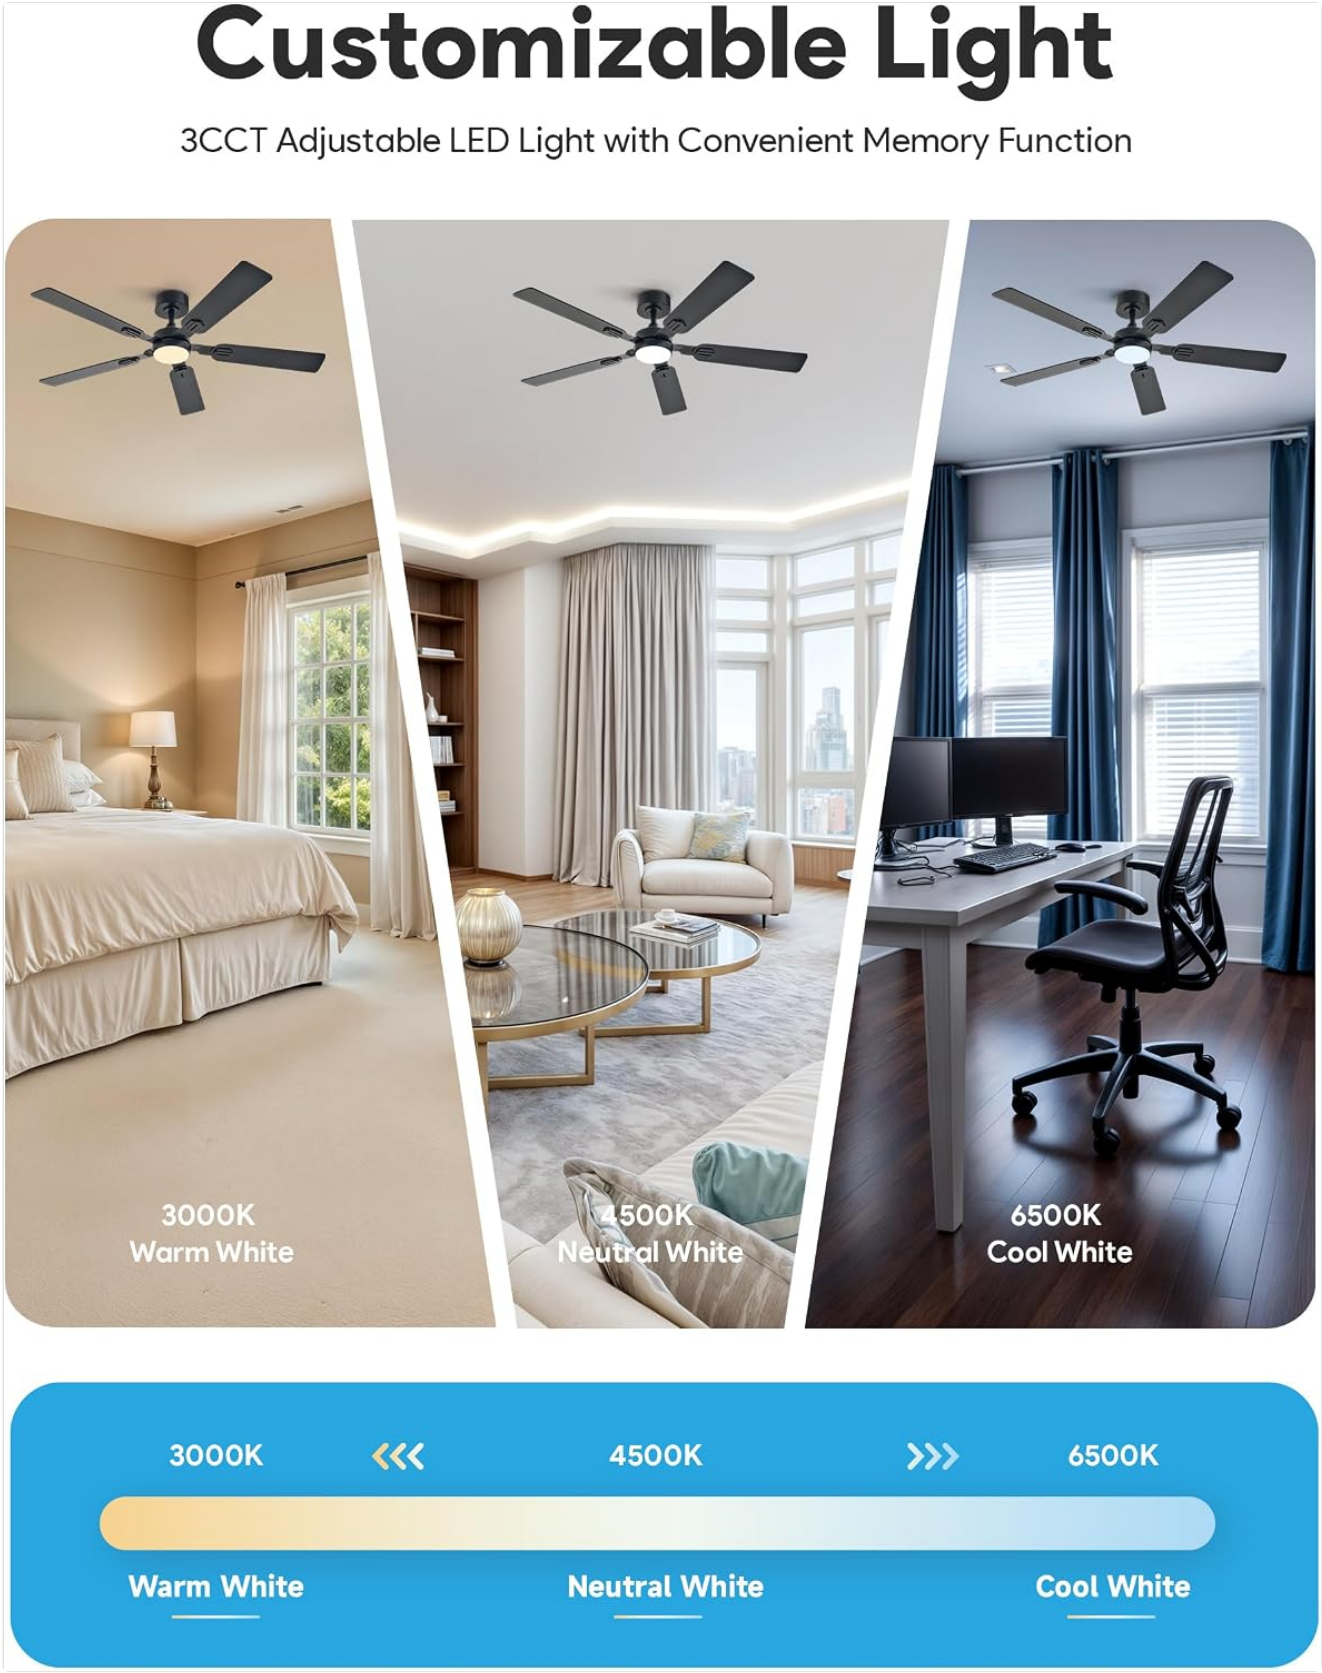


Image: Three distinct views of the ceiling fan installed in different room settings, demonstrating the customizable light feature with 3 color temperatures: 3000K Warm White, 4500K Neutral White, and 6500K Cool White.

- **Timer (1H, 2H, 4H, 8H):** Sets the fan to turn off automatically after 1, 2, 4, or 8 hours.
- **Reverse Fan Direction:** Changes the direction of blade rotation for summer (downward airflow) or winter (upward airflow).



Image: A split image demonstrating the reversible DC motor function. One side shows blue arrows indicating downward airflow for cooling in summer, while the other side shows orange arrows indicating upward airflow to circulate warm air in winter.

- **Nature Mode** / **Mute Function:** Press the "Nature Mode" button for a natural breeze effect. Hold the "Nature Mode" button for 5 seconds to mute the fan's operational sounds.



Image: A graphic depicting a person sleeping peacefully, with a sound level curve showing the fan operating at less than 35dB, significantly quieter than a whisper (45dB) or dialogue (70dB), emphasizing its noiseless experience.

- **Memory Function:** The fan will remember the last light setting and wind speed if it runs for more than 10 seconds before being turned off. When turned on again, it will resume the previous settings.

Maintenance

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** To clean the fan, wipe with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these may damage the finish.
- **Blade Cleaning:** Dust the fan blades regularly to prevent dust buildup, which can affect fan balance and performance.
- **Tightening Screws:** Periodically check all screws for tightness. Due to the fan's natural movement, some connections may become loose over time.
- **No Lubrication Needed:** The DC motor is permanently lubricated and does not require oiling.

Troubleshooting

If you experience issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	◦ No power to the fan. ◦ Loose wire connections. ◦ Remote control battery low or not installed. ◦ Incorrect remote pairing.	◦ Check circuit breaker/fuse. ◦ Verify all wiring connections are secure (power off first). ◦ Replace remote battery. Re-pair remote if necessary (refer to remote instructions).

Problem	Possible Cause	Solution
Fan wobbles excessively	◦ Loose blade screws. ◦ Unbalanced blades. ◦ Loose mounting bracket.	◦ Tighten all blade screws. ◦ Use a blade balancing kit (not included) to balance blades. ◦ Ensure mounting bracket is securely fastened to the ceiling.
Light does not work	◦ Loose wire connection. ◦ LED module failure.	◦ Check light kit wiring connections. ◦ Contact customer support for replacement if LED module is faulty.
Remote control not working	◦ Low or dead battery. ◦ Incorrect pairing with receiver. ◦ Obstruction between remote and receiver.	◦ Replace battery. ◦ Re-pair remote with receiver (usually involves pressing a button on the remote within a few seconds of turning on power to the fan). ◦ Ensure clear line of sight or proximity.

Specifications

Feature	Detail
Brand	VONLUCE
Model Name	CFN1318BK
Fan Size	52 inches
Number of Blades	5
Motor Type	Reversible DC Motor
Fan Speeds	6
Noise Level	Ultra-Quiet (<35dB)
Light Type	Integrated LED, 3CCT (3000K/4500K/6500K)
Control Method	Remote Control
Timer Settings	1H, 2H, 4H, 8H
Power Source	AC 120V
Air Flow Capacity	6895 Cubic Feet Per Minute (CFM)
Down Rods Included	5-inch, 10-inch
Max Sloped Ceiling Angle	10 degrees

Feature	Detail
Indoor/Outdoor Usage	Indoor (Not recommended for direct exposure to rain)

Warranty and Support

VONLUCE products are designed for quality and reliability. For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official VONLUCE website.

Online Support: For additional resources, FAQs, and contact information, please visit the VONLUCE Store on Amazon.

© 2025 VONLUCE. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question