eufy G50 Hybrid (T2212G11)

eufy G50 Hybrid Robot Vacuum Cleaner User Manual

Model: G50 Hybrid (T2212G11) | Brand: eufy

INTRODUCTION

Welcome to the user manual for your eufy G50 Hybrid Robot Vacuum Cleaner. This guide provides essential information on setting up, operating, maintaining, and troubleshooting your device to ensure optimal performance and longevity. The eufy G50 Hybrid is designed to provide efficient and quiet cleaning for your home, combining powerful vacuuming with a convenient mopping function.

The eufy G50 Hybrid robot vacuum cleaner, shown with its mopping pad attachment and a smartphone displaying the control app. This device combines powerful vacuuming with light mopping for comprehensive floor cleaning.

SAFETY INSTRUCTIONS

Before using this product, please read all safety instructions carefully and keep them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not operate the robot vacuum in wet environments or near water.
- Ensure the charging base is placed on a level surface and is not obstructed.
- Keep loose clothing, hair, and body parts away from moving parts.
- Do not allow children to operate the robot vacuum. Supervise children and pets when the device is in use.
- Only use the original charger and accessories provided by eufy.
- Remove any loose cables, small objects, or fragile items from the floor before cleaning to prevent entanglement or damage.

- Do not use the robot vacuum to pick up large objects, sharp objects, or burning/smoking materials.

SETUP

Package Contents

This image displays the complete package contents: the eufy G50 Hybrid robot vacuum, its charging station with cable, a safety instruction manual, and a cleaning tool for maintenance.

Verify that all components are present in the package:

1. eufy G50 Hybrid Robot Vacuum (including roller brush, side brush, dustbin, and mopping pad)
2. Charging Station with Power Cable
3. Safety Instruction Manual
4. Cleaning Tool

Initial Charging

Place the charging station against a wall in an open, uncluttered area. Connect the power cable to the charging station and plug it into a power outlet. Place the G50 Hybrid onto the charging station, ensuring the charging pins align. The indicator lights on the robot will illuminate to show it is charging. Fully charge the robot before first use.

The robot vacuum is shown automatically navigating back to its charging station, illustrating its ability to recharge itself when the battery is low and resume cleaning from where it left off.

Connecting to the eufy App

For full control and advanced features, connect your G50 Hybrid to the eufy app. Download the eufy app from the App Store (iOS) or Google Play Store (Android).

- Open the eufy app and create an account or log in.
- Tap the "+" icon to add a new device and select the G50 Hybrid.
- Follow the in-app instructions to connect the robot via Bluetooth.
- **Important:** Ensure your Wi-Fi router is set to 2.4GHz or is a dual-band router configured for the 2.4GHz band. The G50 Hybrid does not support 5GHz Wi-Fi networks.

Reinigung nach Maß

📅 **Zeitgesteuerte Reinigung**

📍 **Punkt-Reinigung**

🔄 **Saugleistung anpassen**

⚡ **Automatische Rückkehr zur Ladestation**

The eufy app interface is shown on a smartphone, demonstrating how users can control the G50 Hybrid robot vacuum, including setting cleaning schedules and initiating spot cleaning.

OPERATING THE G50 HYBRID

Cleaning Modes and Suction Power

The G50 Hybrid offers powerful cleaning with up to 4,000Pa of suction, effectively removing pet hair, crumbs, and dust from various floor types. You can adjust the suction power via the eufy app.

The robot vacuum is actively cleaning, demonstrating its strong 4000Pa suction power by picking up small, colorful debris from a hard floor surface.
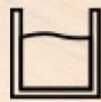
The robot features BoostIQ™ technology, which automatically increases suction power when it detects carpets, ensuring deeper cleaning on soft surfaces.

Mopping Function

For light surface cleaning, attach the mopping pad and fill the 200ml water tank. The G50 Hybrid will gently wipe hard floors to remove fine dirt. You can control the water flow levels through the eufy app.

Important Note: Always remove the mopping module before the robot cleans carpets to prevent wetting the carpet.

Wischpad für leichte Oberflächenreinigung

280ml Kapazität

3 Wasserstufen

The G50 Hybrid is shown in mopping mode, with water droplets visible on the floor, illustrating its ability to gently clean hard surfaces with its integrated mopping pad and water tank.

Dynamic Navigation and Mobility

The G50 Hybrid navigates systematically through your rooms, ensuring thorough coverage. Its slim height of 81mm allows it to effortlessly clean under furniture like sofas and cabinets.

The robot can also overcome obstacles and transitions up to 18mm in height, making it suitable for homes with varying

floor levels.

The robot vacuum follows a systematic cleaning path on a wooden floor, showcasing its dynamic navigation capabilities for efficient and thorough coverage of rooms.

Überwindet bis zu 18mm

Kein Hängenbleiben: Der G50 Hybrid meistert Übergänge und Teppiche bis zu einer Höhe von 18mm für eine flächendeckende Reinigung.

18mm

The image demonstrates the G50 Hybrid's capability to easily overcome obstacles and transitions up to 18mm in height, ensuring comprehensive cleaning across different floor levels.

Gründliche Sauberkeit in engen Räumen

Dank seines schlanken 81mm Design gleitet der G50 Hybrid mühelos unter Möbel und sorgt für eine gründliche Reinigung in engen Bereichen wie unter Sofas und Betten.

81mm

The slim 81mm design of the G50 Hybrid allows it to effortlessly clean under furniture like sofas and beds, ensuring thorough cleaning in hard-to-reach areas.

Quiet Operation

Operating at a quiet 55dB, the G50 Hybrid ensures that your cleaning routine does not disturb your work, relaxation, or sleep.

Leises Saugen für weniger Ablenkung

The robot vacuum operates discreetly under a bed, demonstrating its quiet cleaning capability, allowing for undisturbed rest or activities.

Battery and Runtime

The G50 Hybrid provides up to 120 minutes of runtime on a single charge, allowing it to cover large areas efficiently before automatically returning to its charging station.

This graphic illustrates the extended cleaning coverage provided by the G50 Hybrid's 120-minute battery life on a single charge, ideal for larger homes.

MAINTENANCE

Regular maintenance ensures your eufy G50 Hybrid continues to perform at its best. Follow these steps to keep your robot vacuum in optimal condition.

Self-Cleaning Roller Brush

The G50 Hybrid features a patented Pro-Tangle-Free Comb that automatically removes hair from the roller brush, significantly reducing manual maintenance. Periodically check the brush for any remaining debris and clean as needed using the provided cleaning tool.

Minimaler Wartungsbedarf

mit selbstreinigender Rollbürste

G50 Hybrid

Alternative

This image highlights the innovative self-cleaning roller brush of the G50 Hybrid, shown clean and free of tangles, contrasted with a conventional brush heavily entangled with hair, emphasizing reduced maintenance.

Dustbin and Filter

- Empty the 400ml dustbin after each cleaning cycle or when full.
- Clean the filter regularly by tapping it against a trash can to remove dust. Replace the filter every 3-6 months, depending on usage.

Mopping Pad and Water Tank

- Remove and clean the mopping pad after each use. It can be hand-washed or machine-washed.
- Empty any remaining water from the 200ml water tank after each mopping session to prevent mold or odors.

Sensors and Charging Contacts

Wipe the drop sensors, bumper sensors, and charging contacts on both the robot and the charging station with a clean, dry cloth periodically to ensure proper function.

TROUBLESHOOTING

If you encounter issues with your eufy G50 Hybrid, refer to the following common troubleshooting tips. For more detailed solutions, consult the eufy app or the official eufy support website.

- **Robot not charging:** Ensure the charging contacts on both the robot and the charging station are clean and free of dust. Verify the power cable is securely plugged into the station and the wall outlet.
- **Robot not connecting to Wi-Fi:** Confirm your router is set to 2.4GHz. Restart your router and the robot. Try reconnecting through the eufy app.
- **Reduced suction power:** Empty the dustbin and clean the filter. Check the roller brush and side brush for tangled hair or debris.
- **Mopping function not working:** Ensure the water tank is filled and properly installed. Check if the mopping pad is attached correctly.
- **Robot getting stuck frequently:** Clear obstacles from the cleaning path. Ensure there are no loose cables or rugs that could entangle the robot.
- **Unusual noises:** Check the roller brush, side brush, and wheels for any foreign objects or debris.

If the issue persists, try restarting the robot by turning it off and on again. If necessary, perform a factory reset (refer to the eufy app or online resources for instructions).

SPECIFICATIONS

Feature	Specification
Brand	eufy
Model Number	T2212G11
Color	Black
Product Dimensions (L x W x H)	32.58 x 33.19 x 8.1 cm
Item Weight	3.27 Kilograms
Dustbin Capacity	400 Milliliters
Water Tank Capacity	200 Milliliters
Suction Power	4000Pa
Runtime	Up to 2 Hours (120 minutes)
Noise Level	55dB
Special Features	Dynamic Navigation, Pro-Tangle-Free Comb, Works with Alexa

Feature	Specification
Filter Type	Fabric

A detailed diagram providing the length, width, and height measurements for both the G50 Hybrid robot vacuum and its detachable mopping pad.
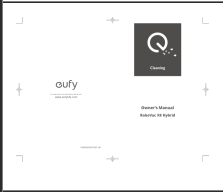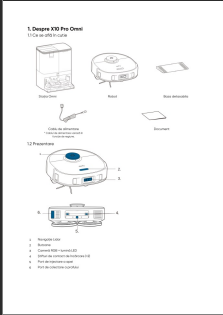
WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your product or visit the official eufy website. Warranty terms and conditions may vary by region.
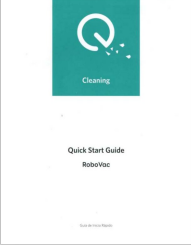
For technical support, FAQs, and additional resources, please visit the eufy support page or contact eufy customer service. You can also find helpful information and updates through the eufy app.

Visit the official eufy store on Amazon: eufy Store

Related Documents - G50 Hybrid (T2212G11)

eufy G50 Series Robot Vacuum Cleaner User Manual
Comprehensive user manual for the eufy G50 Series Robot Vacuum Cleaner, detailing setup, operation, mopping system, voice control integration with Alexa and Google Assistant, maintenance procedures, troubleshooting, and technical specifications.

Eufy RoboVac X8 Hybrid Owner's Manual
Comprehensive owner's manual for the Eufy RoboVac X8 Hybrid, detailing setup, operation, cleaning, maintenance, and troubleshooting for this advanced robot vacuum.

Manual de utilizare eufy X10 Pro Omni Robot Aspirator și Mop
Manual de utilizare complet pentru aspiratorul robot eufy X10 Pro Omni, acoperind configurarea, operarea, întreținerea, controlul prin aplicație și depanarea. Aflați cum să utilizați stația Omni, modurile de curățare, setările de putere de aspirație și funcțiile de siguranță pentru copii.

eufy G50 Series Robot Vacuum Cleaner User Manual
This manual provides comprehensive instructions for the eufy G50 Series Robot Vacuum Cleaner, including setup, operation, maintenance, and troubleshooting. Learn how to use the eufy Clean app, connect to Wi-Fi, and optimize cleaning performance.

	[Eufy L60 Hybrid SES Robot Vacuum Cleaner Quick Start Guide](#) A concise guide to setting up and using your Eufy L60 Hybrid SES Robot Vacuum Cleaner, including installation of the self-empty station, app connection, and basic operation.
	[RoboVac LR30 Hybrid+ Quick Start Guide](#) A quick start guide for the Eufy RoboVac LR30 Hybrid+ robot vacuum and mop, covering setup, operation, cleaning, maintenance, and important tips for optimal performance.