DEWENWILS ITE-03

DEWENWILS 24 Hour Programmable Digital Timer Outlet Instruction Manual

Model: ITE-03

1. Introduction

Thank you for choosing the DEWENWILS 24 Hour Programmable Digital Timer Outlet. This compact and versatile timer is designed to automate the on/off cycles of your electrical devices, helping you save energy and enhance convenience. It features a large LCD screen, three daily repeat programs, and a backup battery to retain settings during power outages. Please read this manual thoroughly before use to ensure proper operation and safety.

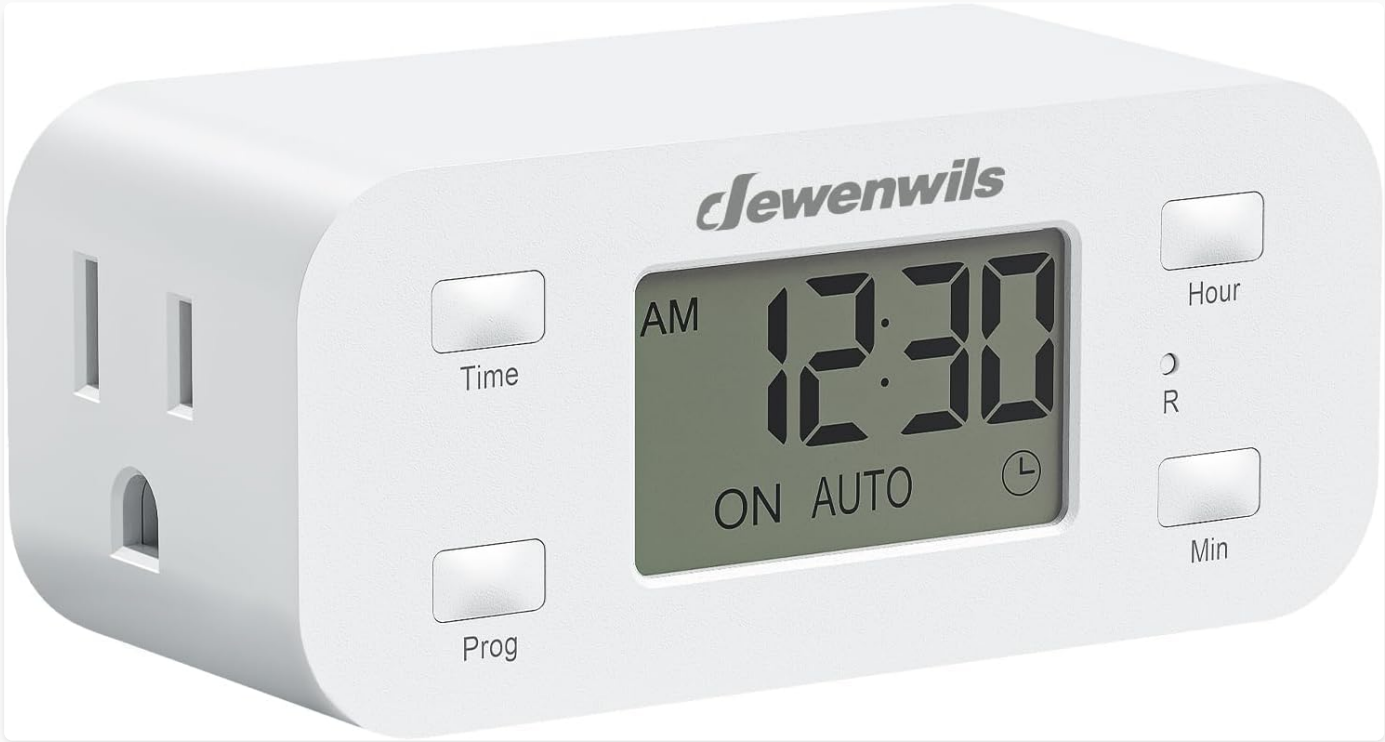


Figure 1: Front view of the DEWENWILS Digital Timer Outlet.

2. Key Features

- **3 Group Daily Repeat Program:** Program up to three sets of daily ON/OFF schedules.

- **Compact & Elegant Design:** Small and sleek, designed not to block other sockets.
- **Backup Battery:** Preserves programmed settings for up to 3 months during power outages or disconnections.
- **Silent Operation:** Ensures quiet performance, ideal for bedrooms and quiet spaces.
- **Energy Saving & Reliable:** Automatically turns devices on and off, saving time and energy.
- **Safe & Versatile:** Rated 125V, 60Hz, 15A/1000W, 3 prongs, suitable for various indoor applications.

3. Setup

3.1 Initial Placement

Plug the DEWENWILS Digital Timer Outlet into a standard 3-prong wall outlet. Its compact design ensures that it will not obstruct the adjacent outlet, allowing for continued use of both receptacles.



Figure 2: Timer plugged into an outlet, demonstrating space-saving design.

3.2 Setting Current Time

Before programming, ensure the current time is set correctly on the timer's display.

1. Press and hold the **Time** button.
2. While holding **Time**, press the **Hour** button to adjust the hour.
3. Continue holding **Time**, and press the **Min** button to adjust the minute.

4. Release the **Time** button once the correct time is set.



Figure 3: Visual guide for setting time and programming.

4. Operating the Timer

4.1 Mode Selection Switch

The timer features a side switch to select the operating mode:

- **ON:** The connected device will remain continuously on.
- **OFF:** The connected device will remain continuously off.
- **AUTO:** The connected device will operate according to your programmed schedules.

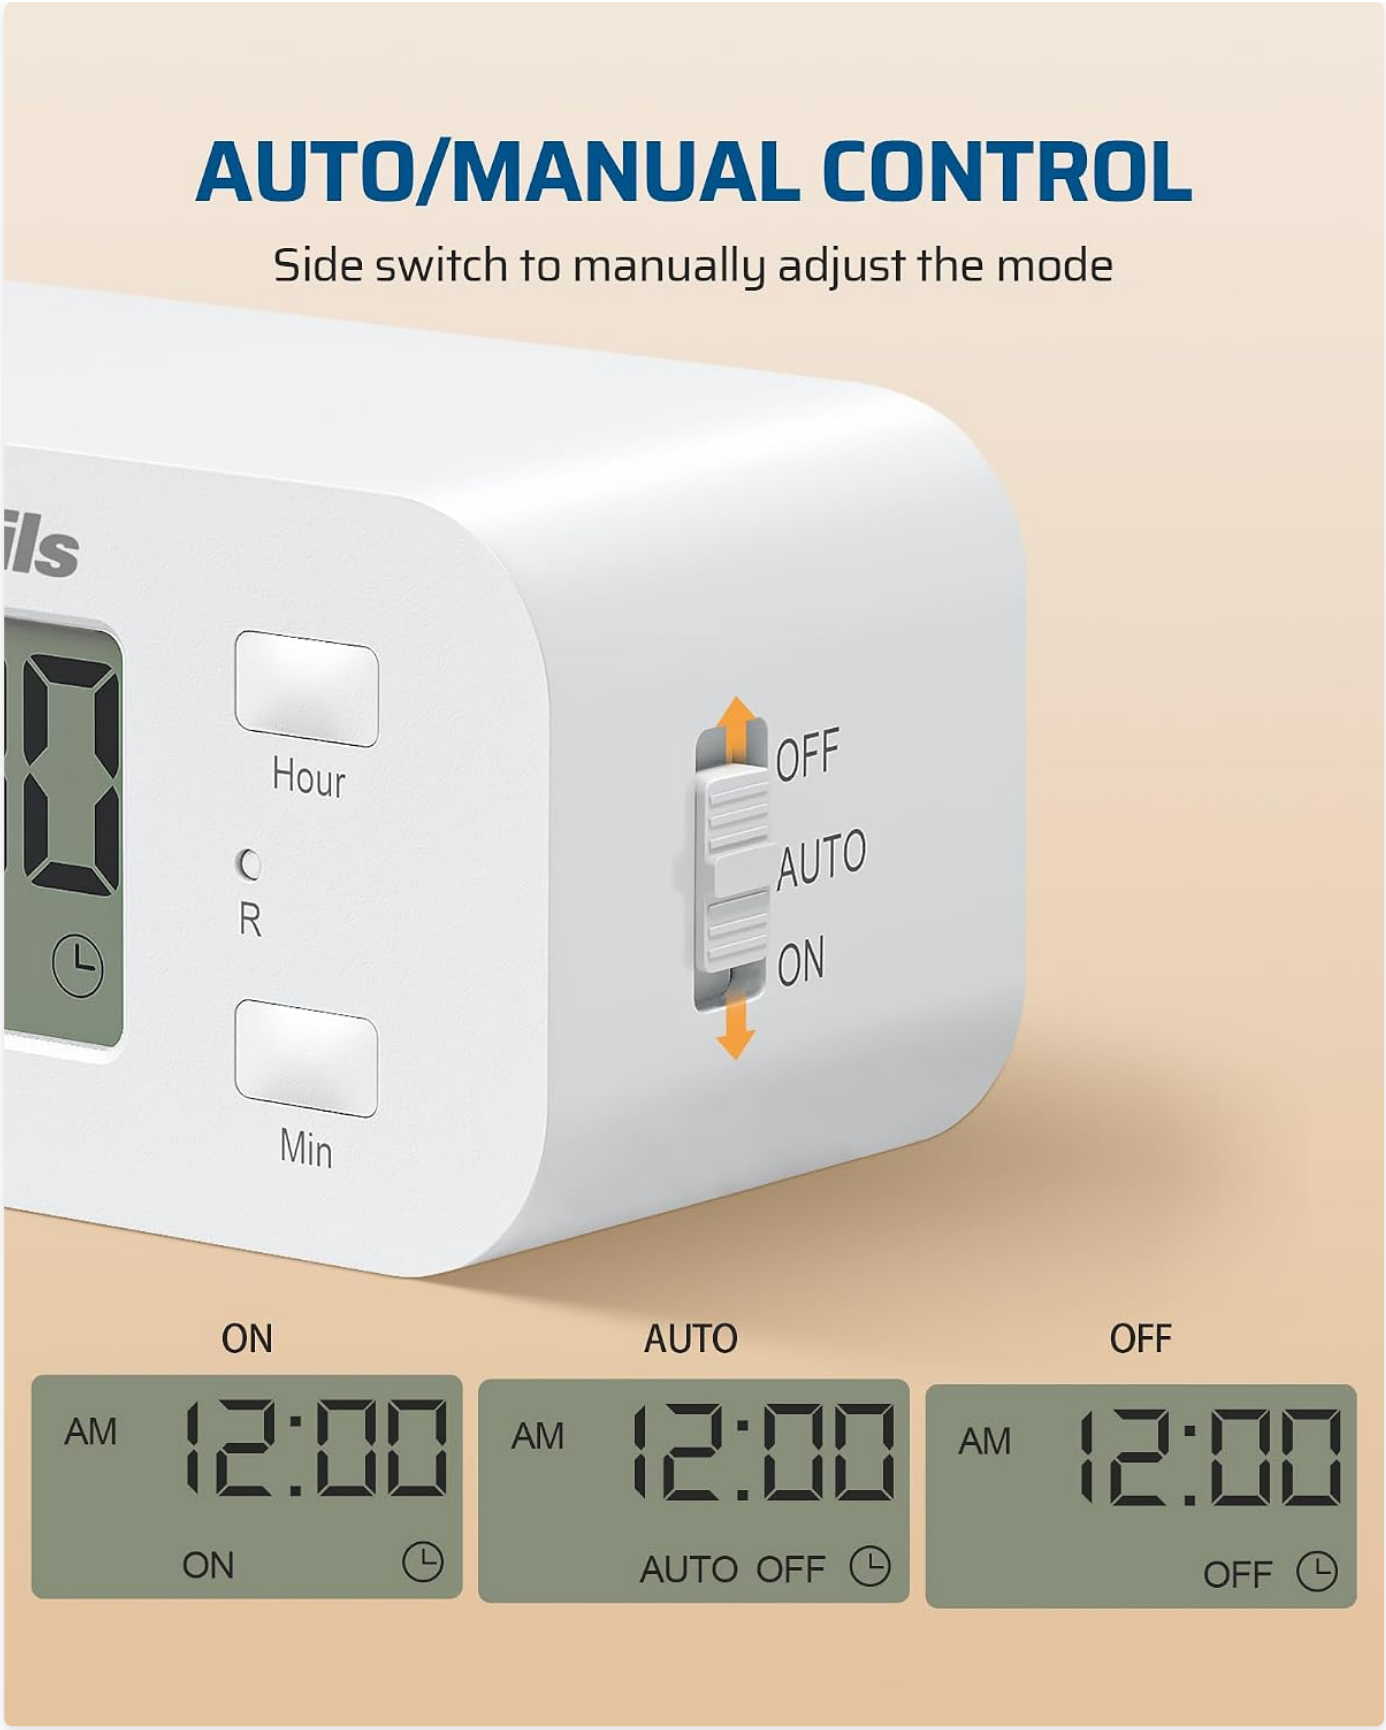


Figure 4: Side switch for mode selection.

4.2 Programming ON/OFF Cycles

The timer allows for 3 distinct daily repeat programs. To set a program:

1. Press the **Prog** button once to enter Program 1 ON time setting. The display will show "1 ON".
2. Use the **Hour** and **Min** buttons to set the desired ON time for Program 1.
3. Press **Prog** again to enter Program 1 OFF time setting. The display will show "1 OFF".

4. Use the **Hour** and **Min** buttons to set the desired OFF time for Program 1.
5. Repeat steps 1-4 for Program 2 ("2 ON", "2 OFF") and Program 3 ("3 ON", "3 OFF").
6. After setting all desired programs, ensure the side switch is set to **AUTO** for the programs to take effect.



Figure 5: Example of daily repeat programs.

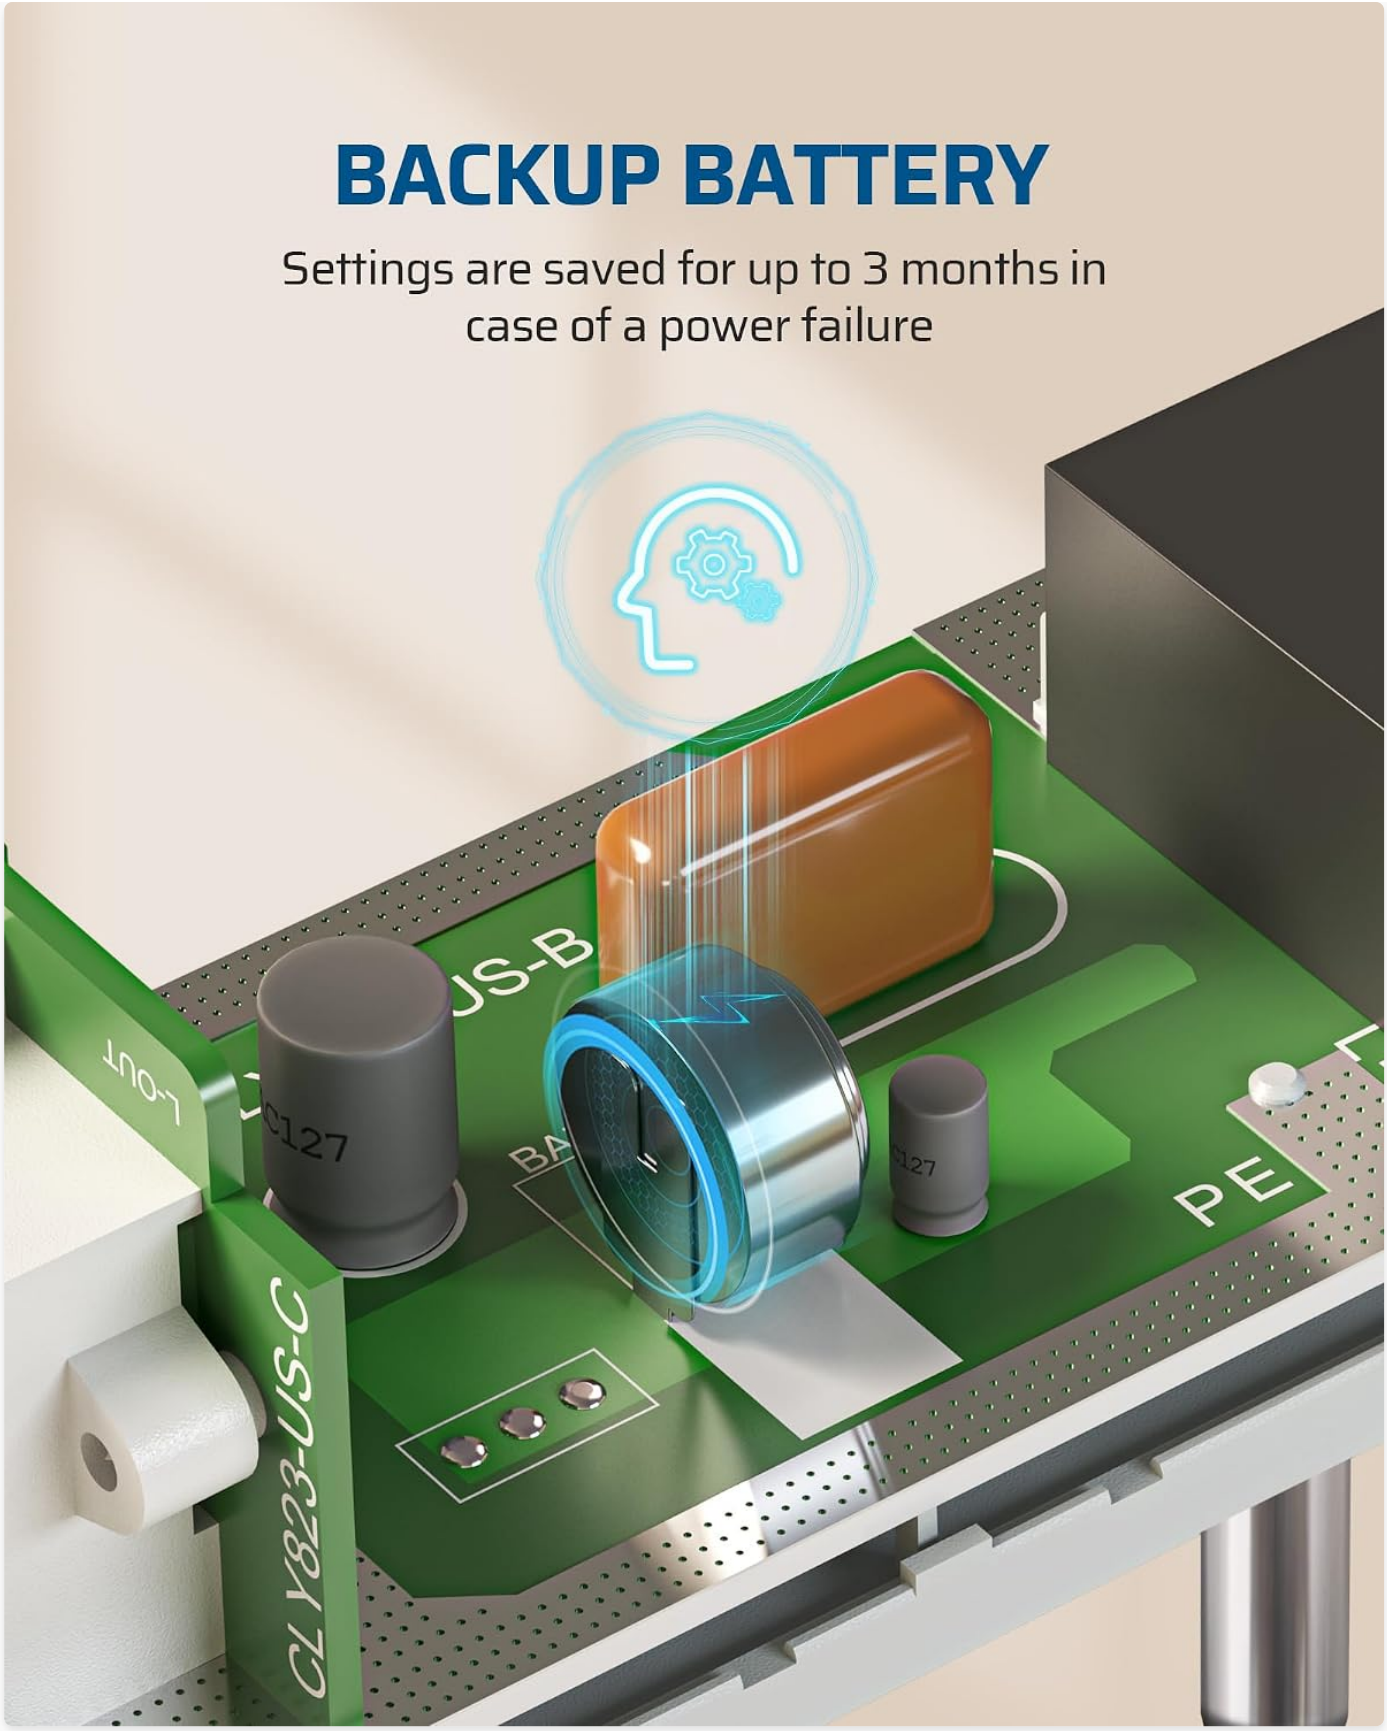


Figure 6: Accurate minute-by-minute programming.

4.3 Canceling a Program

To cancel a specific timing program, press and hold the**Prog** button until the program disappears from the display.

5. Maintenance

5.1 Cleaning

To clean the timer, unplug it from the wall outlet. Wipe the exterior with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.

5.2 Backup Battery

The timer is equipped with an internal backup battery that retains your programmed settings for up to 3 months in the event of a power outage or if the unit is unplugged. No user maintenance or replacement of this battery is required.

6. Troubleshooting

Issue	Possible Cause	Solution
Device not turning ON/OFF as programmed.	Timer is not in AUTO mode. Incorrect program settings.	Ensure the side switch is set to **AUTO**. Verify programmed ON/OFF times are correct.
Display is blank or not responding.	No power to the outlet. Timer needs reset.	Check the wall outlet with another device. Use a pin to press the recessed **R** (Reset) button on the timer.
Time is incorrect after power outage.	Backup battery depleted (after 3 months without power).	Reset the current time as described in Section 3.2. Programmed settings should remain.

6.1 Resetting the Timer

If the timer is behaving erratically or you wish to clear all settings, you can perform a full reset:

1. Locate the small, recessed **R** (Reset) button on the timer.
2. Use a thin, pointed object (like a paperclip or pin) to gently press and hold the **R** button for a few seconds until the display clears or resets.
3. The timer will return to its factory default settings, and you will need to set the current time and reprogram your desired cycles.

7. Specifications

Attribute	Value
Brand	DEWENWILS
Model Number	ITE-03
Color	White
Material	Plastic
Voltage	125V
Frequency	60Hz

Attribute	Value
Current Rating	15A
Power Rating	1000W
Horsepower	1/2 HP
Number of Settings	3 (Daily Repeat Programs)
Screen Size	5 Inches
Item Weight	3.84 ounces
Package Dimensions	3.62 x 2.6 x 1.93 inches
Country of Origin	China

8. Warranty and Support

8.1 Warranty Information

The DEWENWILS 24 Hour Programmable Digital Timer Outlet comes with a**1-Year Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accident, unauthorized modification, or improper installation.

8.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact DEWENWILS customer service. Refer to the product packaging or the official DEWENWILS website for the most current contact information.

© 2025 DEWENWILS. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question