Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

onerbl A3390J12-5

onerbl AC/DC Adapter Instruction Manual

For Anker Soundcore Rave Party SE Portable Bluetooth Speaker (Models A3390J, A3390J12-5, AK-A3390J12, A3390Z12)

Introduction

This manual provides essential instructions for the safe and effective use of your onerbl AC/DC power adapter. This adapter is specifically designed to power and charge Anker Soundcore Rave Party SE portable Bluetooth speaker models A3390J, A3390J12-5, AK-A3390J12, and A3390Z12.
Please read this manual thoroughly before using the product and retain it for future reference.

1. Setup

1. **Unpacking:**
   Carefully remove the onerbl AC/DC adapter from its packaging. Ensure all components are present and undamaged. The package should contain one (1) AC/DC power adapter.
2. **Connecting to the Speaker:**
   Locate the charging port on your Anker Soundcore Rave Party SE speaker. Insert the DC output plug of the onerbl adapter firmly into the speaker's charging port. Ensure a secure connection.
3. **Connecting to a Power Outlet:**
   Plug the AC input prongs of the adapter into a standard AC 100-240V 50/60Hz wall outlet. The adapter is designed for worldwide AC input. Ensure the outlet is easily accessible.



Image: The onerbl AC/DC adapter connected to a wall outlet, ready for use.

2. Operating Instructions

- **Charging Indication:**
  Once connected, your Anker Soundcore Rave Party SE speaker should indicate that it is charging, typically via an LED indicator on the speaker itself. Refer to your speaker's manual for specific charging indicators.
- **Usage While Charging:**
  The speaker can generally be used while it is connected to the adapter and charging. However, for optimal charging speed, it is recommended to allow the speaker to charge without heavy usage.
- **Safety Precautions:**
  - Use the adapter only in dry, indoor environments.
  - Do not expose the adapter to water, moisture, or extreme temperatures.
  - Avoid dropping or subjecting the adapter to strong impacts.
  - Unplug the adapter from the wall outlet when not in use for extended periods.

3. Maintenance

- **Cleaning:**
  To clean the adapter, disconnect it from both the power outlet and the speaker. Wipe the surface with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:**
  Store the adapter in a cool, dry place away from direct sunlight and excessive heat. Avoid tightly coiling the cable to prevent damage.
- **Cable Care:**
  Regularly inspect the power cord for any signs of damage, such as fraying or exposed wires. If damage is observed, discontinue use immediately and replace the adapter. Avoid bending the cable sharply or placing heavy objects on it.

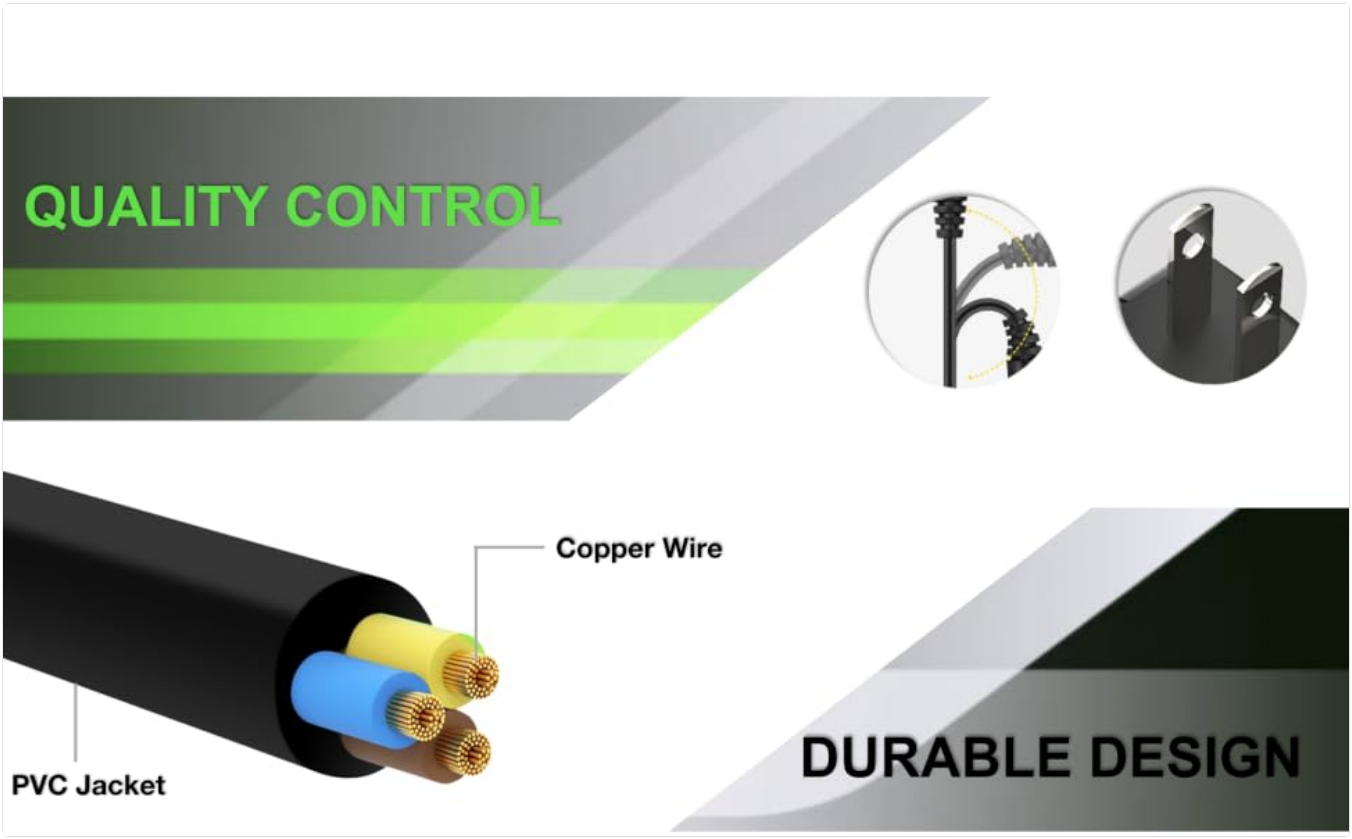


Image: Illustration of the durable design of the power cable, featuring copper wire and a PVC jacket.

4. Troubleshooting

Problem	Possible Cause	Solution
Speaker not charging.	• Adapter not properly connected. • Power outlet is not active. • Speaker's charging port is damaged. • Adapter is faulty.	• Ensure both ends of the adapter are securely plugged in. • Test the outlet with another device. • Try charging another compatible device (if available) with the adapter to check adapter functionality. • Contact support if the issue persists.

Problem	Possible Cause	Solution
Adapter feels hot during use.	• Normal operation (slight warmth). • Overload or poor ventilation.	• A slight warmth is normal. • Ensure the adapter is in a well-ventilated area. • If it becomes excessively hot, unplug it immediately and contact support.
Speaker not turning on after charging.	• Speaker battery issue. • Speaker fault.	• Ensure the speaker has charged for a sufficient period. • Refer to your Anker Soundcore Rave Party SE speaker's manual for troubleshooting power issues.

5. Specifications

Brand	onerbl
Compatible Models	Anker Soundcore Rave Party SE (A3390J, A3390J12-5, AK-A3390J12, A3390Z12)
Input	AC 100-240V, 50/60Hz (Worldwide AC Input)
Output	7.4V
Wattage	80W
Connector Type	Proprietary
Cable Length	76 inches (approximately 6.3 feet)
Dimensions (Adapter Body)	3.1 inch (length) x 2.1 inch (width) x 1.2 inch (thickness)
Safety Features	Over Voltage Protection, Over Heat Protection, Short-circuit Protection, Over-current Protection



Image: Detailed dimensions of the onerbl AC/DC adapter.



Image: The adapter displaying its input specifications and the total cable length of 76 inches.



Image: Visual representation of the adapter's built-in safety features, including short-circuit, over-voltage, and over-current protection.

6. Warranty Information

This onerbl AC/DC adapter comes with a standard manufacturer's warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the documentation provided with your purchase or contact the retailer.

7. Customer Support

If you encounter any issues or have questions regarding your onerbl AC/DC adapter that are not addressed in this manual, please contact your retailer or the manufacturer's customer support for assistance. Please have your product model number and purchase information ready when contacting support.

© 2024 onerbl. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CTY3554N

More documents and user manuals: **https://manuals.plus/**