onerbl 9V AC/DC Adapter

onerbl 9V AC/DC Adapter Instruction Manual

For Giecy G900 G900s Karaoke Machine

1. Product Overview

This onerbl 9V AC/DC Adapter is designed to provide reliable power to your Giecy G900 or G900s Karaoke Machine. It features a universal input voltage range and incorporates multiple safety protections to ensure stable and safe operation.



Image 1: Front and side view of the onerbl 9V AC/DC Adapter. The adapter is black with a standard US plug. The front label indicates "AC Adapter Input: 100-240VAC 0.3A 50/60Hz" and "MADE IN CHINA".

Key Features:

- **Universal Input:** AC 100-240V 50/60Hz, suitable for worldwide use.
- **Output:** 9V, 40W for efficient power delivery.
- **Safety Protections:** Includes Over Voltage Protection, Over Heat Protection, Short-Circuit Protection, and Over-Current Protection.
- **Durable Design:** Constructed with quality materials including copper wire and a PVC jacket for longevity.



Image 2: Illustration highlighting the adapter's "SMART CHIP" and "Multiple Protection" features. Icons represent short-circuit protection, over-voltage protection, and over-current protection, ensuring electrical safety.

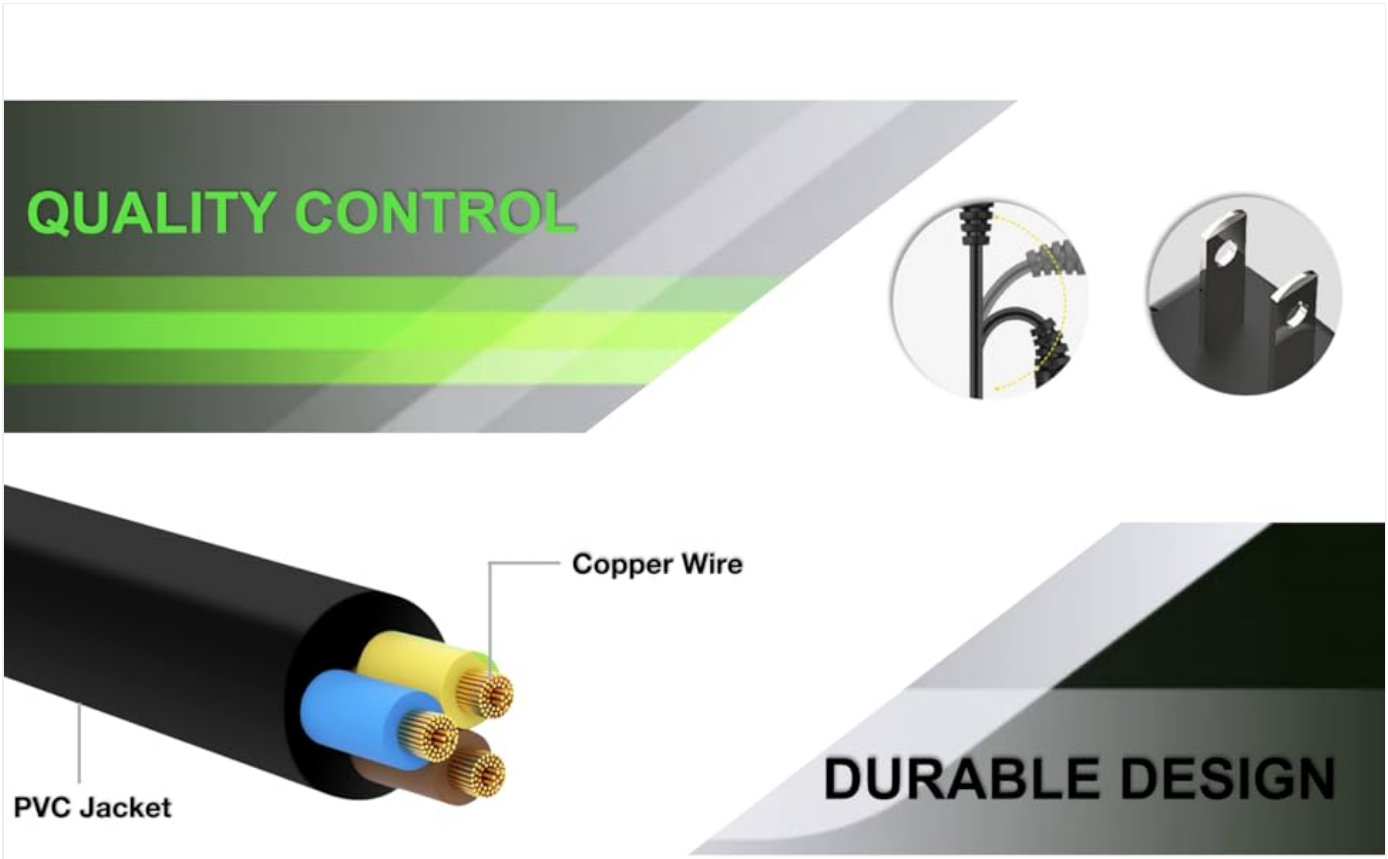


Image 3: Diagram illustrating the internal construction of the power cord, showing copper wire and a PVC jacket, emphasizing the "DURABLE DESIGN" and "QUALITY CONTROL" of the product.



Image 4: Visual representation of the adapter's "Wide Range of Applications," depicting various electronic devices it can power, including set-top boxes, routers, batteries, LED strips, and more, in addition to karaoke machines.

2. Setup Instructions

Follow these steps to properly connect your onerbl 9V AC/DC Adapter to your Giecy G900 or G900s Karaoke Machine.

1. **Verify Compatibility:** Ensure your device requires a 9V power supply and that the connector type matches the adapter's output plug. This adapter is specifically designed for Giecy G900 and G900s Karaoke Machines.
2. **Connect to Device:** Insert the DC output plug of the adapter firmly into the power input port of your Giecy Karaoke Machine.
3. **Connect to Power Outlet:** Plug the AC input prongs of the adapter into a standard wall outlet (100-240V AC, 50/60Hz).
4. **Power On:** Once connected, you can power on your karaoke machine according to its own operating instructions.



Image 5: The onerbl AC adapter plugged into a power strip, demonstrating a typical connection scenario. A laptop is visible in the background, indicating a common environment for use.

3. Operating Instructions

The onerbl 9V AC/DC Adapter operates automatically once connected. No user intervention is required for its basic function. Observe the following guidelines for optimal performance and safety:

- Ensure the adapter is placed in a well-ventilated area to prevent overheating.
- Avoid covering the adapter with cloths or other materials during operation.
- Do not expose the adapter to water, moisture, or extreme temperatures.
- If the adapter or connected device shows signs of malfunction (e.g., unusual heat, smoke, strange odors), immediately disconnect the adapter from the power outlet.

4. Maintenance

Proper maintenance ensures the longevity and safe operation of your AC/DC adapter.

- **Cleaning:** Disconnect the adapter from the power outlet and the device before cleaning. Use a dry, soft cloth to wipe the surface. Do not use liquid cleaners or solvents.
- **Storage:** When not in use, store the adapter in a cool, dry place, away from direct sunlight and moisture. Avoid tightly coiling the cable to prevent damage.
- **Inspection:** Periodically inspect the adapter's cable and casing for any signs of damage, such as cuts, fraying, or cracks. If damage is found, discontinue use and replace the adapter.

5. Troubleshooting

If you encounter issues with your onerbl 9V AC/DC Adapter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device not powering on.	Adapter not properly connected; power outlet issue; device malfunction.	• Ensure adapter is fully plugged into both the device and the wall outlet. • Test the wall outlet with another device. • Verify the device itself is functioning correctly with its original power supply (if available).
Adapter feels unusually hot.	Poor ventilation; overloaded circuit; internal fault.	• Ensure adapter is in a well-ventilated area, not covered. • Disconnect immediately if excessively hot or smoking. Replace if fault persists.
Intermittent power to device.	Loose connection; damaged cable.	• Check all connections for tightness. • Inspect the cable for visible damage. Replace if damaged.

6. Specifications

Technical details for the onerbl 9V AC/DC Adapter:

- **Brand:** onerbl
- **Input:** AC 100-240V, 50/60Hz, 0.3A
- **Output Voltage:** 9 Volts
- **Output Wattage:** 40 Watts
- **Compatibility:** Giecy G900, Giecy G900s Karaoke Machine
- **Manufacturer:** Shenzhen Waweis Technology Co., Ltd
- **ASIN:** B0CTY3FTC5
- **Date First Available:** February 4, 2024

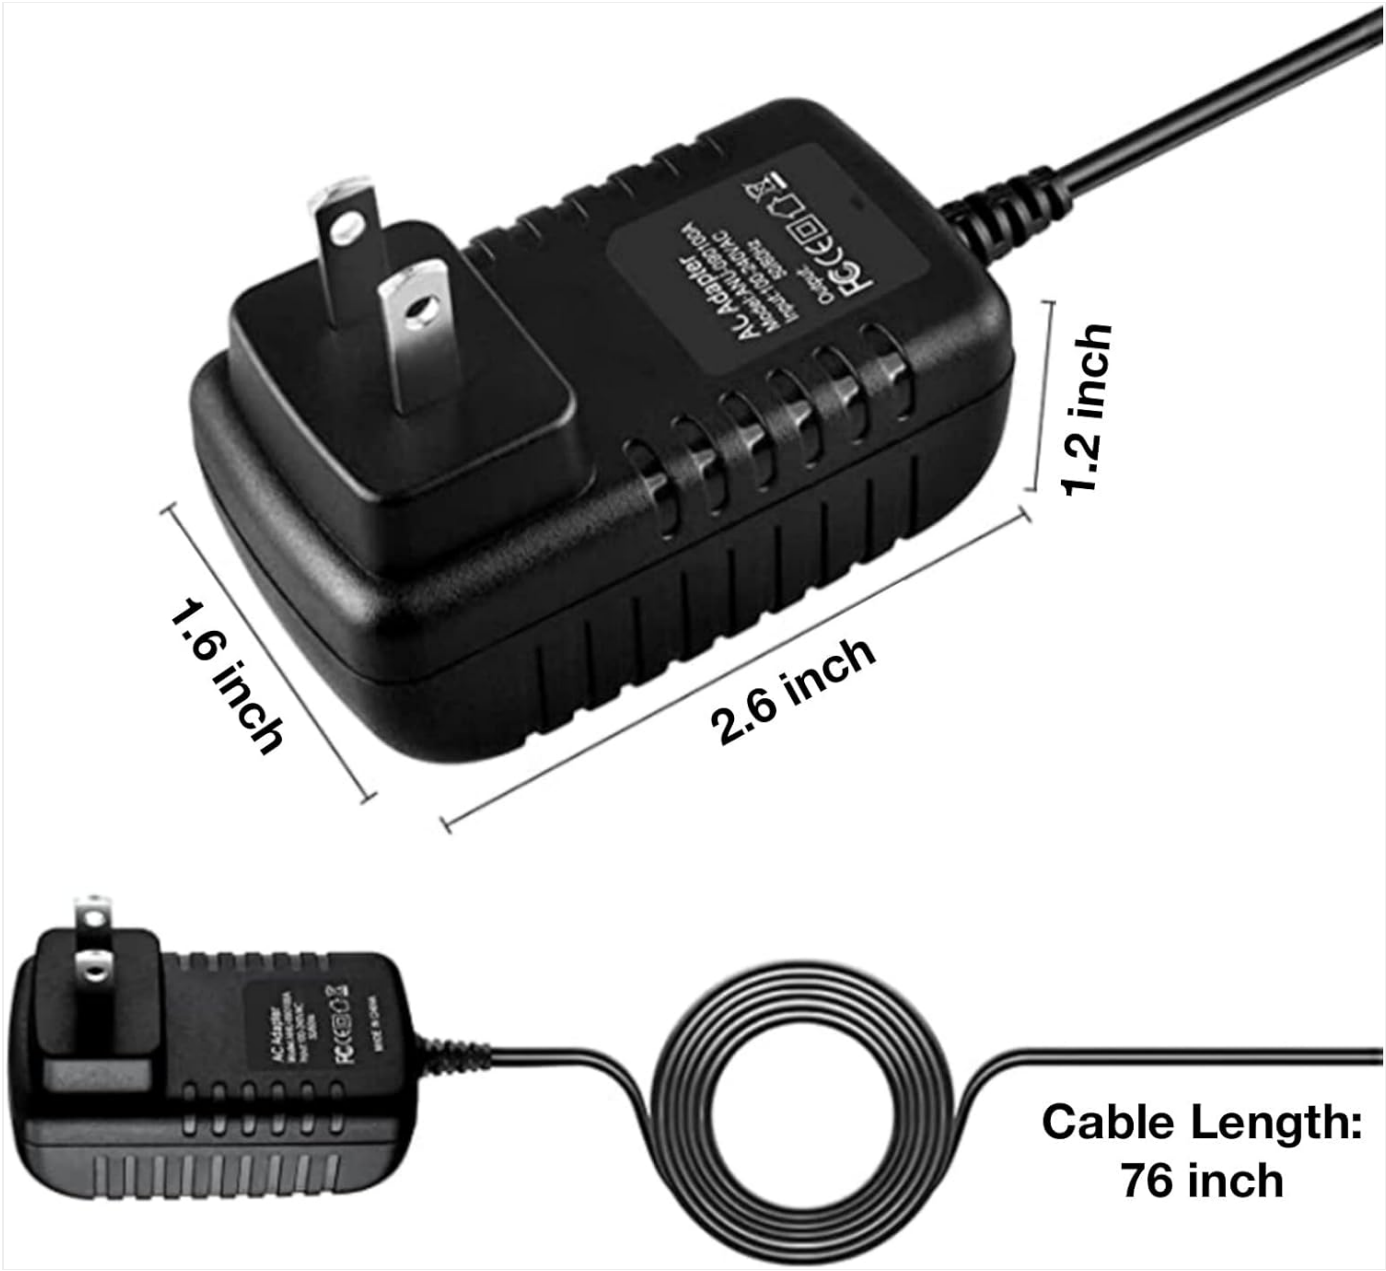


Image 6: Diagram illustrating the physical dimensions of the AC adapter (2.6 inches length, 1.6 inches width, 1.2 inches height) and the cable length (76 inches).

7. Warranty & Support

Information regarding product warranty and customer support is typically provided by the seller or manufacturer at the time of purchase.

- **Warranty:** Please refer to your purchase documentation or contact the seller for specific warranty terms and conditions.
- **Customer Support:** For technical assistance or inquiries, please contact the seller, GreatComputerParts, through the Amazon platform or refer to the manufacturer's contact information if provided with the product packaging.

© 2024 onerbl. All rights reserved.