Funstorm B13

Funstorm 2K WiFi Indoor Security Camera User Manual

Model: B13

Introduction

This user manual provides comprehensive instructions for the setup, operation, and maintenance of your Funstorm 2K WiFi Indoor Security Camera. Designed for indoor surveillance, this camera offers high-definition video, advanced motion detection, and long-lasting battery life to ensure peace of mind.

What's in the Box

- Funstorm 2K WiFi Indoor Security Camera
- 64G SD Card (pre-installed or included separately)
- USB Charging Cable
- Mounting Accessories (e.g., screws, wall mount)
- User Manual

Note: The camera comes as a combo set, ensuring all necessary components are included for immediate use.

Key Features

- **Extended Battery Life:** Long-lasting batteries for continuous monitoring without frequent charging.
- **SD Card Storage:** Built-in SD card support (64G SD card included) for local storage. Cloud services are also available as an option.
- **2K Ultra HD & Clear Night Vision:** Offers stunningly clear 2K live streaming and unparalleled visibility in the dark.
- **AI Motion Detection & Instant Notification:** Advanced PIR motion detection technology automatically records video and sends timely notifications to your phone upon detecting motion.
- **Real-Time Viewing:** Monitor your space in real-time using the Ubox app from anywhere.
- **Wide-Angle View:** Generous 150° wide-angle view ensures comprehensive surveillance.

Setup Guide

1. **Charge the Camera:** Before first use, fully charge the camera using the provided USB charging cable. Connect the cable to the camera's charging port and a standard USB power adapter (not included).
2. **Insert SD Card:** If not pre-installed, carefully insert the 64G SD card into the designated slot on the camera. Ensure correct orientation.
3. **Download the Ubox App:** Search for "Ubox" in your smartphone's app store (Google Play Store for Android, Apple App Store for iOS) and download the official application.
4. **Create an Account:** Open the Ubox app and follow the on-screen instructions to create a new user account or log in if you already have one.
5. **Add Device:** In the Ubox app, tap the "+" icon or "Add Device" to begin pairing your camera. Follow the app's prompts to connect the camera to your 2.4GHz Wi-Fi network. *Note: This camera only supports 2.4GHz Wi-Fi.*
6. **Mount the Camera:** Choose a suitable indoor location for optimal surveillance. Use the included mounting accessories to securely install the camera on a wall or other flat surface, ensuring a clear 150° field of view.

Operating Instructions

- **Live View:** Open the Ubox app and select your camera from the device list to access the live video feed. You can switch between Standard Definition (SD) and High Definition (HD) quality within the app.
- **Motion Detection:** The camera is equipped with AI PIR motion detection. When motion is detected, the camera will automatically begin recording and send an instant notification to your smartphone. You can adjust motion sensitivity settings within the Ubox app.
- **Night Vision:** The camera automatically switches to clear night vision mode in low-light conditions, ensuring continuous monitoring even in complete darkness.
- **Recording & Playback:**
  - **Local Storage:** Recordings are saved to the installed 64G SD card. You can access and playback recorded footage directly through the Ubox app.
  - **Cloud Storage:** Optional cloud services are available for secure off-site storage of your recordings. Refer to the Ubox app for subscription details.

Maintenance

- **Battery Charging:** Recharge the camera when the battery level is low. The long-lasting battery typically requires infrequent charging, depending on usage.
- **SD Card Management:** Periodically check the SD card status in the Ubox app. If the card becomes full, older recordings may be overwritten. You may need to format the SD card occasionally through the app for optimal performance.
- **Cleaning:** Gently wipe the camera lens and body with a soft, dry cloth to remove dust and smudges. Do not use liquid cleaners.

Troubleshooting

Problem	Possible Solution
Camera won't connect to Wi-Fi.	Ensure your Wi-Fi network is 2.4GHz. The camera does not support 5GHz networks. Check Wi-Fi password and signal strength. Restart the camera and your router.

Problem	Possible Solution
Live stream is blurry or low quality.	In the Ubox app, tap the "SD" icon on the live view screen to switch to "HD" (High Definition) mode. Ensure good Wi-Fi signal.
SD card not recognized or formatting issues.	Ensure the SD card is properly inserted. Try formatting the SD card directly through the Ubox app. If issues persist, try a different compatible SD card.
No motion detection notifications.	Check motion detection settings in the Ubox app. Ensure notifications are enabled for the app on your smartphone. Verify camera is online and has sufficient battery.

Product Specifications

Feature	Detail
Model Name	X1
Item Model Number	B13
Brand	Funstorm
Indoor/Outdoor Usage	Indoor
Connectivity Technology	Wireless (Wi-Fi 2.4GHz)
Power Source	Battery Powered (1 C battery included)
Video Capture Resolution	2K Ultra HD (Effective Video Resolution: 2000)
Field Of View	150 Degrees
Night Vision Range	8 Meters
Flash Memory Installed Size	64 GB (SD Card Included)
Item Dimensions (L x W x H)	1.97 x 0.98 x 0.98 inches
Item Weight	1.76 ounces (50 Grams)
Material	Acrylonitrile Butadiene Styrene (ABS)
Control Method	App (Ubox)

Warranty and Support

Funstorm products are backed by rigorous quality control, offering durability and reliability. For any technical assistance, warranty claims, or support inquiries, please refer to the contact information provided on the product packaging or visit the official Funstorm website. Keep your purchase receipt for warranty validation.

Product Visuals



Figure 1: Overview of the Funstorm 2K WiFi Indoor Security Camera, its compact design, and included accessories.



Figure 2: Key features of the Funstorm Security Camera, including 2K resolution, night vision, and motion detection.



Figure 3: Illustration of local storage via the 64GB SD card and the Ubox app's live viewing capabilities.

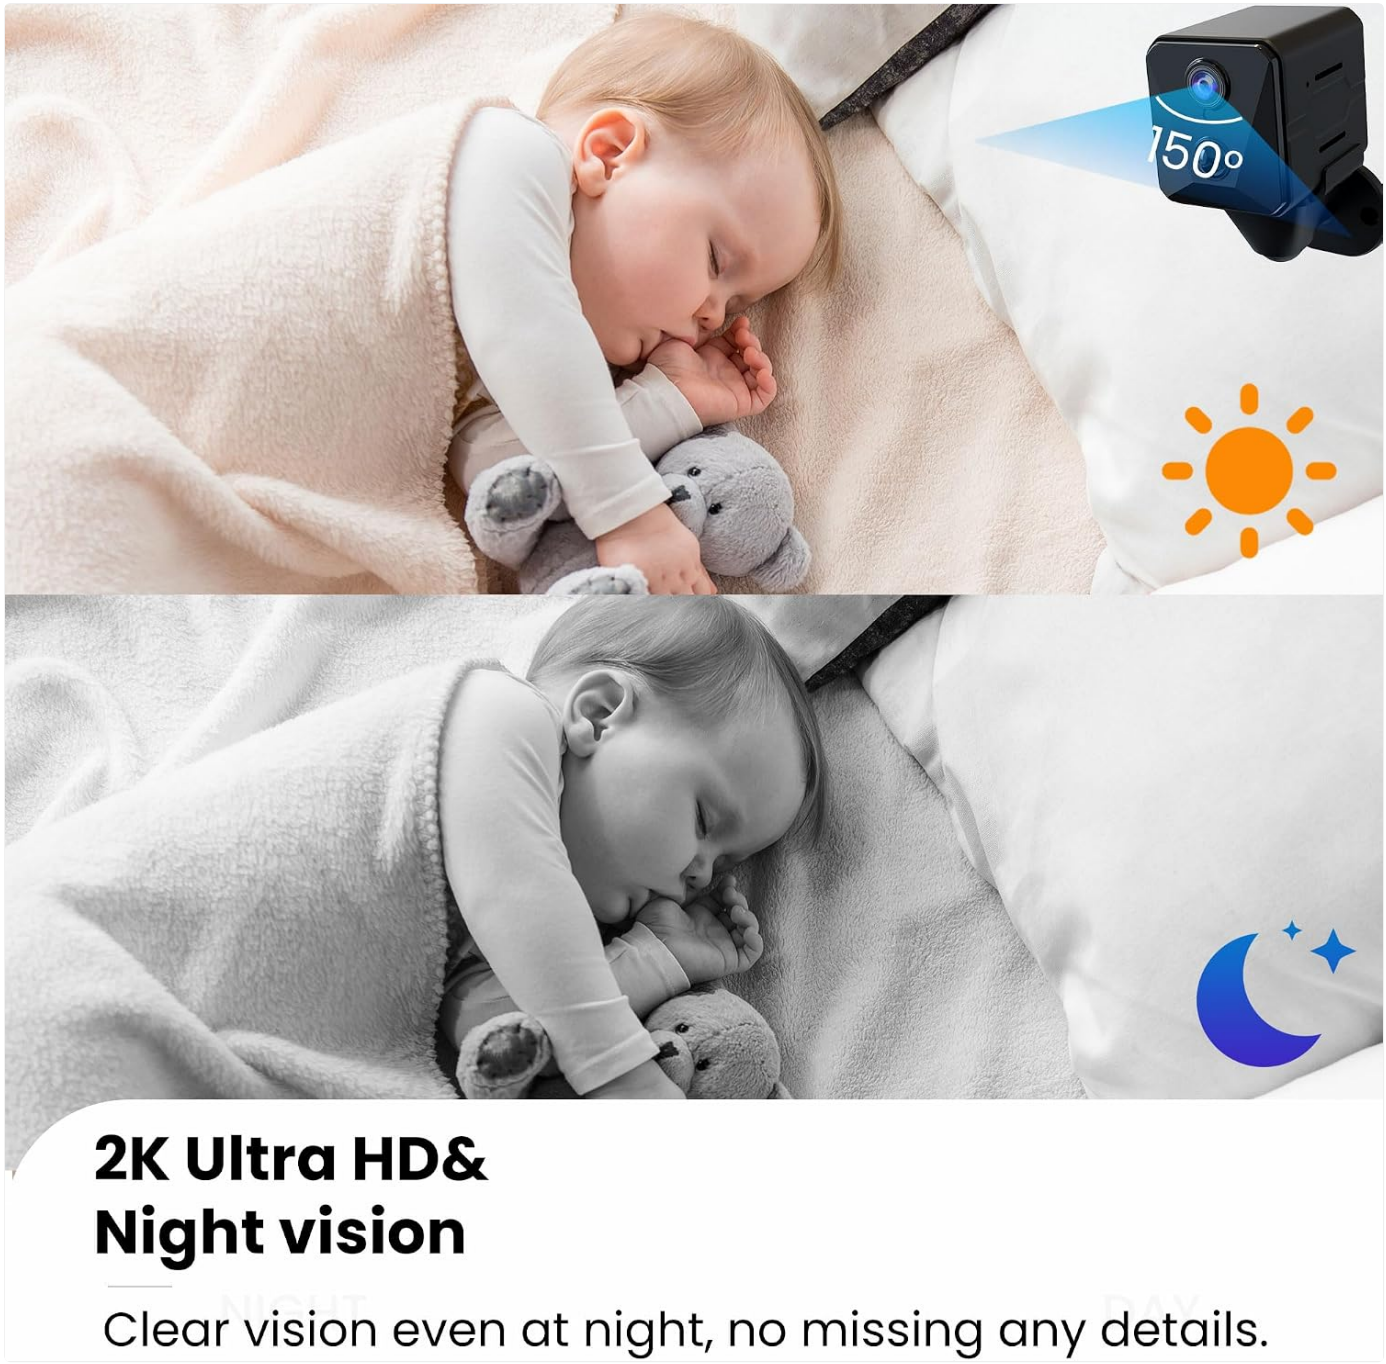


Figure 4: Demonstration of 2K Ultra HD and clear night vision, ensuring no details are missed even in darkness.



Figure 5: PIR Motion Detection in action, providing alerts and recording when movement is detected.



Figure 6: The mini spy camera's design allows for easy hiding and comprehensive home monitoring.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question