Funstorm X1

Funstorm Hidden Camera X1 User Manual

Model: X1

Introduction

Thank you for choosing the Funstorm Hidden Camera X1. This compact and versatile device is designed for discreet surveillance, offering advanced features such as 2K resolution video recording, clear night vision, and intelligent AI motion detection. With its long-lasting battery and flexible storage options, the X1 provides reliable monitoring for your home, office, or personal space. This manual will guide you through the setup, operation, and maintenance of your new camera to ensure optimal performance.



Figure 1: Funstorm Hidden Camera X1 and its live view on a smartphone.

Getting Started: Package Contents

Before you begin, please ensure all components are present in your package.

- Funstorm Hidden Camera X1
- USB Charging Cable
- Mounting Accessories (e.g., wall mount bracket)
- User Manual (this document)

Note: A Micro SD card is not included and must be purchased separately for local storage.

Setup Guide

Follow these steps to set up your Funstorm Hidden Camera X1:

1. **Step 1: Download the Ubox App**
   Search for "Ubox" in your smartphone's app store (Google Play Store for Android or Apple App Store for iOS) and download

the official application.

2. **Step 2: Fully Charge the Camera**
   Before initial use, connect the camera to a power source using the provided USB cable. Ensure the camera is fully charged for optimal battery performance. A full charge typically takes approximately 10 hours.
3. **Step 3: Connect to 2.4G Wi-Fi**
   Open the Ubox app and follow the on-screen instructions to add your new device. The camera supports 2.4GHz Wi-Fi networks only. Ensure your smartphone is connected to a 2.4GHz Wi-Fi network during the pairing process.
4. **Step 4: Insert Micro SD Card (Optional)**
   If you wish to use local storage, insert a Micro SD card (up to 128GB, not included) into the designated slot on the camera. Ensure the camera is powered off before inserting or removing the SD card.

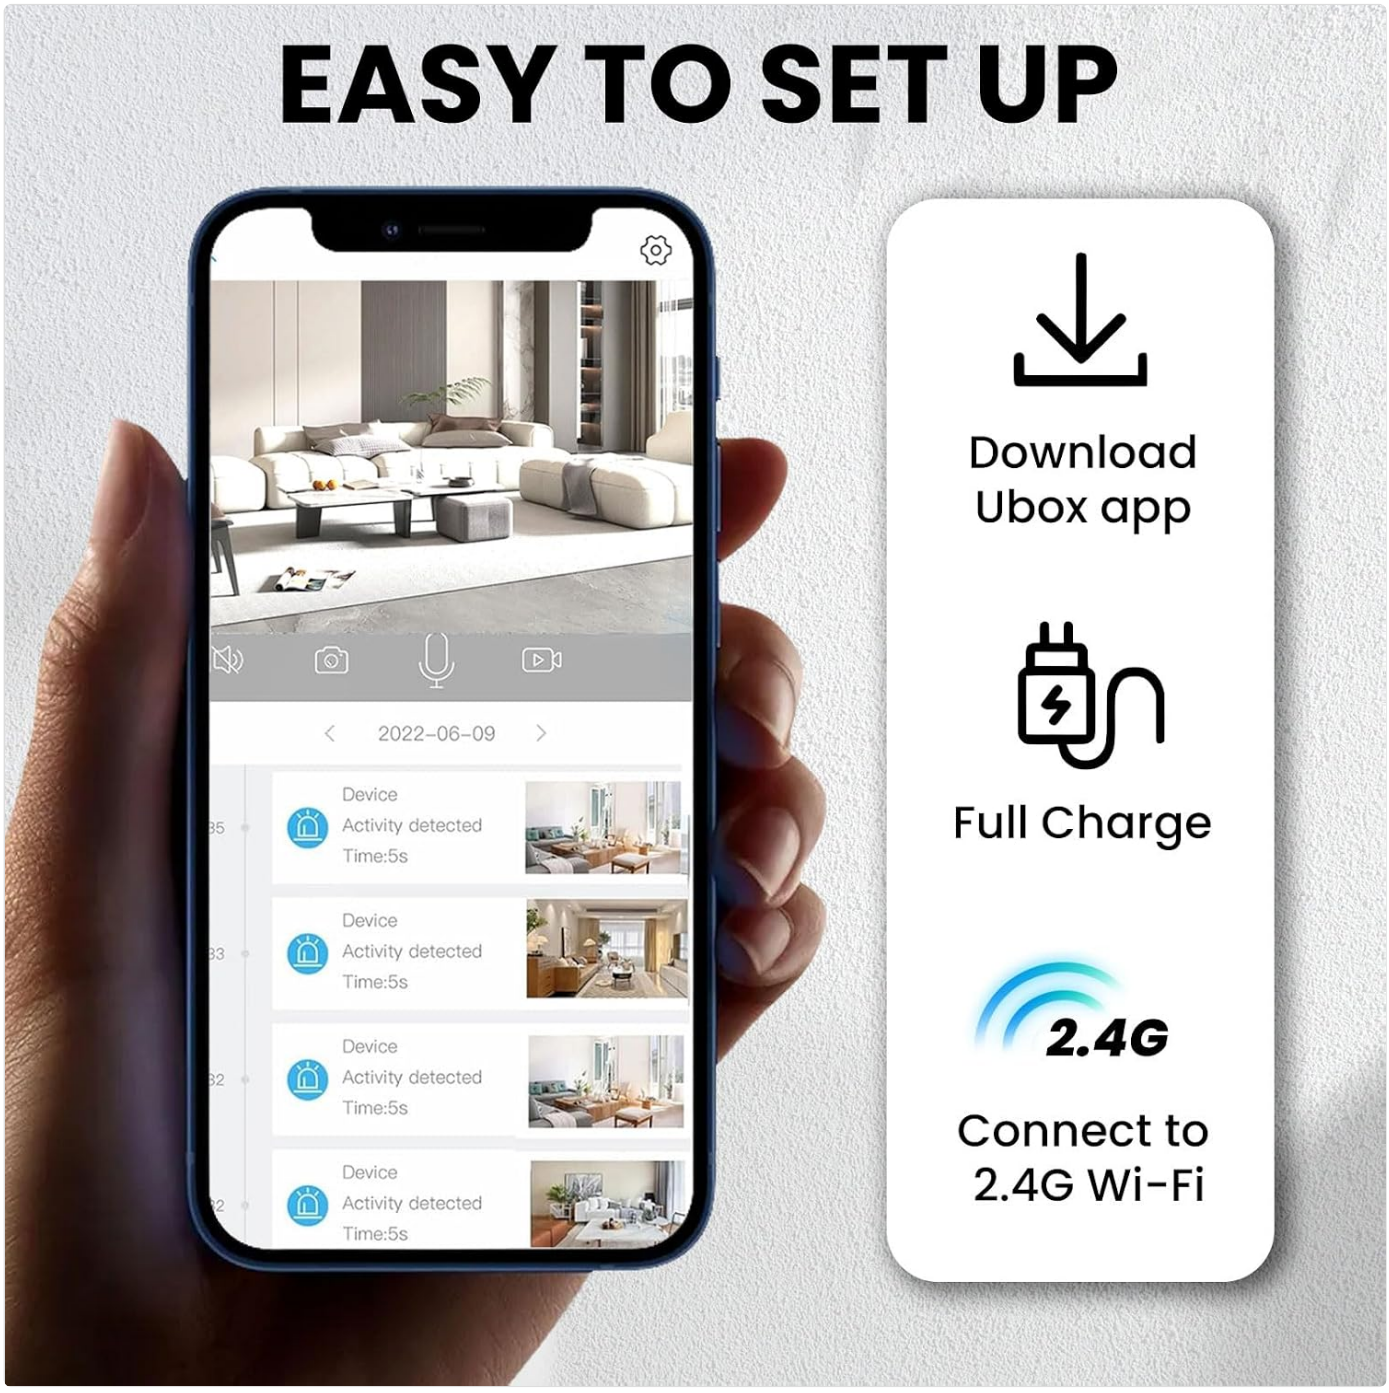


Figure 2: Visual guide for the easy setup process.

Operating Instructions

App Control and Real-Time Viewing

Once connected, you can view real-time camera images anytime and anywhere via the Ubox app. This allows you to monitor your home or office remotely, ensuring you are always aware of what is happening. The camera provides a clear and smooth video experience.



Figure 3: Real-time monitoring via the Ubox app.

Motion Detection and Alerts

The Funstorm Hidden Camera X1 features AI motion detection. When movement is detected, the camera will immediately send alerts to your mobile phone app. This ensures you are promptly notified of any activity, whether it's a pet, a child, or an unexpected intrusion.



Figure 4: AI motion detection and real-time alerts.

Night Vision

Equipped with clear night vision capabilities, the camera can capture detailed images even in low-light or dark conditions. This ensures continuous surveillance and visibility around the clock.



Figure 5: Day and Night Vision capabilities.

Video Storage and Playback

The camera offers two video storage options:

- **Cloud Storage:** Provides a free 3-day cloud storage trial. Cloud storage is optional and can be canceled at any time. Note that cloud storage typically records only motion detection videos.
- **Local Storage:** Supports Micro SD cards up to 128GB (not included). You can view video playback from the SD card at any time through the app.



Figure 6: Dual storage options for video recording.

Maintenance

Battery Management

The Funstorm Hidden Camera X1 is designed for ultra-long battery life, offering up to 100 days of standby time on a full charge. To maintain optimal battery health:

- Charge the camera fully before its first use and whenever the battery level is low.
- Use the provided USB cable for charging.
- Avoid exposing the camera to extreme temperatures, which can affect battery performance.



Figure 7: Extended battery life of the camera.

Cleaning and Care

To ensure clear video quality and prolong the life of your camera:

- Gently wipe the camera lens with a soft, lint-free cloth.
- Do not use harsh chemicals or abrasive cleaners.
- Keep the camera in a dry environment as it is not water resistant.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Camera not connecting to Wi-Fi.	Incorrect Wi-Fi password; attempting to connect to 5GHz network; camera too far from router.	Ensure correct password. Connect to a 2.4GHz Wi-Fi network. Move camera closer to the router. Reset camera and try pairing again.
Poor video quality or blurry images.	Dirty lens; insufficient lighting; network bandwidth issues.	Clean the camera lens. Ensure adequate lighting or rely on night vision. Check your internet connection speed. In the app, switch from SD to HD resolution if available.
SD card not recognized or formatting issues.	Incompatible SD card; card not inserted correctly; corrupted card.	Ensure the SD card is correctly inserted. Try formatting the SD card directly through the Ubox app. If issues persist, try a different Micro SD card (up to 128GB).

Problem	Possible Cause	Solution
No motion detection alerts.	Motion detection disabled in app; app notifications turned off; camera offline.	Check motion detection settings in the Ubox app. Enable notifications for the Ubox app in your phone settings. Ensure the camera is online and has sufficient battery.
Camera loses time stamp or recording issues without internet.	Camera relies on network time synchronization.	For accurate time stamps and reliable recording organization, maintain a stable internet connection. The camera is designed for network-connected operation.

SPECIFICATIONS

Feature	Detail
Model Name	X1
Brand	Funstorm
Indoor/Outdoor Usage	Indoor
Power Source	Battery Powered (1 Lithium Polymer battery included)
Connectivity Protocol	Wi-Fi (2.4GHz only)
Video Capture Resolution	1080p (Supports up to 2160 Pixels / 2K resolution)
Night Vision Range	6 Meters
Frame Rate	30 frames per second
Battery Life (Standby)	Up to 100 days

Feature	Detail
Storage Options	Micro SD Card (up to 128GB, not included), Cloud Storage
Dimensions (L x W x H)	2 x 2.7 x 0.7 inches
Item Weight	7 ounces
Material	Acrylonitrile Butadiene Styrene (ABS)
UPC	636144870430

Warranty and Support

Funstorm is committed to providing high-quality products and excellent customer service.

- **Warranty:** The product comes with a 2-year return policy. Please refer to your purchase documentation for specific warranty terms and conditions.
- **Customer Service:** We offer 24/7 online customer service and one-to-one after-sales technical solutions. If you have any questions, encounter issues, or require technical assistance, please do not hesitate to contact us.

For support, please visit the official Funstorm website or contact customer service through the Ubox app.

© 2024 Funstorm. All rights reserved.