GOWENIC MF68E

GOWENIC MF68E Portable 4G LTE Router

User Instruction Manual

1. Introduction

Thank you for choosing the GOWENIC MF68E Portable 4G LTE Router. This device provides high-speed mobile internet access, allowing you to share a 4G network connection with up to 10 devices simultaneously. Its compact design and long-lasting battery make it ideal for travel, outdoor activities, or as a reliable backup internet source.

2. Safety Information

- **Battery Safety:** Use only the matching 3000mAh battery provided. Do not expose the battery to high temperatures or fire. Keep the battery out of reach of children. The operating temperature range is 0°C to 45°C. Do not disassemble or short-circuit the battery.
- **Charging:** Use only the authorized charger or charging cable.
- **Network Compatibility:** This product is designed for 4G networks (B1/3/7/8/20/38/40/41) in Europe and does not support 5G networks.
- **Environment:** Avoid using the device in extremely hot, cold, dusty, or humid environments.

3. Package Contents

Please check the package for the following items:

- 1 x GOWENIC MF68E Portable 4G LTE Router
- 1 x Charging Cable
- 1 x 3000mAh Battery
- 1 x Instruction Manual

4. Product Overview

The GOWENIC MF68E features a compact design with an LCD display for easy status monitoring and a USB port for power. The device includes an internal antenna for reliable signal reception.



Front view of the GOWENIC MF68E Portable 4G LTE Router, showing its LCD screen with network information.



Visual representation of the router's key features: Type-C interface, 4G high-speed internet, and 3000mAh battery.

5. Setup

Follow these steps for initial setup:

1. **Insert SIM Card:** Carefully remove the back cover of the router. Insert your activated 4G SIM card (not included) into the designated SIM card slot. Ensure the SIM card is correctly oriented.
2. **Insert Battery:** Place the provided 3000mAh battery into its compartment.
3. **Replace Cover:** Securely reattach the back cover.
4. **Power On:** Press and hold the power button until the LCD screen illuminates. The device will automatically connect to the 4G network.
5. **Connect Power (Optional):** For continuous operation or charging, connect the router to a USB power source (e.g., wall adapter, power bank, car charger) using the provided charging cable.




View of the router with its back cover removed, illustrating the SIM card and battery installation.


6. Operating Instructions

Once powered on and connected to the 4G network, the router will broadcast a Wi-Fi signal. You can find the Wi-Fi network name (SSID) and password (KEY) displayed on the device's LCD screen.

- **Connecting Devices:** On your Wi-Fi enabled device (phone, tablet, laptop, smart TV), search for available Wi-Fi networks. Select the SSID displayed on the router's screen and enter the corresponding KEY to connect.
- **Multi-User Support:** The router supports up to 10 devices connecting simultaneously, providing stable and high-performance internet access for all connected users.
- **High-Speed Internet:** Experience fast and stable 4G LTE speeds up to 300Mbps for browsing, streaming, and online activities.
- **Security Encryption:** The device utilizes WPA/WPA2 encryption protocols to ensure a secure network connection and protect your data.

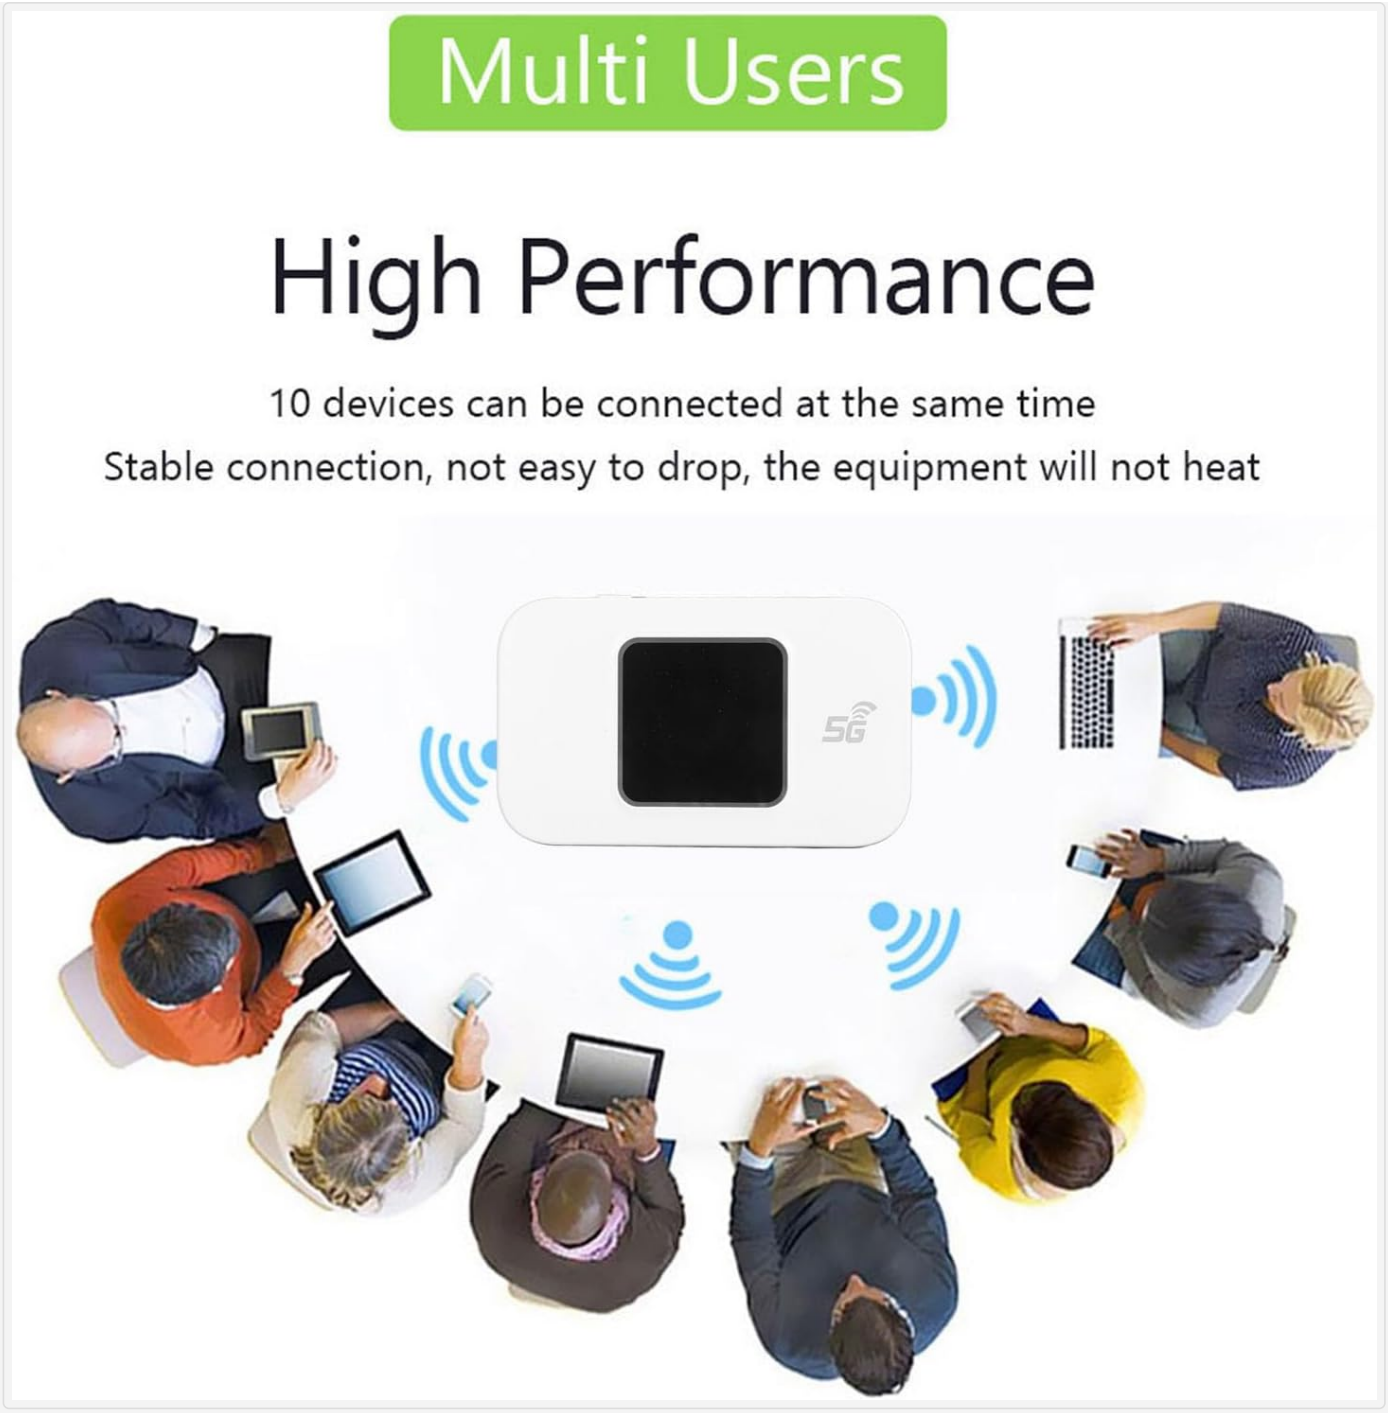

The router supports multiple users, allowing up to 10 devices to connect simultaneously for high performance.

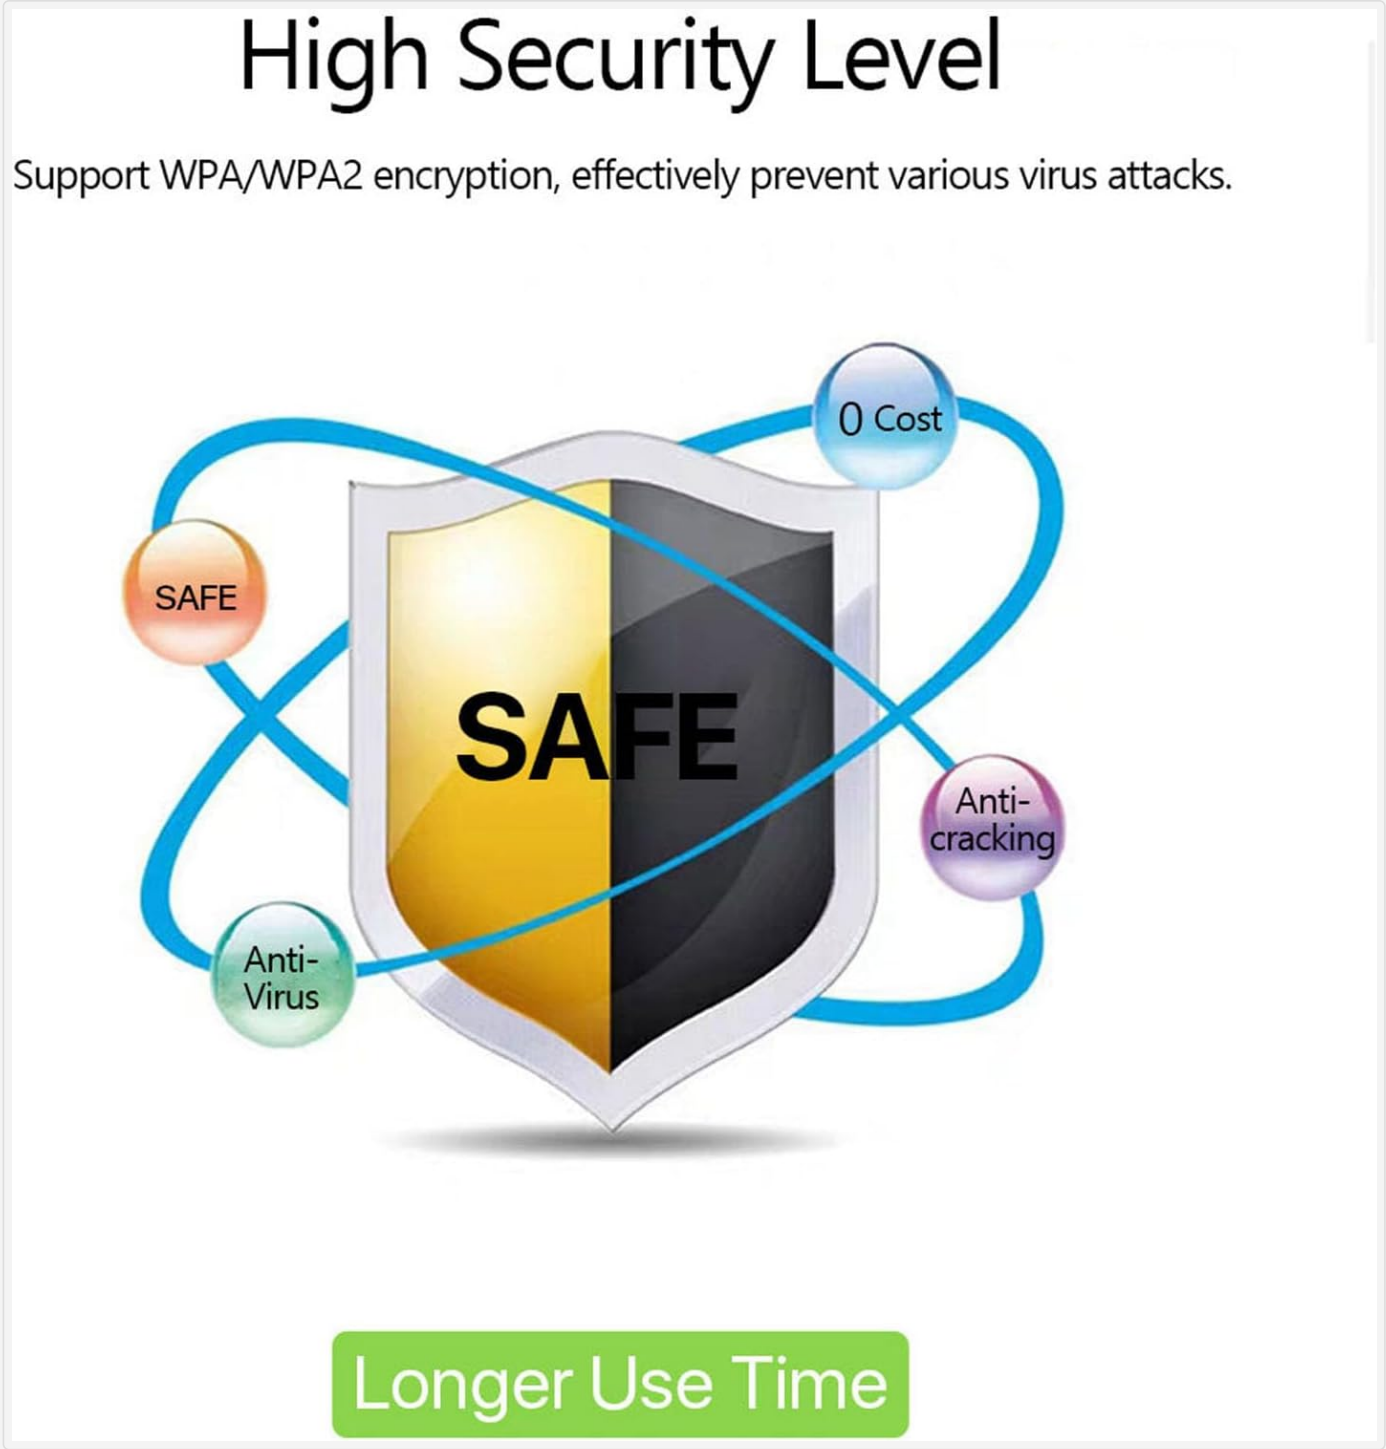

The device offers a high security level with WPA/WPA2 encryption to prevent unauthorized access and protect against threats.

7. Maintenance

To ensure the longevity and optimal performance of your GOWENIC MF68E router, please follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners or aerosols.
- **Storage:** When not in use for extended periods, store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** If storing for a long time, charge the battery to about 50% and recharge every few months to prevent deep discharge.
- **Avoid Drops:** Protect the device from physical shocks and drops.

8. Troubleshooting

If you encounter issues with your GOWENIC MF68E router, try the following solutions:

- **No Network Connection:**
  - Ensure your SIM card is active and has a data plan.
  - Check if the SIM card is inserted correctly.
  - Verify that you are within a 4G network coverage area.
  - Restart the router.
- **Cannot Connect to Wi-Fi:**
  - Ensure the router is powered on and broadcasting a Wi-Fi signal.
  - Double-check the Wi-Fi password (KEY) entered on your device.
  - Move closer to the router to improve signal strength.
  - Restart both the router and your connecting device.
- **Slow Internet Speed:**
  - Reduce the number of connected devices.
  - Check your 4G signal strength on the router's LCD.
  - Ensure your data plan has not been exhausted or throttled.

9. Specifications

Feature	Description
Model	MF68E (GOWENIC5e4f76a3q9)
Network Band	4G B1/3/7/8/20/38/40/41 (European Version)
Network Transmission Frequency	Up to 300Mbps
Wireless Standard	802.11ac
Battery Type	3000mAh (Matching)
Compatible Devices	Cell phones, Tablets, Laptops, Computers, Smart TVs
Max. Connected Devices	10
Security Encryption	WPA WPA2
Connector Type	USB, Wi-Fi
Item Dimensions	14 x 12 x 2 cm
Item Weight	139 g

10. Warranty and Support

For warranty information and technical support, please refer to the specific warranty card included with your product or contact the seller/manufacturer directly. Keep your purchase receipt as proof of purchase.

For further assistance, you may visit the GOWENIC Store online or contact their customer service.

© 2024 GOWENIC. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question