Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Canon MF652Cw

Canon Color imageCLASS MF652Cw Wireless Laser Printer User Manual

Model: MF652Cw

1. Introduction

This manual provides instructions for setting up, operating, and maintaining your Canon Color imageCLASS MF652Cw wireless laser printer. Please read this manual thoroughly before using the printer to ensure safe and correct operation.



Image: Front view of the Canon Color imageCLASS MF652Cw printer, showcasing its compact design and front-facing control panel.

2. What's in the Box

Verify that all items are present in the package:

- Canon Color imageCLASS MF652Cw Printer
- Power Cord
- Canon Genuine Toner 067 Starter Cartridges (CMY: 1250 page yield, Black: 1350 page yield)
- Documentation (User Manual, Setup Guide)

3. Setup

3.1 Initial Printer Setup

1. **Unpack the Printer:** Remove all packing materials, tapes, and protective films from the printer.

2. **Place the Printer:** Position the printer on a stable, level surface with adequate space for ventilation and paper trays.
3. **Load Paper:** Open the paper cassette and load paper. Adjust the paper guides to fit the paper size.
4. **Connect Power:** Connect the power cord to the printer and then to a wall outlet.
5. **Power On:** Press the power button to turn on the printer.

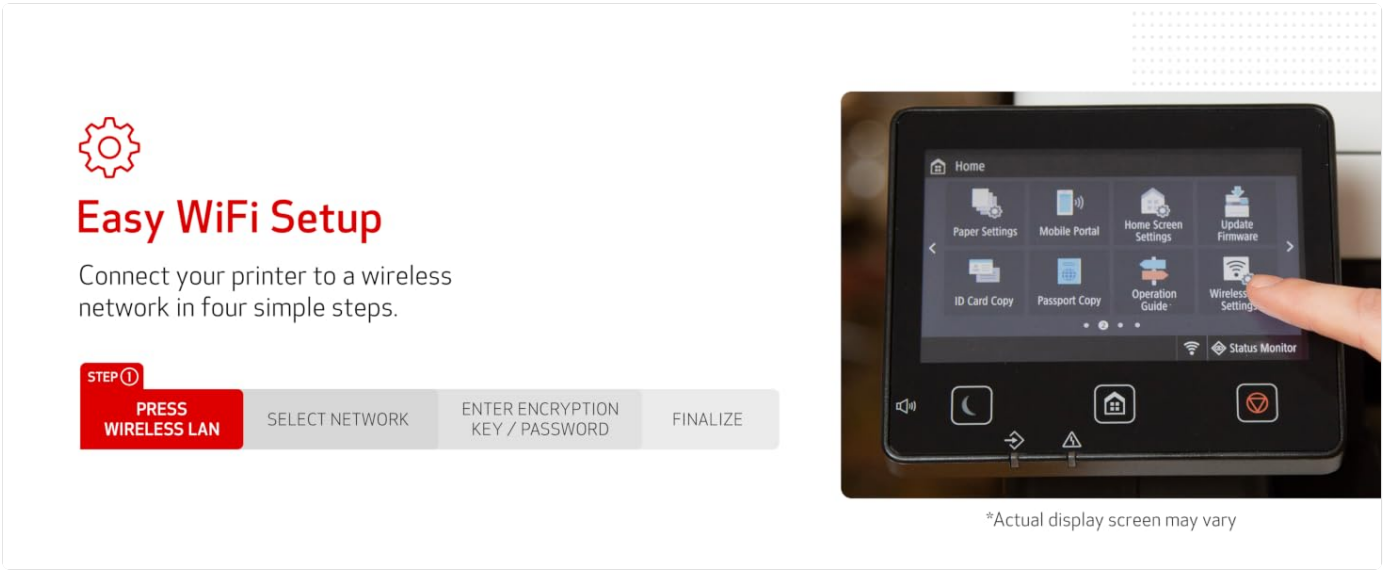


Image: Step 1 of the easy setup guide, showing the printer being unboxed and placed.

3.2 Toner Cartridge Installation

1. Open the front cover of the printer.
2. Remove the toner cartridges from their packaging.
3. Gently shake each cartridge a few times to distribute the toner evenly.
4. Insert each toner cartridge into its corresponding slot until it clicks into place. Ensure the colors match the labels.
5. Close the front cover.

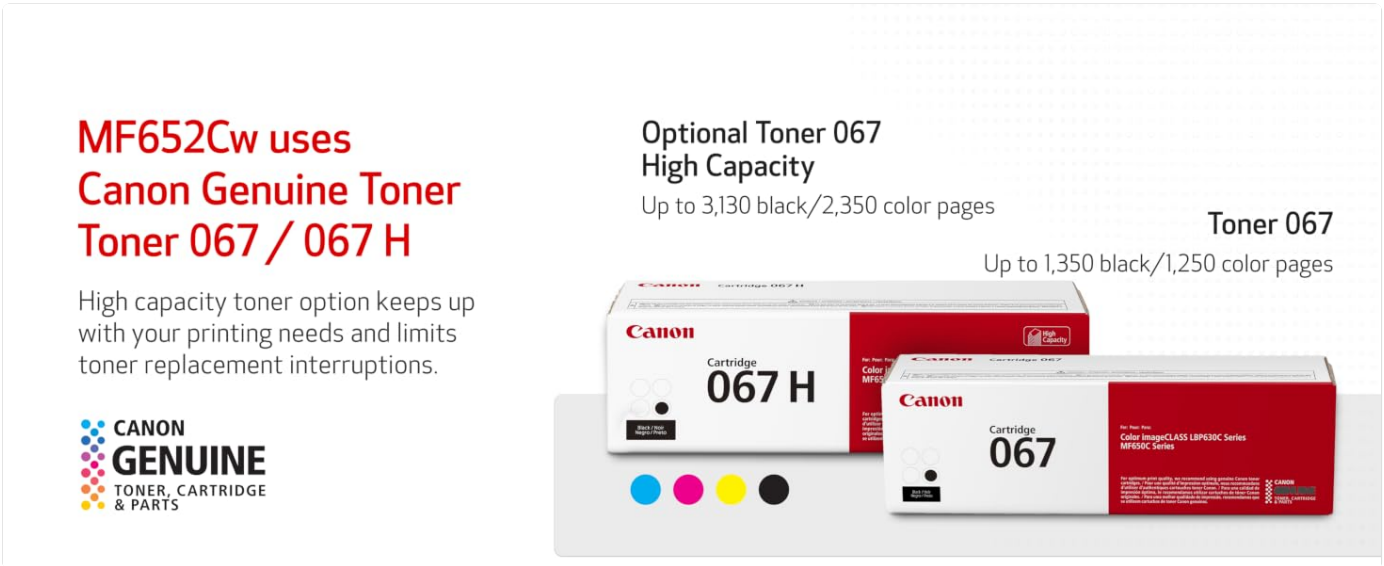


Image: A visual representation of Canon Genuine Toner 067 and 067 H cartridges, indicating their page yields.

3.3 Wi-Fi Setup

Connect your printer to a wireless network in four simple steps using the touchscreen:

1. On the printer's 5-inch color touchscreen, navigate to and press the**Wireless LAN** option.
2. Select your desired network from the list of available networks.

3. Enter the encryption key or password for your Wi-Fi network using the on-screen keyboard.
4. Finalize the connection. The printer will confirm when it is connected.

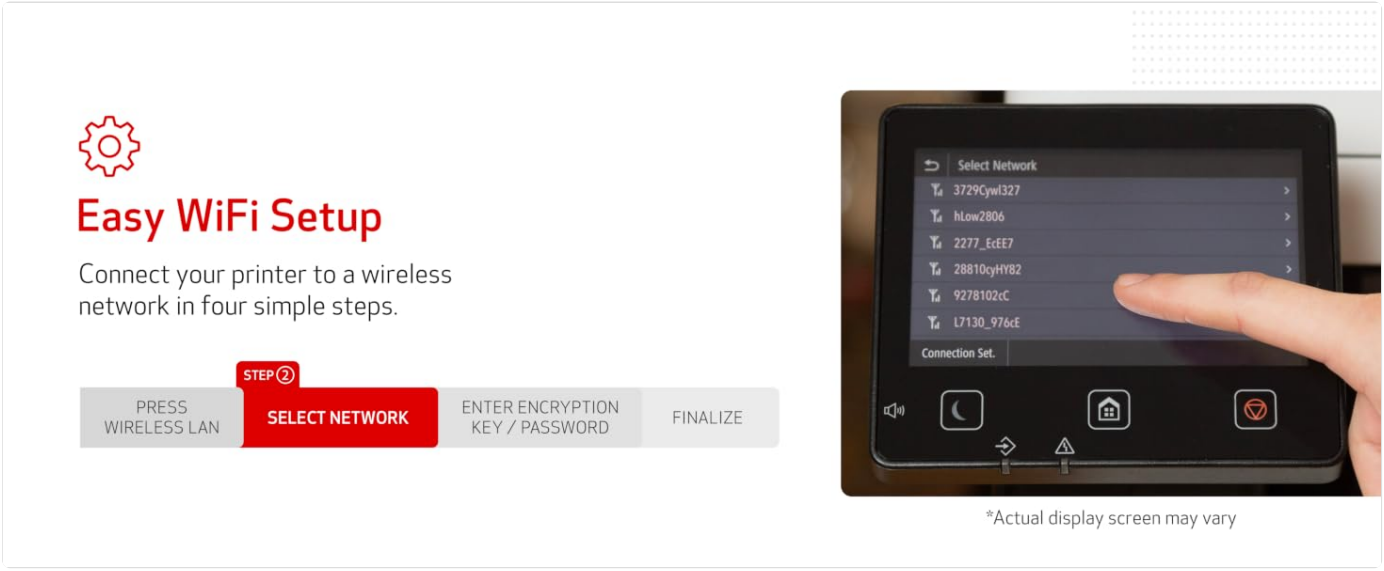


Image: Step 1 of the Wi-Fi setup process, showing the touchscreen interface to select Wireless LAN.

Image: Step 2 of the Wi-Fi setup process, showing the touchscreen interface to select the network.

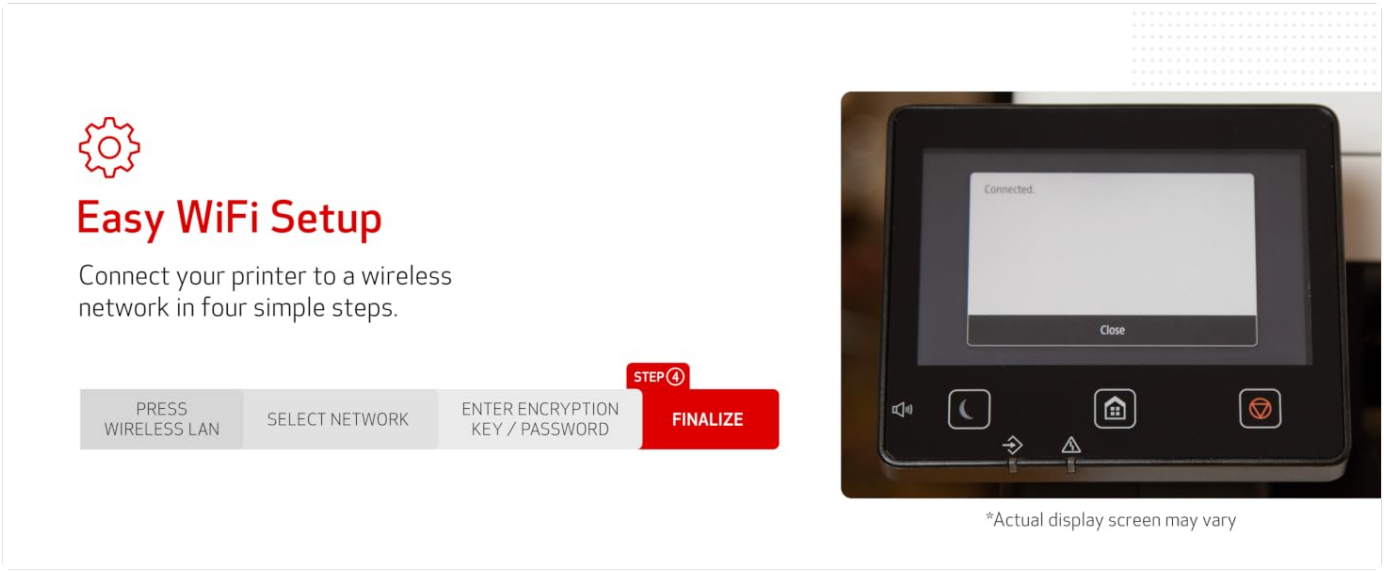


Image: Step 3 of the Wi-Fi setup process, showing the touchscreen interface to enter the encryption key/password.

For driver installation, visit the official Canon support website and download the appropriate drivers for your operating system.

4. Operating the Printer

4.1 Printing

The Canon MF652Cw offers fast printing speeds of up to 22 pages per minute for both color and black & white documents, with a first print out time of approximately 10.3 seconds.

- Ensure the printer is powered on and connected to your network or computer.
- Open the document you wish to print on your computer or mobile device.
- Select the print option from your application.

- Choose the Canon MF652Cw from the list of available printers.
- Adjust print settings (e.g., number of copies, paper size, color/grayscale) as needed.
- Click "Print".



Image: A graphic highlighting the printer's speed: approximately 22 pages per minute print speed (black/color) and approximately 10.3 seconds first-print time.

4.2 Scanning

The MF652Cw supports color scanning of documents up to 600 dpi resolution.

1. Place the document face down on the scanner glass or face up in the automatic document feeder (ADF).
2. On the printer's touchscreen, select the **Scan** option.
3. Choose your desired scan destination (e.g., computer, USB drive, email).
4. Adjust scan settings such as resolution, color mode, and file format.
5. Press **Start Scan**.

Image: A person scanning a colored document on the Canon MF652Cw, demonstrating its color scanning capability.

4.3 Copying

1. Place the document face down on the scanner glass or face up in the ADF.
2. On the printer's touchscreen, select the **Copy** option.
3. Enter the number of copies required.
4. Adjust copy settings such as zoom, density, and paper type.
5. Press **Start Copy**.

4.4 Mobile Printing

The MF652Cw supports various mobile printing solutions, including the Canon PRINT Business app, Apple AirPrint®, and Mopria™ Print Service. It is compatible with Mac, Windows, and Chromebook devices.

- **Canon PRINT Business App:** Download the app from your device's app store. Connect your mobile device to the same Wi-Fi network as the printer. Open the document in the app and select print.
- **Apple AirPrint®:** For iOS devices, ensure your device is on the same Wi-Fi network. Select the share icon in your app, then choose "Print" and select your printer.
- **Mopria™ Print Service:** For Android devices, ensure Mopria Print Service is enabled in your device settings. Select

print from your application and choose your printer.

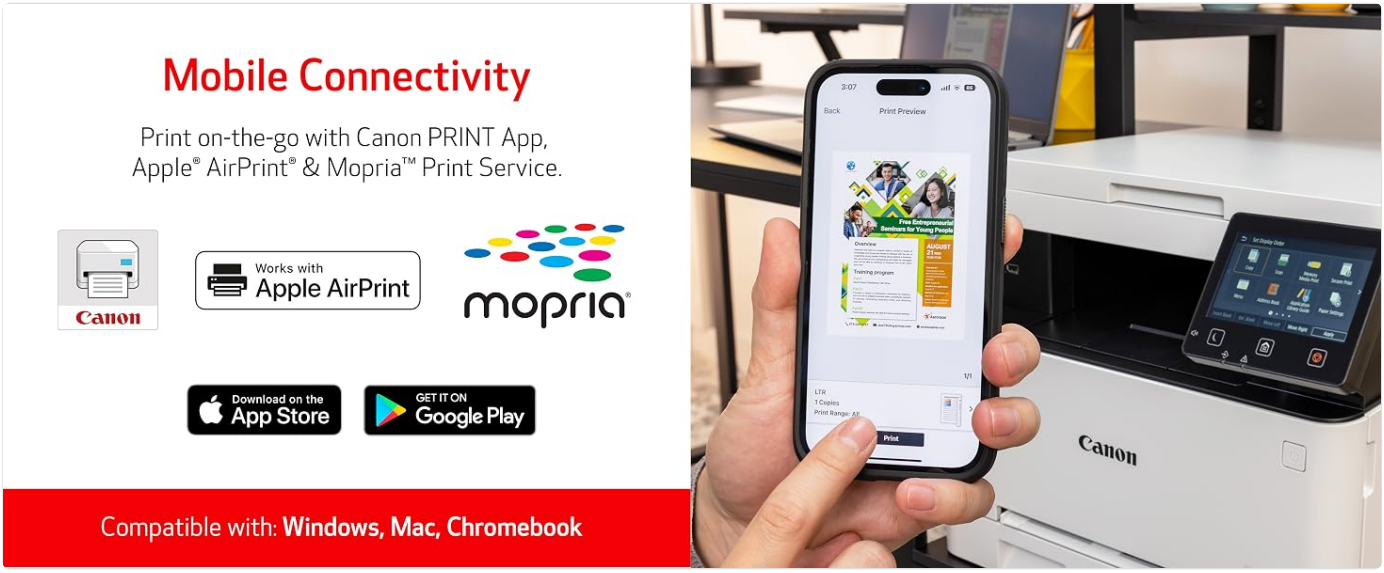


Image: A smartphone displaying a document ready for printing via the Canon PRINT Business app, with the MF652Cw printer in the background, illustrating mobile connectivity.

4.5 Using the Touchscreen

The customizable 5-inch color touchscreen allows intuitive navigation through all printer features. You can arrange icons for frequently used functions.



Image: A close-up of the Canon MF652Cw's 5-inch color touchscreen, showing various function icons and a finger interacting with the display.

5. Maintenance

5.1 Toner Cartridge Replacement

When a toner cartridge is low or empty, a message will appear on the printer's display. Replace cartridges with Canon Genuine Toner 067 or 067 H (high capacity) for optimal performance.

1. Open the front cover of the printer.
2. Carefully pull out the empty toner cartridge by its handle.
3. Unpack the new toner cartridge and gently shake it a few times.
4. Insert the new cartridge into the correct slot until it clicks into place.

5. Close the front cover.
6. Dispose of the used toner cartridge according to local regulations.

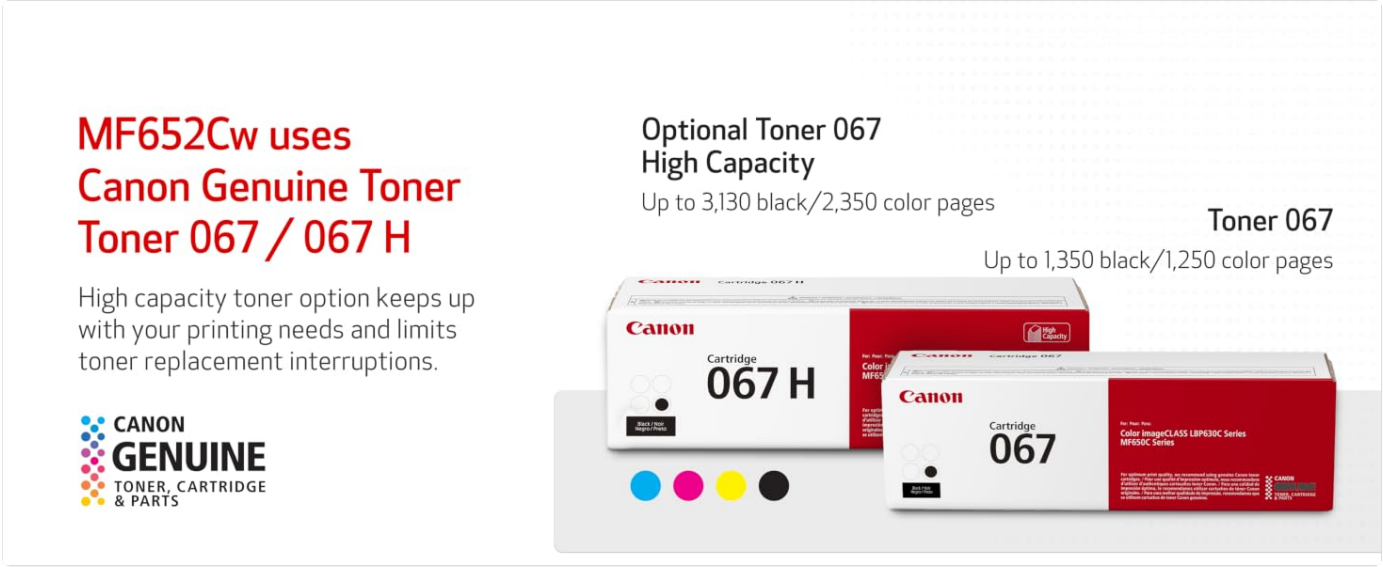


Image: A comparison of standard Toner 067 and high-capacity Toner 067 H, showing their respective page yields for black and color prints.

6. Troubleshooting

This section provides solutions to common issues. For more complex problems, refer to the full online manual or contact Canon support.

Problem	Possible Cause / Solution
Printer Not Responding	• Check power connection. • Ensure printer is powered on. • Verify network connection (Wi-Fi or Ethernet). • Restart printer and computer/device.
Paper Jams	• Remove jammed paper carefully, following on-screen instructions. • Ensure paper is loaded correctly and not overfilled. • Use recommended paper types.
Poor Print Quality	• Check toner levels and replace if low. • Ensure you are using Canon Genuine Toner. • Perform print head cleaning or calibration from printer settings. • Check paper quality and type.
Cannot Connect to Wi-Fi	• Verify Wi-Fi password. • Ensure printer is within range of the wireless router. • Restart router and printer. • Check router settings (e.g., SSID broadcast, security type).

7. Specifications

Feature	Detail
Model Name	Color imageCLASS MF652Cw
Functions	Print, Scan, Copy
Printing Technology	Laser
Print Speed (Color/Mono)	Up to 22 ppm
First Print Out Time	Approx. 10.3 seconds
Print Resolution	Up to 1200 x 1200 dpi
Scanner Type	Image Scanner
Scan Resolution	Up to 600 dpi
Connectivity	Wi-Fi, Ethernet, USB
Display	5-inch Color LCD Touchscreen
Paper Capacity	250-sheet standard cassette, 1-sheet multipurpose tray
Compatible Toner	Canon Genuine Toner 067 / 067 H
Dimensions (W x D x H)	17.8" x 18.2" x 14.2"
Weight	39.7 pounds
Model Number	5158C008
UPC	013803340853



Image: A diagram illustrating the dimensions of the Canon MF652Cw printer: 17.8" (W) x 18.2" (D) x 14.2" (H).

8. Warranty and Support

The Canon Color imageCLASS MF652Cw comes with a**3-year limited warranty**. For warranty claims or technical

assistance, please contact Canon Customer Support.
Canon Support Website: www.usa.canon.com/support
For additional resources, including drivers, software, and detailed FAQs, visit the official Canon website.

9. Product Video Overview

Your browser does not support the video tag.

Video: An official product video from Canon, USA - SOHO Group, providing an overview of the Canon Color imageCLASS MF652Cw printer's features and capabilities.

© 2024 Canon Inc. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CV56TND5

More documents and user manuals: **https://manuals.plus/**