Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

BOWERY HILL BH-4752-2756155

Bowery Hill 72" Wood Landscape Electric Fireplace TV Stand Instruction Manual

Model: BH-4752-2756155

1. Introduction

This manual provides essential information for the safe assembly, operation, and maintenance of your Bowery Hill 72" Wood Landscape Electric Fireplace TV Stand. Please read all instructions carefully before use and retain this manual for future reference.

The Bowery Hill Electric Fireplace TV Stand is designed to accommodate televisions up to 70 inches and features an integrated electric firebox. This unit offers both aesthetic appeal with realistic flame effects and functional heating for rooms up to 1000 sq ft.



Image 1.1: The Bowery Hill 72-inch Wood Landscape Electric Fireplace TV Stand, showcasing its design and integrated firebox.

2. Safety Information

Adhering to these safety guidelines is crucial for preventing electric shock, fire, injury, or property damage.

- Ensure the power outlet is 120V/60Hz and can support 1500W (12.6 Amps). Do not overload circuits.
- Do not operate the fireplace with a damaged cord or plug, or if the heater malfunctions.
- Keep combustible materials such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 meters) from the front of the heater.
- Never block air vents or exhaust openings.
- Do not insert or allow foreign objects into any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- The electric firebox includes an automatic safety shut-off feature to prevent overheating. If the unit shuts off,

unplug it, wait 10 minutes, and then plug it back in.

- Install the provided anti-topple safety device to secure the TV stand to a wall, preventing accidental tipping.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. Package Contents

Verify that all components are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- Mantel (TV Stand Frame)
- Electric Firebox with Log Set
- Remote Control
- 6-foot Power Cord with Lay-Flat Plug
- Anti-Topple Safety Device
- Decorative Hardware (Black and Gold options)
- Assembly Hardware

4. Setup and Assembly

Follow the included assembly instructions for the TV stand frame. Ensure all connections are secure before installing the electric firebox.

1. **Assemble the TV Stand Frame:** Refer to the detailed assembly guide provided with your hardware. Ensure all screws and fasteners are tightened appropriately.
2. **Install the Electric Firebox:** Carefully slide the electric firebox into the designated opening within the TV stand. Ensure it is seated correctly and secured according to the firebox's specific instructions.
3. **Attach Decorative Hardware:** Choose between the black or gold hardware options and attach them to the cabinet doors as desired.
4. **Install Anti-Topple Safety Device:** Secure the TV stand to a wall stud using the provided anti-topple safety device. This is a critical safety step to prevent the unit from tipping over.
5. **Placement:** Position the assembled unit on a flat, stable surface, ensuring adequate clearance from walls and other objects for proper ventilation.



Image 4.1: Features of the TV stand, including adjustable shelving and design elements.



Image 4.2: Overall dimensions of the Bowery Hill 72-inch Electric Fireplace TV Stand.



Image 4.3: Included black and gold hardware options for customization.

5. Operating Instructions

The electric firebox can be operated using the control panel on the unit or the included remote control.

5.1 Powering On/Off

Plug the 6-foot power cord into a standard 120V/60Hz electrical outlet. Press the power button on the control panel or remote to turn the unit on or off.

5.2 Adjusting Flame Settings

The firebox offers various flame customization options:

- **Flame Colors:** Select from 6 different flame colors: Orange, Red-Orange, White, Blue, Blue-White, or Multicolor.
- **Flame Brightness:** Adjust the intensity of the flames with 5 brightness levels.

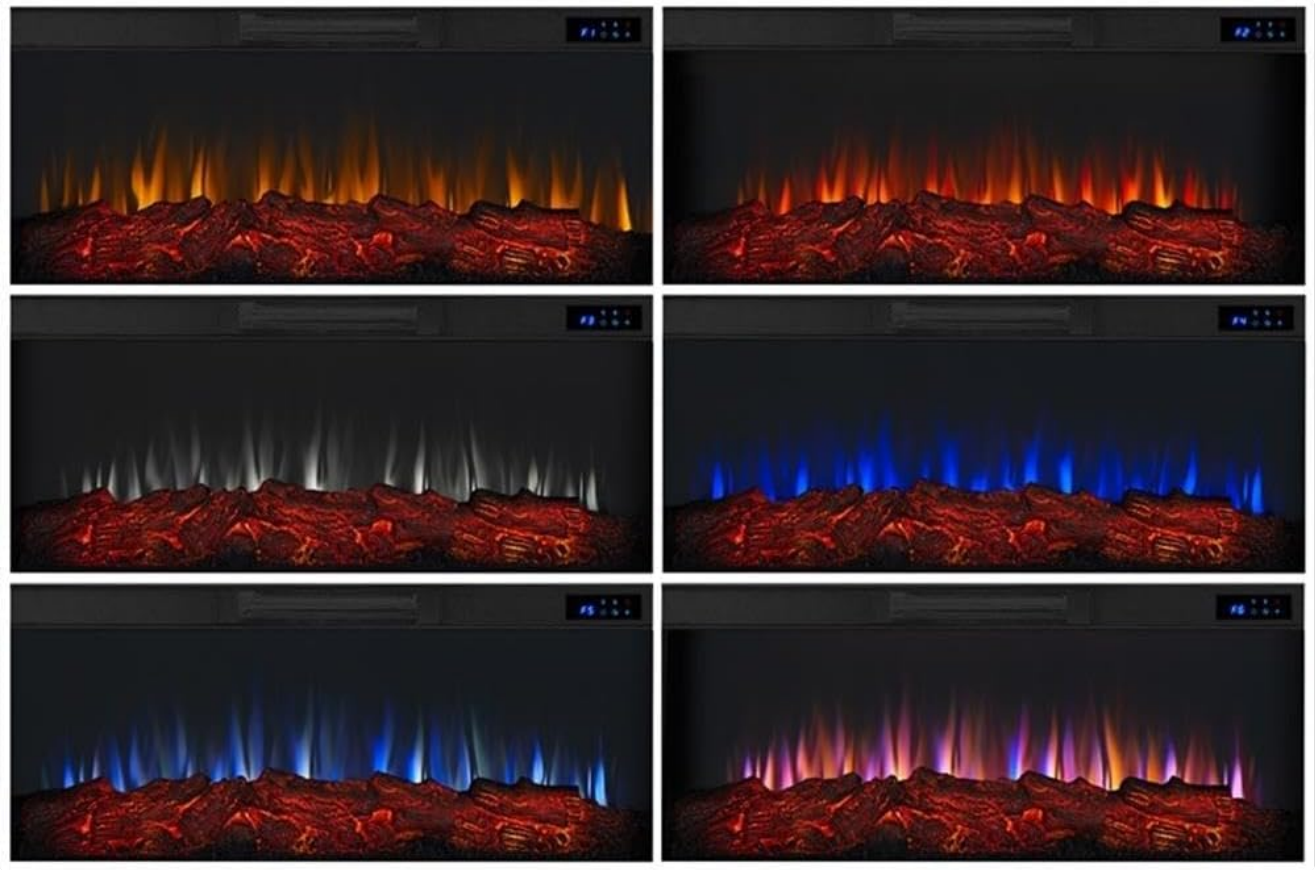


Image 5.1: Various flame color options available for the electric firebox.

5.3 Heat Function

The electric firebox provides supplemental heat for rooms up to 1000 sq ft.

- **Thermostat Settings:** Choose from 6 adjustable thermostat settings: 71, 75, 78, 82, 86, 99°F (22, 24, 26, 28, 30, 60°C). The heater will automatically turn off once the desired temperature is reached.
- **Heat-Off Option:** The heat function can be turned off independently, allowing you to enjoy the flame effects without heat year-round.

5.4 Timer Function

Set the operational duration using the timer function, with settings ranging from 10 minutes to 9 hours.

5.5 Remote Control

The included remote control allows for convenient adjustment of all firebox functions from a distance.



Image 5.2: The remote control for operating the electric firebox.

6. Maintenance

Regular maintenance ensures the longevity and optimal performance of your electric fireplace TV stand.

- **Cleaning:** Dust the exterior surfaces with a soft, dry cloth. For stubborn marks, use a slightly damp cloth and mild detergent, then wipe dry immediately. Do not use abrasive cleaners or solvents.
- **Firebox Cleaning:** Ensure the unit is unplugged and cool before cleaning the glass panel. Use a soft cloth and glass cleaner specifically designed for fireplaces.
- **Ventilation:** Periodically check that the air intake and exhaust vents on the firebox are clear of dust and debris to ensure proper airflow.
- **Power Cord:** Inspect the power cord regularly for any signs of damage. If damaged, discontinue use and contact customer support.

7. Troubleshooting

If you encounter issues with your electric fireplace TV stand, refer to the following common solutions:

- **Unit does not turn on:**

- Ensure the power cord is securely plugged into a working 120V outlet.
- Check the circuit breaker for your home.
- If the unit has overheated, the automatic safety shut-off may have activated. Unplug the unit, wait 10 minutes, and then plug it back in.

- **Remote control not working:**
  - Replace the batteries in the remote control.
  - Ensure there are no obstructions between the remote and the firebox's receiver.
- **No heat output:**
  - Verify that the heat function is enabled and the thermostat is set to a temperature higher than the current room temperature.
  - Check for any obstructions in the heater's air vents.
- **Flames are not visible or flickering:**
  - Ensure the flame effect is turned on and brightness is adjusted.
  - If the issue persists, contact customer support.

For issues not covered here, please contact Bowery Hill customer support.

8. Specifications

Feature	Specification
Model Number	BH-4752-2756155
Product Dimensions (Overall)	72" W x 18" D x 29" H
Firebox Dimensions	39" L x 5.75" W x 18.25" H
Interior Storage Dimensions	13" L x 17" W x 19.75" H (each side)
Product Weight	144 lbs
Firebox Weight	42 lbs
Materials	Solid wood veneered MDF, glass, powder coated steel
Finish	Vintage Black Maple
Voltage	120V/60Hz
Wattage	1500W
Amperage	12.6 Amps
Heat Output	5100 BTUs

Feature	Specification
Heating Area	Up to 1000 sq ft
TV Accommodation	Up to 70" TV, supports up to 100 lbs
Thermostat Settings	6 levels (71, 75, 78, 82, 86, 99°F / 22, 24, 26, 28, 30, 60°C)
Flame Brightness Levels	5 levels
Flame Colors	6 options (Orange, Red-Orange, White, Blue, Blue-White, Multicolor)
Timer Settings	10 minutes to 9 hours
Safety Features	Automatic safety shut-off, Anti-topple safety device

9. Warranty and Support

For warranty information or technical support, please contact Bowery Hill customer service. Keep your purchase receipt and model number (BH-4752-2756155) readily available when contacting support.

Contact information can typically be found on the manufacturer's website or your purchase documentation.

© 2024 Bowery Hill. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CVKM1866

More documents and user manuals: **https://manuals.plus/**