Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Devoko 0358

Devoko 3x3m Pop-up Folding Garden Gazebo Instruction Manual

Model: 0358

1. Introduction

Thank you for choosing the Devoko 3x3m Pop-up Folding Garden Gazebo. This product is designed to provide convenient and effective shelter for various outdoor activities. Its pop-up design ensures quick setup and portability, making it ideal for events, camping, picnics, and commercial use. This manual provides essential information for the safe assembly, operation, and maintenance of your gazebo.

The gazebo features a durable, waterproof, and UV-protective polyester fabric (UPF 50+) and a robust aluminum frame, ensuring comfort and protection from sun and rain.

2. Safety Information

Please read and understand all safety instructions before assembling or using the gazebo. Failure to follow these instructions may result in injury or damage to the product.

- **Assembly:** Always assemble the gazebo with at least two people. Ensure all parts are correctly connected and secured before use.
- **Wind Conditions:** This gazebo is designed for temporary use. Do not use in strong winds, heavy rain, or snow. High winds can cause the gazebo to lift or collapse, leading to damage or injury. Always use the provided sandbags, ropes, and ground stakes to secure the gazebo.
- **Anchoring:** Ensure the gazebo is properly anchored to the ground using all provided stakes and ropes. For additional stability, fill the included sandbags and place them at the base of each leg.
- **Fire Safety:** Keep all flame and heat sources away from the gazebo fabric. The fabric is not fireproof.
- **Overhead Clearance:** Be aware of overhead power lines, tree branches, and other obstructions when selecting an assembly location.
- **Disassembly:** Disassemble the gazebo carefully, ensuring no parts are forced or bent.

3. Package Contents

Verify that all components are present before beginning assembly:

- 1x Gazebo Frame (pre-assembled pop-up mechanism)
- 1x Gazebo Canopy Fabric (Waterproof and Anti-UV)

- 1x Carry Bag
- 4x Sandbags (for weighting down the legs)
- 4x Ropes (for additional anchoring)
- 8x Ground Stakes (for securing the legs and ropes)

4. Setup Instructions

The Devoko Pop-up Gazebo is designed for quick and easy assembly, typically taking less than 10 minutes with two people.

1. **Unpack the Frame:** Remove the folded gazebo frame from the carry bag and place it in the desired setup location.
2. **Partially Expand the Frame:** With a person at each end, gently pull the frame outwards until it is partially expanded. Do not fully extend yet.
3. **Attach the Canopy:** Drape the canopy fabric over the partially expanded frame. Secure the corners of the canopy to the frame's corner posts. Ensure the canopy is centered and evenly distributed.
4. **Fully Expand the Frame:** Continue to pull the frame outwards until it is fully extended. The push-button mechanism on the legs will click into place, locking the frame at its lowest height setting.
5. **Adjust Height (Optional):** Locate the push-button on each leg. Press the button and carefully lift the leg to extend it to one of the three available height settings. Ensure all four legs are set to the same height.
6. **Secure the Gazebo:**
    - **Ground Stakes:** Use the provided ground stakes to secure each leg to the ground.
    - **Ropes:** Attach the ropes to the designated loops on the canopy corners and stake them into the ground at an angle for added stability.
    - **Sandbags:** Fill the sandbags with sand or other heavy material and attach them to the bottom of each leg for extra weight and stability.

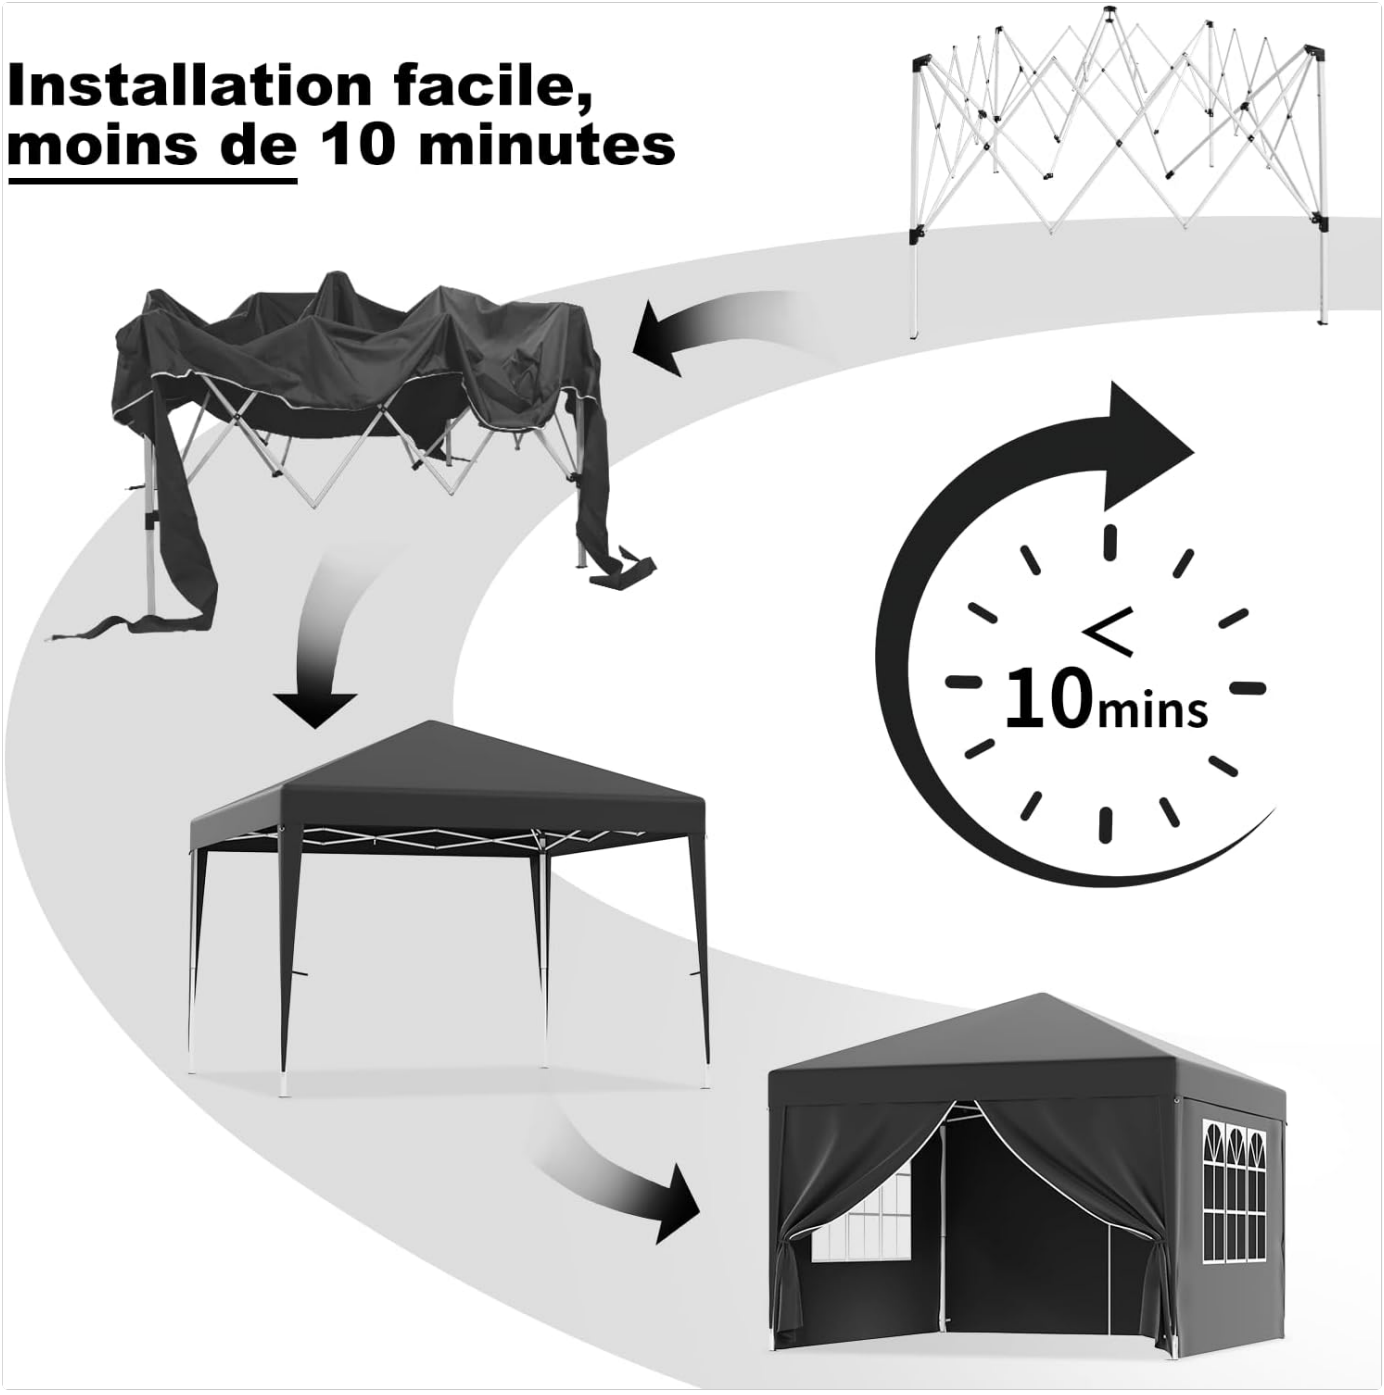


Image: Visual guide for the easy 10-minute setup process.



Image: Detail of the push-button mechanism for easy installation and height adjustment, and included fixing stakes.

5. Operating Instructions

Once assembled and secured, your Devoko gazebo is ready for use. It provides a spacious shaded area and protection from light rain.

- **Sun Protection:** The canopy fabric offers UPF 50+ UV protection, creating a comfortable shaded area.
- **Water Resistance:** The waterproof polyester fabric provides protection against light rain. In heavy rain, water may accumulate, and it is recommended to take down the gazebo.
- **Height Adjustment:** The gazebo offers three adjustable height settings (1.75m, 1.86m, 1.95m to the eaves, with a peak height of 2.7m). Adjust the height by pressing the push-buttons on each leg and extending or retracting the leg sections. Ensure all legs are at the same height for stability.
- **Ventilation:** The double-roof design promotes optimal air circulation, helping to keep the interior cooler.



Image: Gazebo showcasing its Anti-UV and Waterproof features.



Image: Dimensions and three adjustable height positions of the gazebo.

6. Maintenance

Proper maintenance will extend the life of your Devoko gazebo.

- **Cleaning:** Clean the canopy fabric with mild soap and water. Do not use harsh chemicals or abrasive cleaners, as these can damage the fabric's waterproof and UV-protective coating. Rinse thoroughly and allow to air dry completely before folding and storing.
- **Frame Care:** Wipe the aluminum frame with a damp cloth to remove dirt and debris. Inspect the frame for any signs of damage or corrosion.
- **Storage:** Ensure the gazebo is completely dry before folding and storing it in the carry bag. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Regularly inspect all components, including the frame, canopy, ropes, and stakes, for wear and tear. Replace any damaged parts immediately.

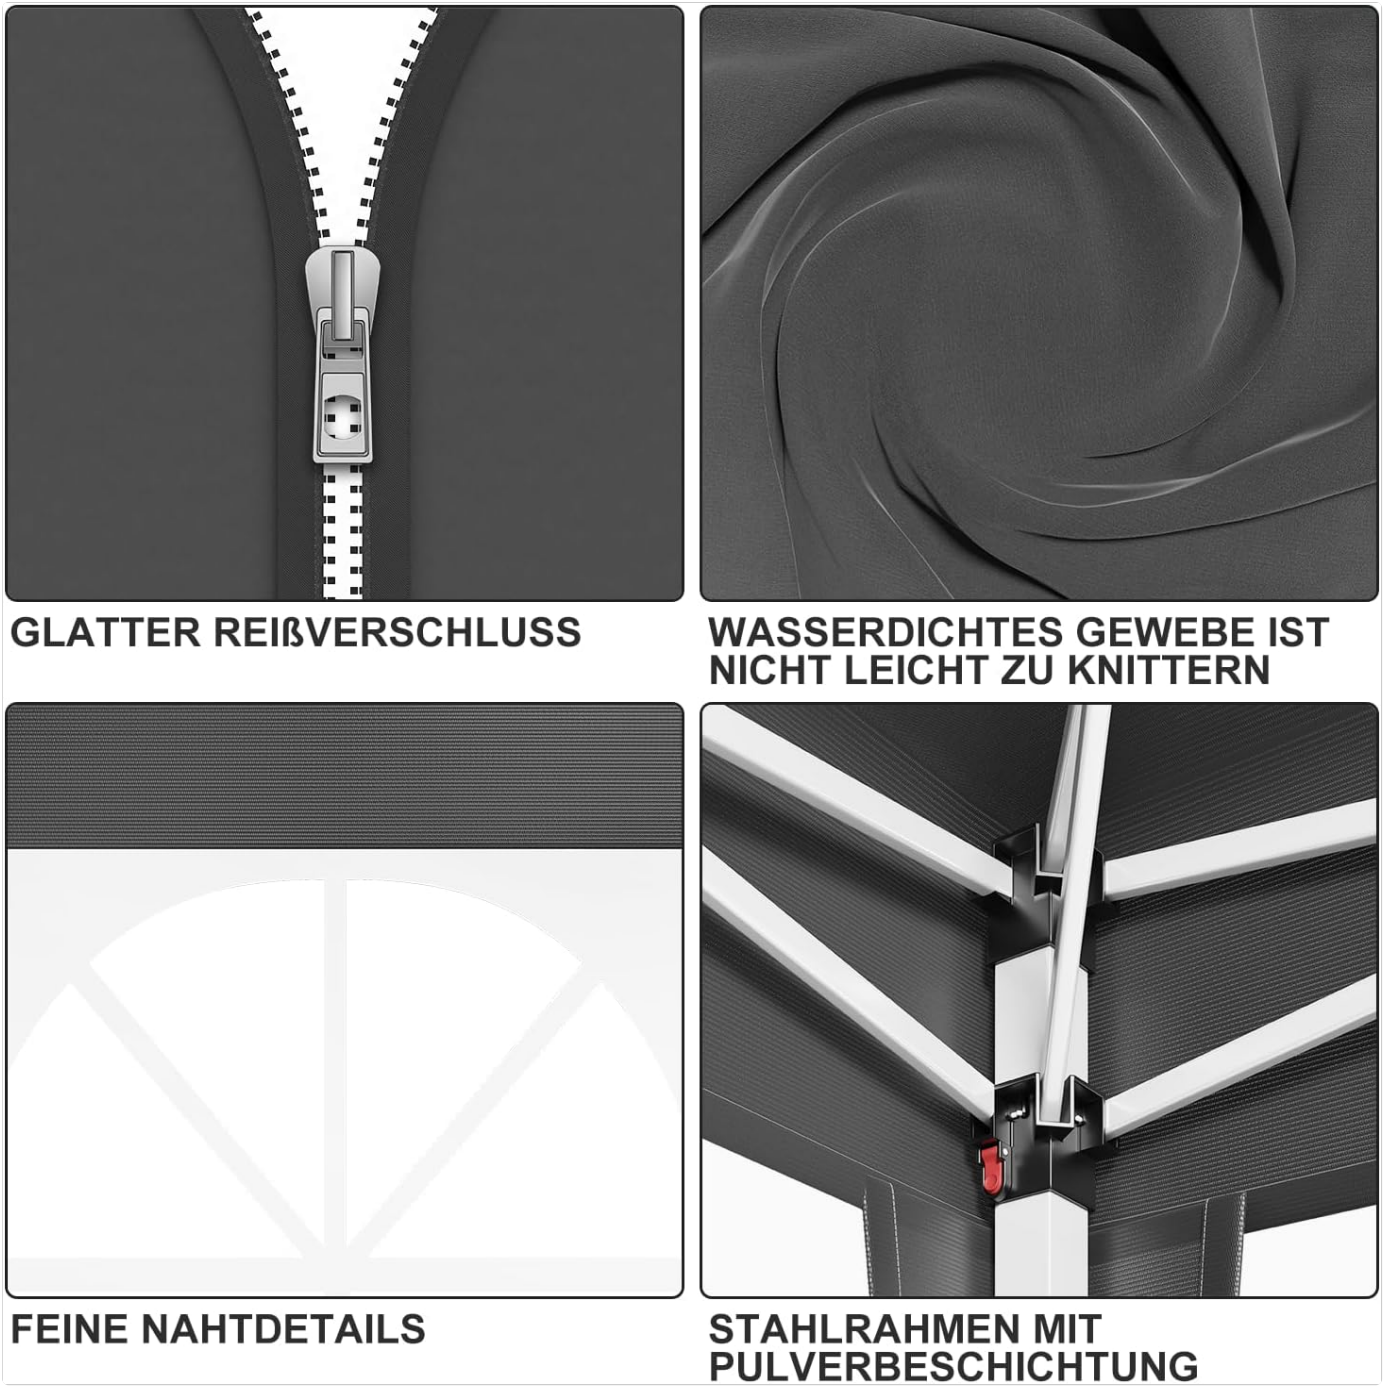


Image: Details of the gazebo's construction, including fine seams and waterproof fabric.

7. Troubleshooting

Here are some common issues and their solutions:

- **Gazebo is unstable in wind:** Ensure all ground stakes, ropes, and sandbags are properly utilized and secured. In strong winds, it is recommended to disassemble the gazebo to prevent damage.
- **Difficulty expanding/collapsing the frame:** Ensure no parts are obstructed or bent. Apply gentle, even pressure. If a push-button mechanism is stuck, check for debris or misalignment. Do not force the frame.
- **Water pooling on the canopy:** While the canopy is waterproof, prolonged heavy rain can cause water to pool. This indicates the need to either adjust the canopy tension or, in severe weather, to take down the gazebo.
- **Damaged frame or connectors:** If any part of the frame or connectors appears bent or broken, discontinue use and contact customer support for replacement parts. Continued use with damaged components can be unsafe.

8. Specifications

Feature	Detail
Product Dimensions (L x W x H)	300 x 300 x 270 cm (2.7L x 3W x 2.7H meters)
Model Number	0358
Brand	Devoko
Color	Dark Grey
Recommended Uses	Outdoor events, camping, commercial use
Frame Material	Aluminum (Powder-coated metal poles)
Water Resistance Level	Waterproof
Canopy Material	Polyester (Waterproof, Anti-UV UPF 50+)
Number of Guy Ropes	4
Number of Ground Stakes	8
Adjustable Heights	3 positions (e.g., 1.75m, 1.86m, 1.95m to eaves)

9. Warranty and Support

For warranty information or technical support, please refer to the retailer where you purchased this product or visit the official Devoko website. Keep your purchase receipt as proof of purchase.

If you encounter any issues not covered in this manual, please contact customer service for assistance.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CVVLX4SK

More documents and user manuals: **https://manuals.plus/**