ALLIMITY RC4870

ALLIMITY RC4870 Remote Control User Manual

Replacement Remote Control for Telefunken LED TVs

1. Product Overview

The ALLIMITY RC4870 is a replacement infrared remote control designed for various Telefunken LED TV models. This remote offers full functionality without requiring any programming or complex setup, providing a direct replacement for your original remote.





Figure 1: Front view of the ALLIMITY RC4870 Remote Control.

Key Features:

- **Easy to Use:** No programming or installation required.
- **Fully Functional:** Designed to cover all functions of the original remote control.
- **Ergonomic Design:** Lightweight and easy to grip, offering stable performance.
- **Wide Compatibility:** Compatible with numerous Telefunken LED TV models (refer to the compatibility list in Section 6).

2. Setup and Battery Installation

The ALLIMITY RC4870 remote control is designed for immediate use with compatible Telefunken LED TVs. No complex pairing or programming is necessary. Simply install the batteries to begin operation.

Battery Installation:

1. **Open the Battery Compartment:** Locate the battery compartment cover on the back of the remote control. Slide the cover downwards or press the latch to open it.

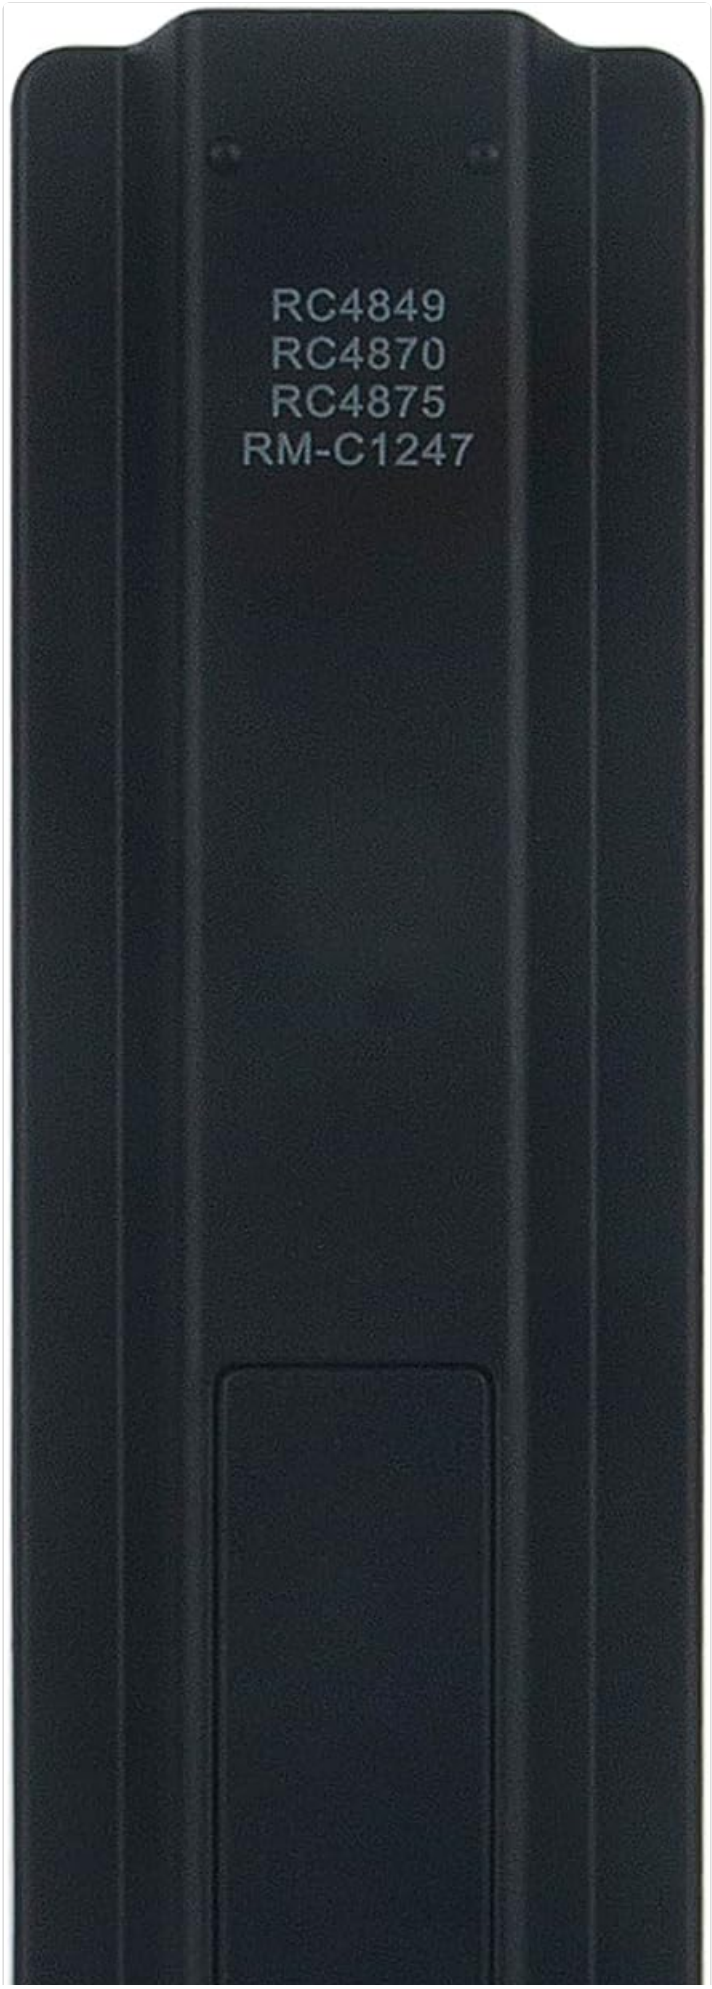




Figure 2: Back view of the remote control with the battery compartment.

2. **Insert Batteries:** Insert two AAA alkaline batteries (not included) into the compartment. Ensure the positive (+) and negative (-) terminals of the batteries align correctly with the markings inside the compartment.
3. **Close the Compartment:** Slide the battery compartment cover back into place until it clicks securely.

Note:

- Always use new batteries of the same type.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.

3. Operating Instructions

This section outlines the basic functions of the ALLIMITY RC4870 remote control. Refer to your Telefunken TV's user manual for specific TV functions.



Figure 3: Angled view of the remote control, highlighting button layout.

Button Functions:

Button	Function
Power (Red Button)	Turns the TV on or off (standby mode).
Number Keys (0-9)	Direct channel selection.
TV Button	Switches to TV mode.
Volume Up/Down (V+/V-)	Adjusts the audio volume.
Mute	Mutes or unmutes the TV sound.
Channel Up/Down (P+/P-)	Changes the TV channel.
MENU	Accesses the TV's main menu.
OK / Navigation Arrows	Navigates through menus and confirms selections.
BACK	Returns to the previous menu or screen.
EXIT	Exits the current menu or function.

Button	Function
Info (i)	Displays program information.
Colored Buttons (Red, Green, Yellow, Blue)	Functions vary depending on the TV model and current menu/application.
LANG.	Changes audio language or subtitle options.
Media Control Buttons (Rewind, Play/Pause, Fast Forward, Stop)	Controls media playback (e.g., USB content, PVR).

4. Maintenance and Care

Proper maintenance ensures the longevity and optimal performance of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's range decreases or it becomes unresponsive. Always replace both batteries simultaneously.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Damage:** Do not drop the remote control or expose it to liquids.

5. Troubleshooting

If you encounter issues with your ALLIMITY RC4870 remote control, try the following troubleshooting steps:

1. **Remote Not Responding:**
    - Check if the batteries are inserted correctly with the correct polarity (+/-).
    - Replace the batteries with new ones.
    - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
    - Point the remote directly at the TV's IR sensor.
2. **Limited Range:**
    - Replace the batteries. Weak batteries can reduce the remote's effective range.
    - Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the IR signal.
3. **Specific Buttons Not Working:**
    - Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris that might be preventing proper contact.
    - If only certain buttons are unresponsive after trying new batteries and cleaning, the remote may be faulty and require replacement.

6. Specifications

Feature	Detail
Brand	ALLIMITY

Feature	Detail
Model Name	RC4870
Connectivity Technology	Infrared (IR)
Special Features	Ergonomic, Lightweight
Battery Type	2 x AAA Alkaline (not included)
Product Dimensions	17 x 5 x 1 cm
Item Weight	59 Grams
Maximum Range	10 Meters
Compatible Devices	Telefunken LED TV models including T22FX182LP, D32F197A3C, D32H182C3C, D39F182C3C, D40F127Q3C, D42F182N3C, DLED42137FHD, L32H127N2, L24H125A3D, L42F242B3C, L42F242N3C, and many others. A full list is available in the product description.

7. Warranty and Support

This ALLIMITY remote control is designed for reliability and durability. For specific warranty information, please refer to the retailer or the original purchase documentation. If you require further assistance or have questions regarding compatibility, please contact the seller or ALLIMITY customer support.
For a comprehensive list of compatible Telefunken TV models, please refer to the product listing where this remote control was purchased.

© 2025 ALLIMITY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question