Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

oneisall BM3

oneisall Dog Grooming Vacuum BM3 Instruction Manual

Model: BM3

1. Introduction

Thank you for choosing the oneisall Dog Grooming Vacuum. This all-in-one pet grooming kit is designed to simplify pet grooming at home by effectively collecting pet hair and dust, ensuring a clean and comfortable experience for both you and your pet. With powerful suction, a large dust cup, and a variety of grooming tools, the BM3 system helps maintain your pet's coat health while minimizing mess.

Please read this manual thoroughly before first use to ensure proper operation, maintenance, and safety.

2. Safety Information

To reduce the risk of fire, electric shock, or injury, please observe the following safety precautions:

- Always unplug the appliance from the power outlet when not in use and before cleaning.
- Do not operate the appliance with a damaged cord or plug.
- Keep the appliance and its cord away from heated surfaces.
- Do not allow children to operate the appliance. Close supervision is necessary when used near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not handle the plug or appliance with wet hands.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Ensure the dust cup and filters are properly installed before operation.
- The operating voltage of this product is 120V. Ensure your power supply matches this requirement.

3. Product Overview & Components

The oneisall BM3 Dog Grooming Vacuum system includes a main vacuum unit and a comprehensive set of grooming tools designed for various pet care needs.



Figure 3.1: Overview of the oneisall Dog Grooming Vacuum BM3 and its included accessories.

Included Components:

- **Main Vacuum Unit:** The core unit with a 3L dust cup and powerful 13000Pa suction.
- **Grooming Brush:** Used for daily grooming and de-shedding, collecting loose hair directly into the vacuum.
- **DeShedding Brush:** Specifically designed to remove undercoat and loose hair, reducing shedding.
- **Wireless Dog Clippers:** Cordless and rechargeable clippers for precise trimming and cutting.
- **6 Guard Combs:** Adjustable comb attachments (3MM, 6MM, 9MM, 12MM, 18MM, 24MM) for varying hair lengths.
- **Long Nozzle:** For cleaning pet hair from hard-to-reach areas, corners, and crevices.
- **Cleaning Roller:** Ideal for removing pet hair from furniture, carpets, and clothing.

- **Storage Bag:** Conveniently stores all accessories when not in use.
- **Hose:** 5-foot flexible hose connecting tools to the vacuum unit.
- **Power Cord:** 7.8-foot power cord for the main vacuum unit.



Figure 3.2: The complete set of 7 grooming tools for comprehensive pet care.

4. Setup Instructions

Follow these steps for initial setup of your oneisall Dog Grooming Vacuum:

1. **Unpack Components:** Carefully remove all components from the packaging. Verify that all listed items in Section 3 are present.
2. **Position the Main Unit:** Place the main vacuum unit on a stable, flat surface. Ensure it is within reach of a 120V power outlet. The 5-foot hose and 7.8-foot power cord provide flexibility for placement.
3. **Connect the Hose:** Insert one end of the flexible hose firmly into the suction port on the main vacuum unit until it clicks into place.
4. **Attach Desired Tool:** Select the appropriate grooming tool (e.g., Grooming Brush, Clippers) and attach it to the other end of the hose. Ensure a secure connection.
5. **Charge Clippers (if applicable):** If using the Wireless Dog Clippers for the first time, ensure they are fully charged. Connect the clipper charging cable to a USB power source. The battery indicator lights on the clippers will show charging status.
6. **Plug In:** Plug the main vacuum unit's power cord into a 120V electrical outlet.



Figure 4.1: The generous hose and power cord lengths allow for flexible grooming positions.

5. Operating Instructions

The oneisall Dog Grooming Vacuum is designed for ease of use. Familiarize your pet with the device gradually, especially with the noise level.

5.1 Powering On and Adjusting Suction

1. Press the power button on the main unit to turn it on.
2. The unit features three suction levels. Press the suction adjustment button to cycle through the levels (Low, Medium, High). Start with the lowest suction level to help your pet get accustomed to the sound and sensation.



Figure 5.1: The low noise design (below 60dB) helps prevent startling your pet during grooming.

5.2 Using Grooming Tools

Each tool is designed for a specific purpose:

- **Grooming Brush & DeShedding Brush:** Gently brush your pet's coat in the direction of hair growth. The vacuum will automatically collect loose hair, preventing it from scattering.



Figure 5.2: The grooming brush effectively collects hair directly into the vacuum.

- **Wireless Dog Clippers:** Attach the desired guard comb (3MM, 6MM, 9MM, 12MM, 18MM, or 24MM) to the clippers. Ensure the clippers are charged. Guide the clippers smoothly through your pet's hair. The vacuum suction will pull the cut hair into the dust cup.



Figure 5.3: The cordless clippers with 6 guard combs allow for versatile trimming.

- **Long Nozzle & Cleaning Roller:** These tools are for cleaning up stray pet hair from surfaces. Use the long nozzle for tight spaces and the cleaning roller for broader areas like sofas and floors.



Figure 5.4: The long nozzle is effective for cleaning fallen hair from various surfaces.

6. Maintenance

Regular maintenance ensures optimal performance and longevity of your grooming vacuum.

6.1 Emptying the Dust Cup

The 3L dust cup is designed for extended use, but should be emptied regularly, especially when full, to maintain strong suction.

1. Turn off and unplug the main vacuum unit.
2. Detach the dust cup from the main unit.
3. Open the dust cup and dispose of the collected pet hair and debris into a trash bin.
4. Close the dust cup securely and reattach it to the main unit.

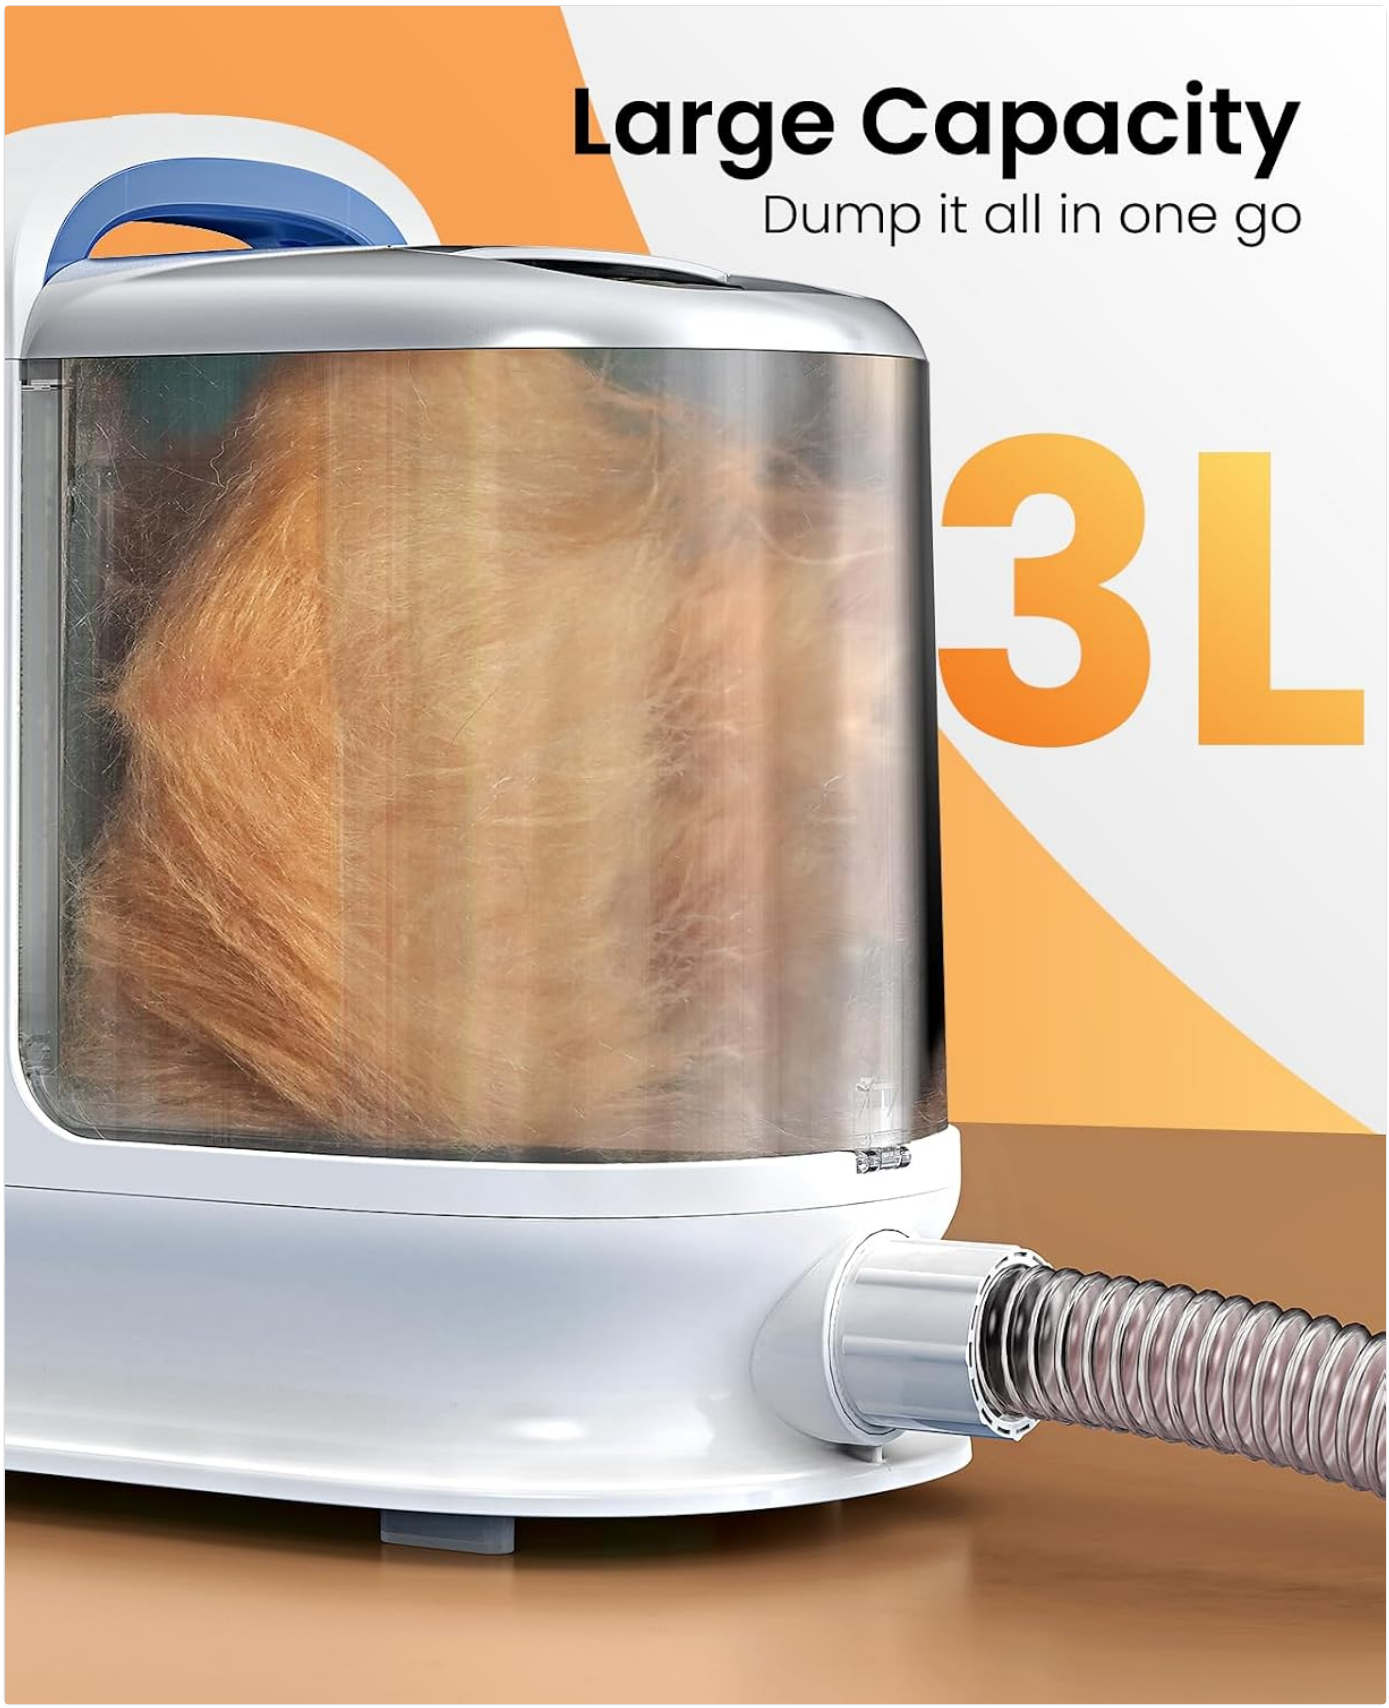


Figure 6.1: The large 3L dust cup minimizes the frequency of emptying during grooming sessions.

6.2 Cleaning Filters

The unit uses a HEPA filter. Clean the filters regularly to prevent clogging and maintain suction efficiency.

1. Remove the dust cup.
2. Locate and remove the HEPA filter and any pre-filters.
3. Tap the filters gently over a trash can to remove loose dust and hair.
4. If necessary, rinse the filters under cool running water. Ensure they are completely dry before reinserting them into the unit. Do not use detergents or hot water.
5. Reassemble the filters and dust cup.

6.3 Cleaning Grooming Tools

After each use, clean the grooming tools to ensure hygiene and performance.

- **Brushes:** Remove any tangled hair from the bristles. You can use the cleaning roller or a small brush to clear debris.
- **Clippers:** Use the included cleaning brush to remove hair from the clipper blades. For thorough cleaning, detach the blade head and rinse it under water if it is designed to be washable (refer to clipper-specific instructions). Ensure blades are dry before reattaching.
- **Hose & Nozzles:** Check for any blockages in the hose or nozzles and clear them if found. Wipe down surfaces with a damp cloth.

7. Troubleshooting

If you encounter issues with your oneisall Dog Grooming Vacuum, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Unit not plugged in; Power outlet malfunction; Power button not pressed.	Ensure power cord is securely plugged into a working 120V outlet. Press the power button.
Low suction power	Dust cup full; Filters clogged; Hose or tool blocked; Improperly assembled dust cup.	Empty dust cup. Clean filters. Check hose and tools for blockages. Ensure dust cup is securely attached.
Clippers not cutting effectively	Blades dull or dirty; Clippers not charged; Hair matted.	Clean clipper blades. Charge clippers fully. Brush pet's hair to remove mats before clipping.
Unusual noise	Blockage in hose or unit; Motor issue.	Check for and remove any blockages. If noise persists, contact customer support.
Hair not collected by vacuum	Low suction setting; Tool not properly attached; Blockage.	Increase suction level. Ensure tool is firmly attached to the hose. Check for blockages.

If the problem persists after attempting these solutions, please contact oneisall customer support for assistance.

8. Specifications

Feature	Detail
Brand	oneisall
Model Name	BM3
Suction Power	13000Pa
Dust Cup Capacity	3 Liters
Noise Level	Below 60 dB
Suction Levels	3
Filter Type	HEPA Filter
Hose Length	5 Feet
Power Cord Length	7.8 Feet
Operating Voltage	120V
Product Dimensions (L x W x H)	17" x 13" x 7.9"
Item Weight	11.03 pounds
Clipper Battery Type	Lithium or Lithium-Ion (Rechargeable)
Recommended Use	Dog Grooming, Dog Hair Clippers, Dog Shedding

9. Warranty and Support

oneisall is committed to providing high-quality products and excellent customer service.

9.1 Warranty Information

Your oneisall Dog Grooming Vacuum BM3 comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty duration and coverage details. Keep your purchase receipt as proof of purchase for warranty claims.

9.2 Customer Support

For any questions, concerns, or technical assistance, please contact oneisall customer support. Our team is available to help you with product inquiries, troubleshooting, and warranty claims.

Contact Information:

Visit the official oneisall website for support resources:www.oneisall.com

Refer to your product packaging for specific customer service email or phone number.

Please have your product model (BM3) and purchase information ready when contacting support to expedite the process.

© 2024 oneisall. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0CVVWBXMT

More documents and user manuals: **https://manuals.plus/**